



# SNOWGRR OWNER'S MANUAL



Owner \_\_\_\_\_

Date Purchased \_\_\_\_ / \_\_\_\_ / \_\_\_\_

Model # SNWGR      SERIAL # \_\_\_\_\_

Revision 2 - 09/17

# TABLE OF CONTENTS

<b>PREFACE</b> .....	3
General Comments, Before Operation, Safety Alert Symbol, Parts and Service, Sound and Vibration.	
<b>SAFETY PRECAUTIONS</b>	
SAFETY STATEMENTS.....	4
GENERAL SAFETY PRECAUTIONS.....	4-5
EQUIPMENT SAFETY PRECAUTIONS.....	6
<b>INSTALLATION AND OPERATION</b>	
Assembly, Attaching, Warning.....	7
Detaching.....	7
Operation.....	7
Adjustments.....	7-8
<b>MAINTENANCE</b>	
End Auger Grease Fitting, Bearing Mounts.....	9
Center Auger Grease Fitting.....	10
Motor End Bearing Grease Fitting.....	10
<b>DECALS</b>	
Importance & Replacing Safety Decals.....	11
Rotating Parts Decal.....	12
Lock out power before servicing decal.....	12
<b>REPLACEMENT PARTS</b>	
Items #, Parts Name, & Parts Number.....	13-14

# PREFACE

## GENERAL COMMENTS

Congratulations on the purchase of your new product! This product was carefully designed and manufactured to give you many years of dependable service. Limited maintenance (mainly cleaning and lubricating) is required to keep it in top working condition. Always observe all maintenance procedures and safety precautions in this manual. Also be aware of any safety decals located on the product and on any equipment on which the attachment is mounted.

This manual has been designed to help you do a better, safer job. Read this manual carefully and become familiar with its contents.



**WARNING:** Never allow anyone to operate this unit without reading the “Safety Precautions” and “Operating Instructions” sections of this manual. When parking the machine, always choose hard level ground and set the parking brake prior to exiting the machine so the unit cannot roll.

Unless noted otherwise, right and left sides are determined from the operator’s control position when facing forward.

**NOTE:** The illustrations and data used in this manual were current (according to the information available to us) at the time of printing, however, we reserve the right to redesign and change the attachment as may be necessary without notification.

## BEFORE OPERATION

The primary responsibility for safety with this equipment falls to the operator. Make sure the equipment is operated only by trained individuals that have read and understand this manual. If there is any portion of this manual or function you do not understand, contact your local authorized dealer or the manufacturer to obtain further assistance. Keep this manual available for reference. Provide the manual to any new owners and/or operators.

## SAFETY ALERT SYMBOL



**WARNING:** This is the “Safety Alert Symbol” used by this industry. This symbol is used to warn of potential hazards that can cause serious injury or death. Be sure to read all warnings carefully, they are included for your safety and for the safety of others working with you.

## PARTS AND SERVICE

Use only manufacturer replacement parts. Aftermarket or substitute parts may not meet the required standards.

Record the model number of your unit on the cover of this manual. This will assist our parts department to insure that you receive the proper parts for your particular product.

## SOUND AND SERVICE

Sound pressure levels and vibration data for this attachment are influenced by many different parameters: some items are listed below (not inclusive):

- prime mover type, age, condition, with or without cab enclosure and configuration
- operator training, behavior, stress level
- job site organization, working material condition, environment

Based on the uncertainty of the prime mover, operator, and job site, it is not possible to get precise machine and operator sound pressure levels or vibration levels for this attachment.

## SAFETY STATEMENT



THIS SYMBOL BY ITSELF OR WITH THE WORD “WARNING” IN THIS MANUAL IS USED TO CALL YOUR ATTENTION TO INSTRUCTIONS THAT ARE VITAL TO YOUR PERSONAL SAFETY OR THE SAFETY OF OTHERS. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN INJURY OR DEATH.



**DANGER**

THIS SIGNAL WORD INDICATES A HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, WILL RESULT IN DEATH OR SERIOUS INJURY.



**WARNING**

THIS SIGNAL WORD INDICATES A HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, COULD RESULT IN DEATH OR SERIOUS INJURY.



**CAUTION**

THIS SIGNAL WORD INDICATES A HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, COULD RESULT IN MINOR OR MODERATE INJURY.

**NOTICE**

NOTICE IS USED TO ADDRESS PRACTICES NOT RELATED TO PHYSICAL INJURY.

## GENERAL SAFETY PRECAUTIONS

**WARNING!**

### **READ MANUAL PRIOR TO INSTALLATION**

Improper installation, operation, or maintenance of this equipment could result in serious injury or death. Operators and maintenance personnel should read this manual, as well as all manuals related to this equipment and the prime mover thoroughly before beginning installation, operation, or maintenance. **FOLLOW ALL SAFETY INSTRUCTIONS IN THIS MANUAL.**



### **READ AND UNDERSTAND ALL SAFETY STATEMENTS**

Read all safety decals and safety statements in all manuals prior to operating or working on this equipment. Know and obey all OSHA regulations, local laws, and other professional guidelines for your operation. Know and follow best work practices when assembling, maintaining, repairing, mounting, removing, or operating this equipment.



### **KNOW YOUR EQUIPMENT**

Know your equipment’s capabilities, dimensions, and operations before operating. Visually inspect your equipment before you start, and never operate equipment that is not in proper working order with all safety devices intact. Check all hardware to ensure it is tight. Make certain that all locking pins, latches, and connection devices are properly installed and secured. Remove and replace any damaged, fatigued, or excessively worn parts. Make certain all safety decals are in place and are legible. Keep decals clean, and replace them if they become worn or hard to read. **Contact Berlon or your dealer if you need to replace decals.**



**WARNING!**



**DO NOT MODIFY MACHINE OR ATTACHMENTS**

Modifications of the attachment may weaken the structural integrity or impair the function, life expectancy, performance or safety of the attachment. If repairs are needed use only the manufacturer's original parts following manufacturer's instructions.

**WARNING!**



**LOWER OR SUPPORT RAISED EQUIPMENT**

Do not work under raised booms without supporting them. Do not use support material made of concrete blocks, logs, buckets, barrels, or any other material that could suddenly collapse or shift positions. Make sure support material is solid, not decayed, warped, twisted, or tapered. Lower booms to ground level or on solid material. Lower booms and attachments to the ground before leaving the cab or operator's station.

**WARNING!**



**PROTECT AGAINST FLYING DEBRIS**

Always wear proper safety glasses, goggles, or a face shield when driving pins in or out, or when any operation causes dust, flying debris, or any other hazardous material.

**WARNING!**



**SAFELY MAINTAIN AND REPAIR EQUIPMENT**

- Do not wear loose clothing or any accessories that can catch in moving parts. If you have long hair, cover or secure it so that it does not become entangled in the equipment.
- Work on a level surface in a well-lit area.
- Use properly grounded electrical outlets and tools.
- Use the correct tools for the job at hand. Make sure they are in good condition for the task required.
- Wear the protective equipment specified by the tool manufacturer.

**WARNING!**



**SAFELY OPERATE EQUIPMENT**

Do not operate equipment until you are completely trained by a qualified operator in how to use the controls, know its capabilities, dimensions, and all safety requirements. See your machine's manual for these instructions.

- Keep all step plates, grab bars, pedals, and controls free of dirt, grease, debris, and oil.
- Never allow anyone to be around the equipment when it is operating.
- Do not allow riders on the attachment or the prime mover.
- Do not operate the equipment from anywhere other than the correct operator's position.
- Never leave equipment unattended with the engine running, or with this attachment in a raised position.
- Do not alter or remove any safety feature from the prime mover or this attachment.
- Know your work site safety rules as well as traffic rules and flow. When in doubt on any safety issue, contact your supervisor or safety coordinator for an explanation.

## EQUIPMENT SAFETY PRECAUTIONS

### WARNING!



#### **WATCH OUT FOR UTILITIES**

Observe overhead electrical and other utility lines. Be sure equipment will clear them. When digging, call your local utilities for location of buried utility lines, gas, water, and sewer, as well as, any other hazard you may encounter.

### WARNING!



#### **OPERATING THE SNOWGRR**

- Do not exceed the lifting capacity of your prime mover.
- Operate only from the operator's station.
- When traveling on rough terrain, reduce speed to avoid "bouncing" the Snowgrr. Loss of steering may result.
- When operating on slopes, drive up and down, not across. Avoid steep hillside operation, which could cause the prime mover to overturn.
- Reduce speed when driving over rough terrain, on a slope, or turning, to avoid overturning the vehicle.
- An operator must not use drugs or alcohol, which can change his or her alertness or coordination. An operator taking prescription or over-the-counter drugs should seek medical advice on whether or not he or she can safely operate equipment.
- Before exiting the prime mover, lower the attachment to the ground, apply the brakes, turn off the prime mover's engine and remove the key.
- Never lift the lowest portion of the attachment plate higher than 5 feet above the ground.
- Do not lock the auxiliary hydraulics of your prime mover in the "ON" position.
- Do not use the top of this product as a step. Under certain conditions - this area can be slippery.

### WARNING!



#### **TRANSPORTING THE SNOWGRR**

- Travel only with the attachment in the center transport position to prevent uncontrolled movement.
- When transporting on a trailer: Secure attachment at recommended tie down locations using tie down accessories that are capable of maintaining attachment stability.
- When driving on public roads use safety lights, reflectors, Slow Moving Vehicle signs etc., to prevent accidents. Check local government regulations that may affect you.
- Do not drive close to ditches, excavations, etc., cave in could result causing serious injury or death.

# INSTALLATION AND OPERATION

## ASSEMBLY

Assemble the Snowgrr attachment according to the instructions provided in the video at <http://www.berlon.com/ProductDetails/tabid/99/ProductID/133/snowgrr-attachment/>.

## ATTACHING

Install attachment by following the instructions in your loader operator's manual for installation of an attachment. Two hydraulic hoses will need to be connected to the loader's hydraulic remote valve. The electrical plug will need to attach to the loader's power outlet.

## WARNING!



**MAKE SURE THAT THE ATTACHMENT IS SECURELY LATCHED TO THE ATTACHMENT MECHANISM OF YOUR LOADER. FAILURE TO DO SO COULD RESULT IN ATTACHMENT SEPARATION WHICH COULD LEAD TO SERIOUS INJURY OR DEATH.**

## DETACHING

 
With your machine on level ground, lower the arms of the loader making sure that the attachment is on the ground. Follow the loader operator's manual instructions for removing an attachment.

## OPERATION


- Run the loader's engine at idle to engage the hydraulic motor that drive's the auger. Make sure the auger is turning the correct direction where it auger's snow out the discharge end.
- Increase engine rpm to operating speed.
- Keep shoe parallel with the ground.
- Move forward at desired speed that allows for complete removal of snow.
- Raise the attachment when backing up.
- Reduce rpm to idle before disengaging remote hydraulic motor.

## ADJUSTMENTS


- The shoe and the cutting edge will wear over time. The shoe can be adjusted by removing the three bolts (A in the picture below) and reposition into the next hole. Adjustment is 1/4" per hole. Replace bolts and tighten.

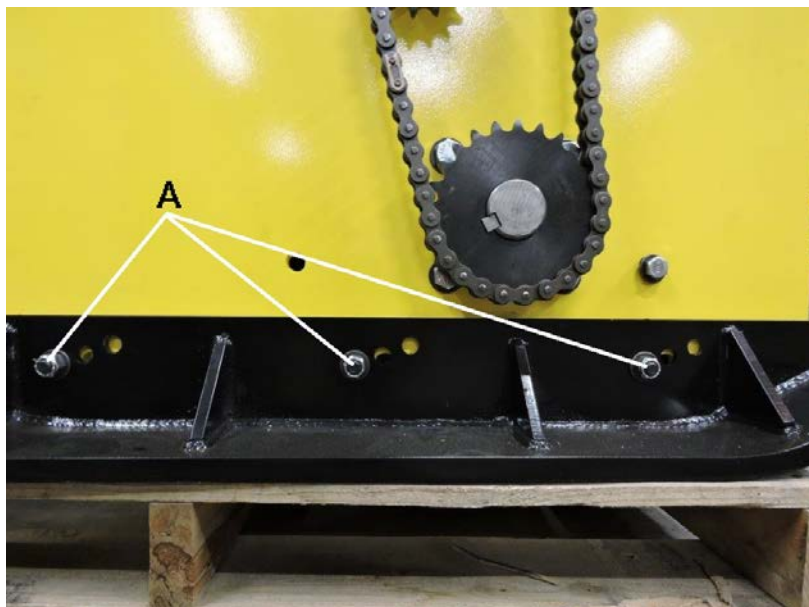

 - The drive chain may loosen over time and need to be adjusted. This is done by removing the motor end drive cover and loosen the bolt that holds the idle sprocket in place. (B in picture below) Adjust idle sprocket, re-tighten the bolt, and replace drive cover.

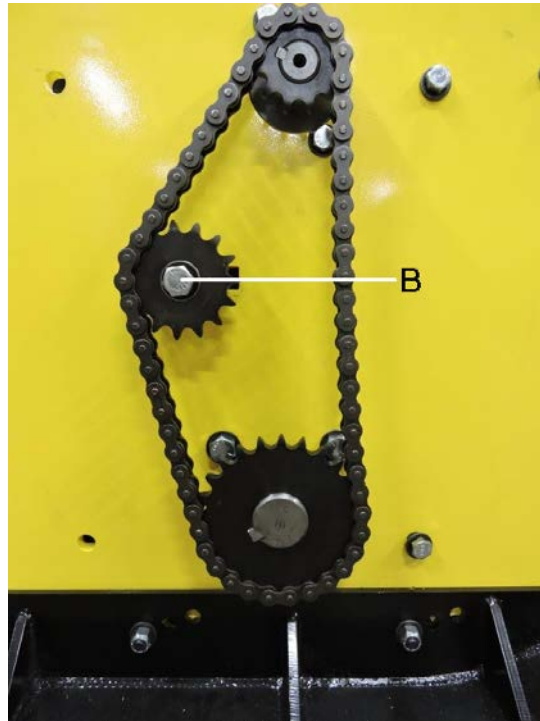

 
- The castor wheel (#10 below) should be adjusted by using the jack (#9 below) so that the castor wheel is even with the bottom of the cut edge during operation.

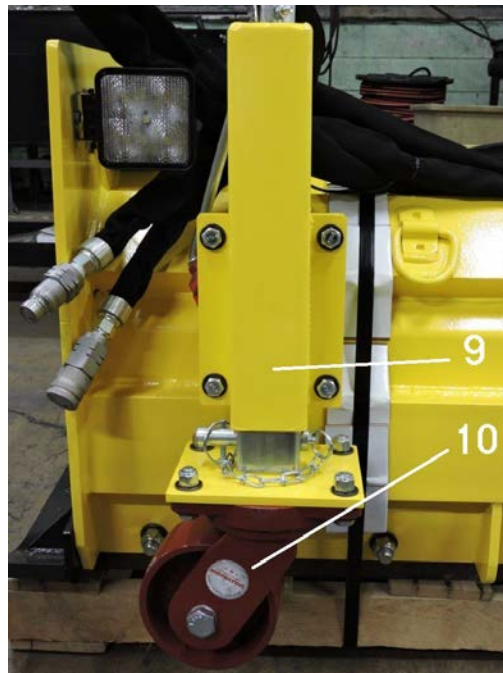




## MAINTENANCE

 Regular maintenance includes the greasing of the machine in three locations. Location (C) in the picture below shows the grease fitting for the end auger shaft bearings, as well as the tightening order for the bearing mounts.

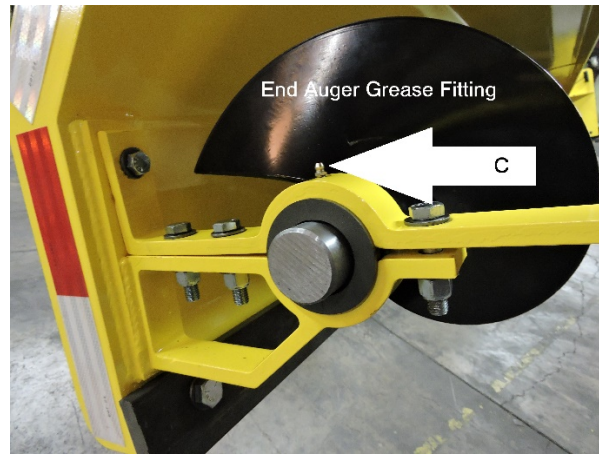

#13: Nylon Bearing  
Tighten bolts in order shown. Rear bolts should be tight.  
Tighten bolt 3 (outermost bolt) until the nylon bearing starts to compress.

 Location (D) in the picture below shows the grease fitting of the center auger shaft bearings.

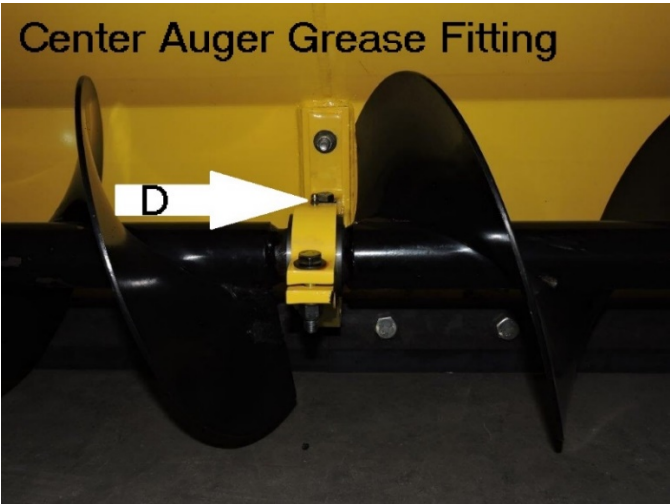

Location (E) in the picture below shows the grease fitting of the auger shaft bearing on the motor end plate.




# DECALS

The diagrams on the following page show the location of the decals used on your attachment. To the right of the diagram is the expansion of the actual decal. Be sure to read all decals before operating the attachment. The decals contain information you need to know for both safety and product longevity. Contact your local dealer for model number and logo decals if replacement is needed.


**IMPORTANT:** Keep all safety decals clean and legible. Replace all missing, illegible, or damaged safety decals. When replacing parts with safety decals attached, the safety decals must also be replaced. Safety decals are available, free of charge, from your local dealer or Berlon Industries, LLC.

 **REPLACING SAFETY DECALS:** Clean the area of application with nonflammable solvent, then wash the same area with soap and water. Allow the surface to fully dry. Remove the backing from the safety decal, exposing the adhesive surface. Apply the safety decal to the position shown in the diagram above and smooth out any bubbles.

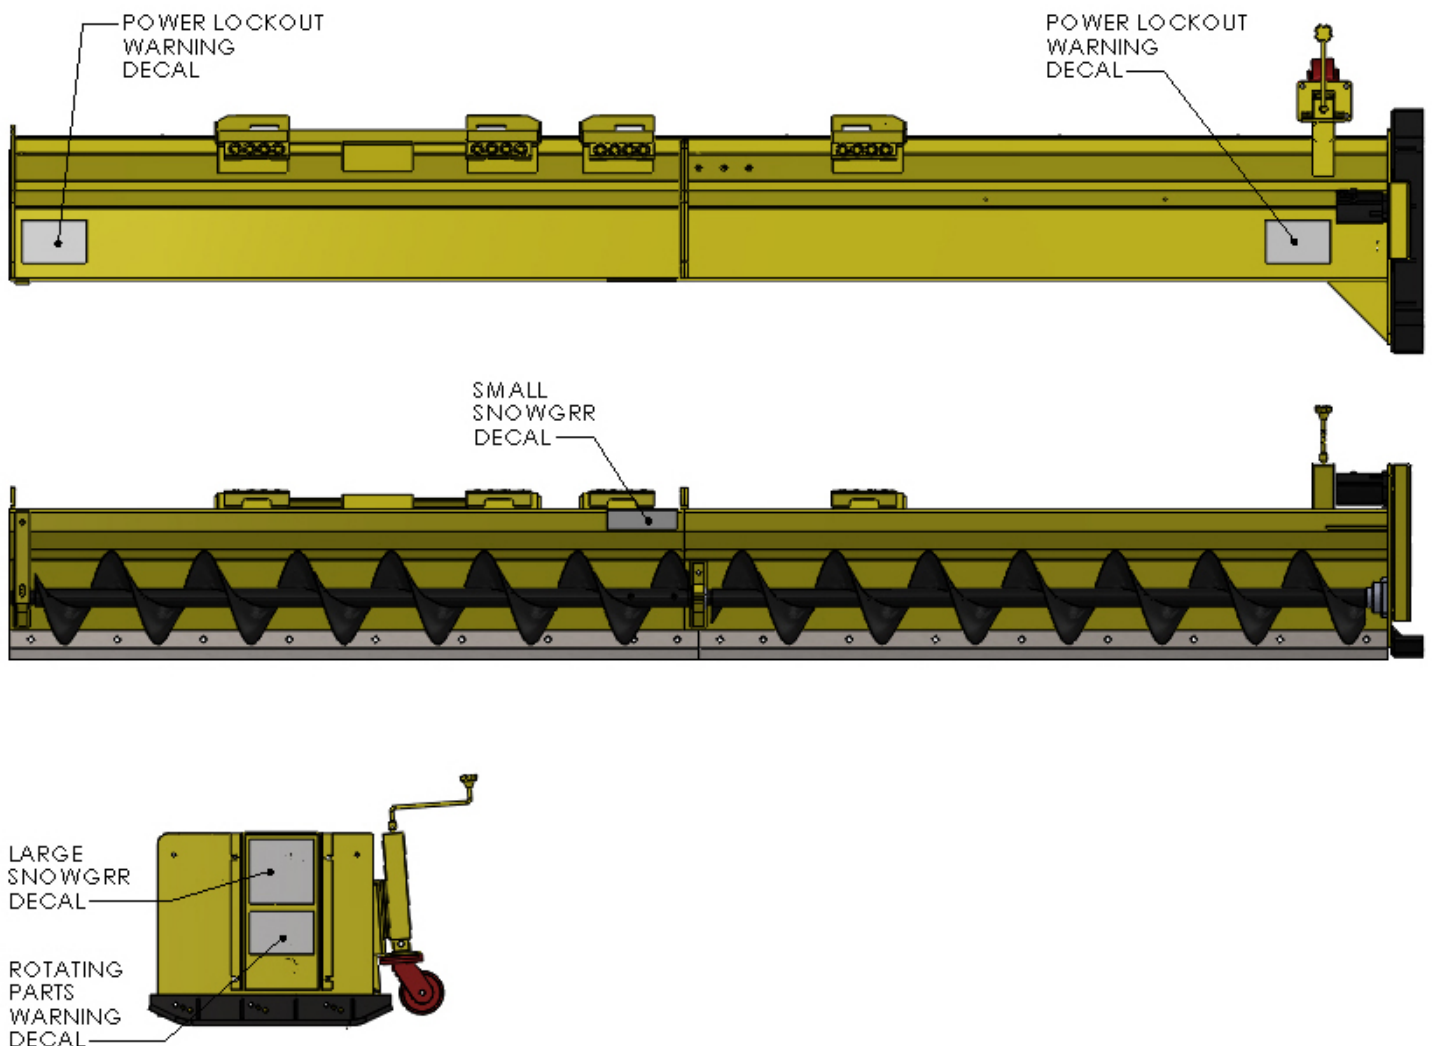

### Rotating Parts Decal:

 Rotating and moving parts are found within.  
Keep hands, limbs, and clothing away from rotating parts.  
Power off equipment and lock out when servicing.  
Failure to follow warnings could result in injury or death.

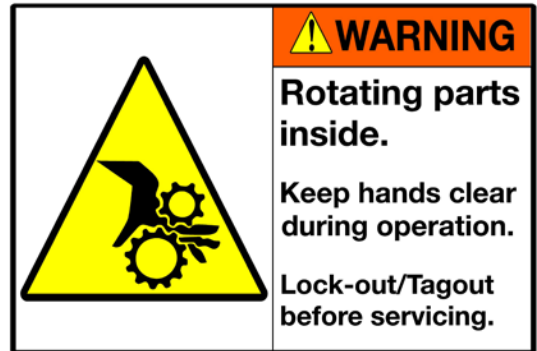


### Lock out power before servicing decal:


Rotating auger is exposed. Keep clear at all times.  
Power off equipment and lock out when servicing.  
Failure to follow warnings could result in injury or death.



 
## REPLACEMENT PARTS

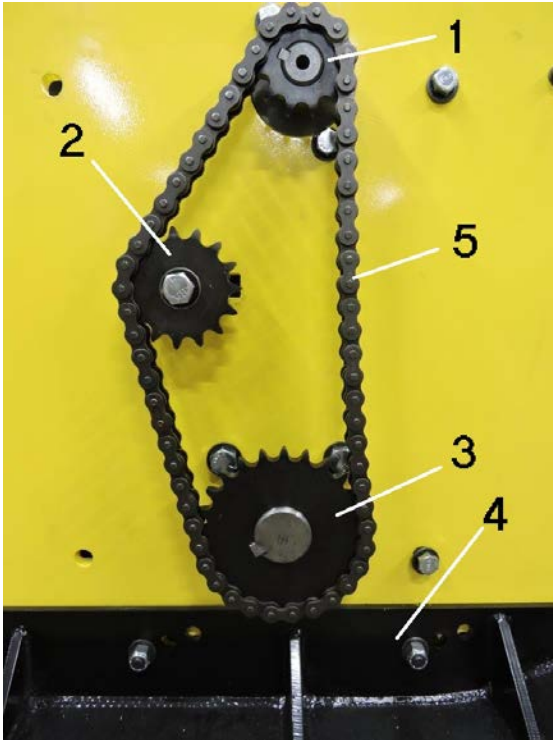


Item #	Part Name	Part Number
1	Small Sprocket	510-0044
2	Idler Sprocket	510-0042
3	Large Sprocket	510-0045
4	Shoe	8001210
5	Chain	510-0043

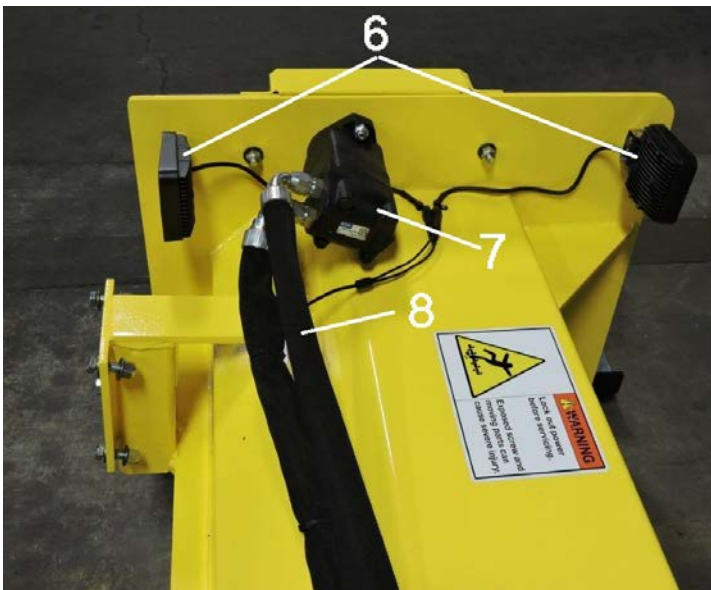 


Item #	Part Name	Part Number
6	Lights	570-0001
	Light wire harness, switch & plug	
	Vehicle Power Adapter	570-0002
	In-line switch	570-0003
	Compact Power Supply 1 to 2 Splitter Cable	570-0004
	Female Standard 5mm Connector to Screw Terminal Adapter	570-0005
	: 3m Extension Power Cable	570-0006
7	Hydraulic Motor	570-0007
8	Hoses & Couplers	580-0012

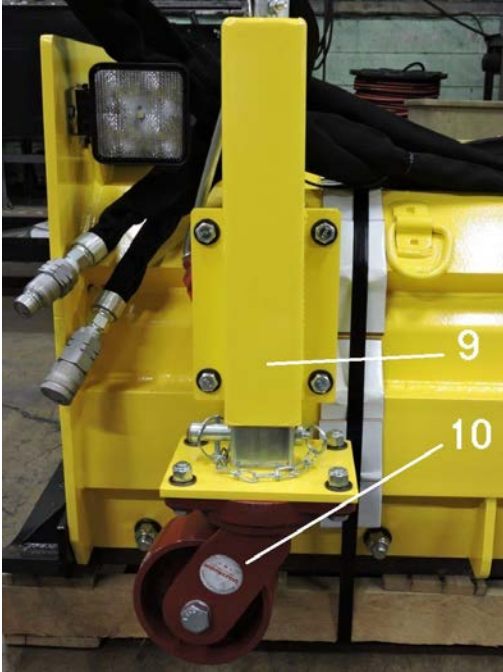 

Item #	Part Name	Part Number
9	Jack Assembly	510-0002
10	Caster Wheel	510-0001

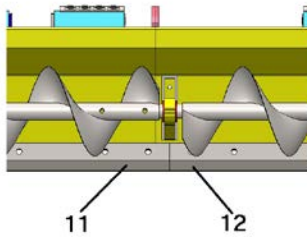 

Item #	Part Name	Part Number
11	Auger End Cut Edge	8001228-A
12	Motor End Cut Edge	8001228-M

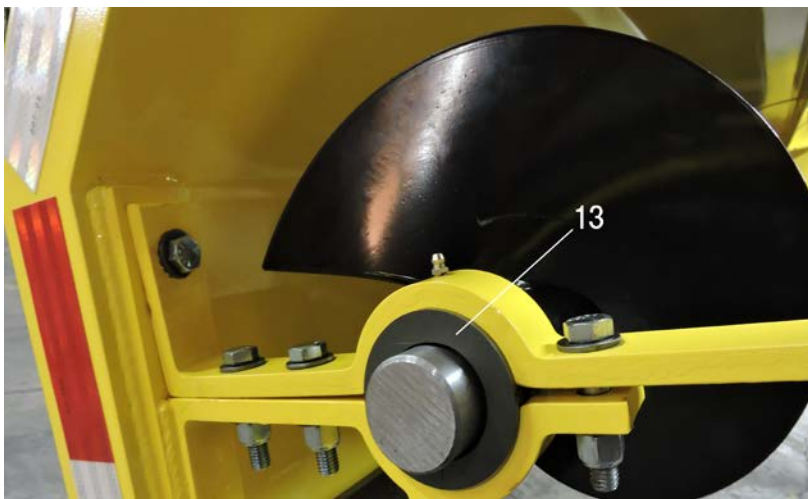 

Item #	Part Name	Part Number
13	Nylon Auger Bearing	510-0040