

WATER FOUNTAIN

READ BEFORE YOU START

Please identify and sort all components shown below.

For any issues during installation, please ask for assistance at service@happyandpolly.com or check our You-Tube Channel https://www.youtube.com/channel/UCbPD98rZ-jOYrTCQA_0eNLg.

• When using electrical appliances, basic safety precautions must always be followed to avoid the risk of fire,


- electric shock, and/or injury to persons.
- To avoid the risk of injury, close supervision is necessary when any appliance is used by or near children.
- To protect against electric shock, do not place the electrical power cord or plug in water or other liquids.
- Indoor household use only. Do not use outdoors or run dry.

 
SAFETY GUIDELINES TO PREVENT INJURIES


- Unplug the fountain, then disconnect the in-line plug.
- To avoid the risk of electric shock, do not place or store an appliance where it can fall or be pulled into a bathtub or sink. • Always unplug an appliance when it is not in use, before putting on or taking off parts, and before cleaning.
- Do not use an appliance for anything other than its intended use.
- Do not allow pets to chew on or swallow any parts. If you are concerned about the power cord, purchase a cord conduit (a hard plastic protector) at any hardware store.
- Do not attempt repairs on the pump.
- To avoid the possibility of the plug or electrical outlet getting wet, the electrical outlet should always be above the level of the fountain.
- If an extension cord is necessary, an extension cord with a proper rating should be used.


IMPORTANT

- Please identify and sort all components shown below. • Only rinse the filter with water. Never wash the filter with soapy water as the soap residue will seep into the
- filter permanently. • Use replacement filters authorized by Happy & Polly only. Using unauthorized filters may void the warranty.

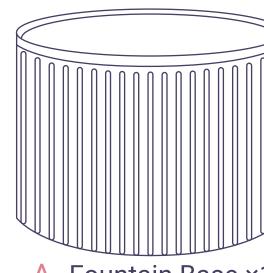




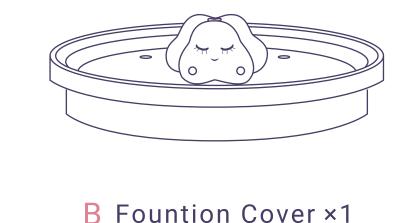


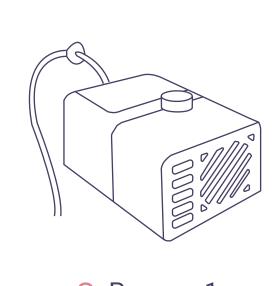


C Pump×1

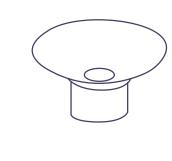




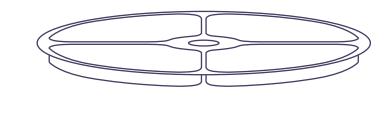


E Filter ×1

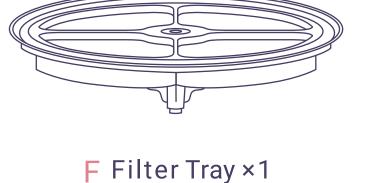



ASSEMBLY INSTRUCTIONS

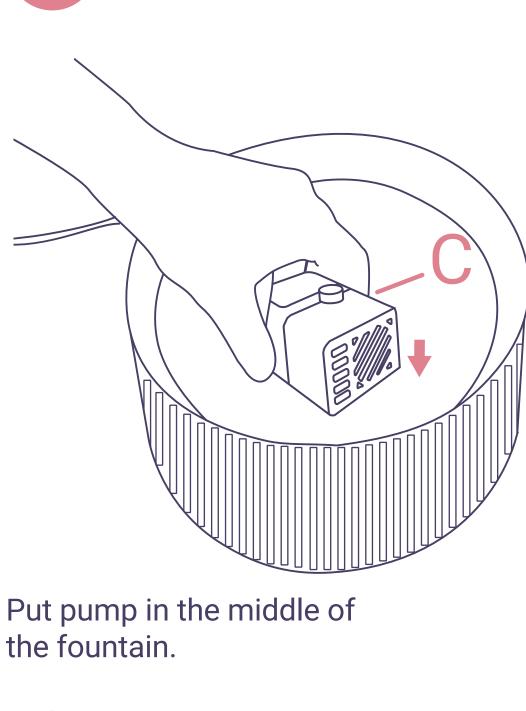




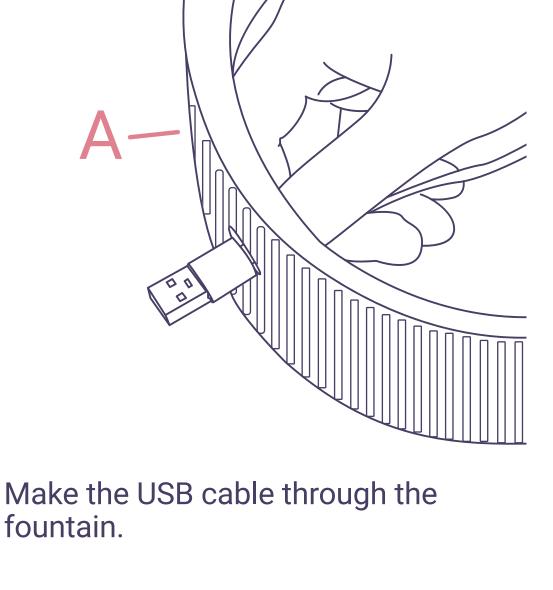

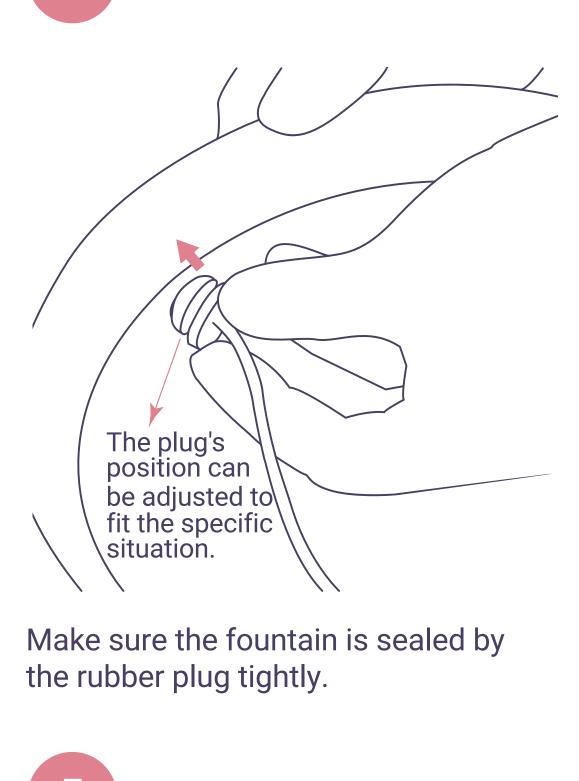

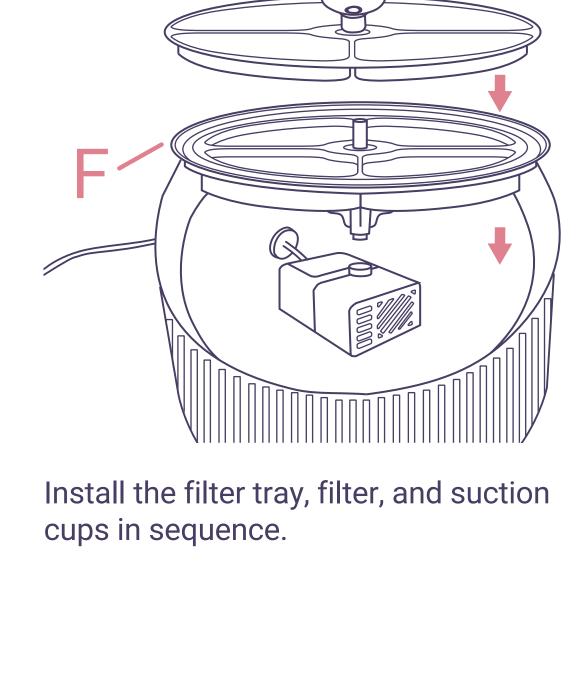

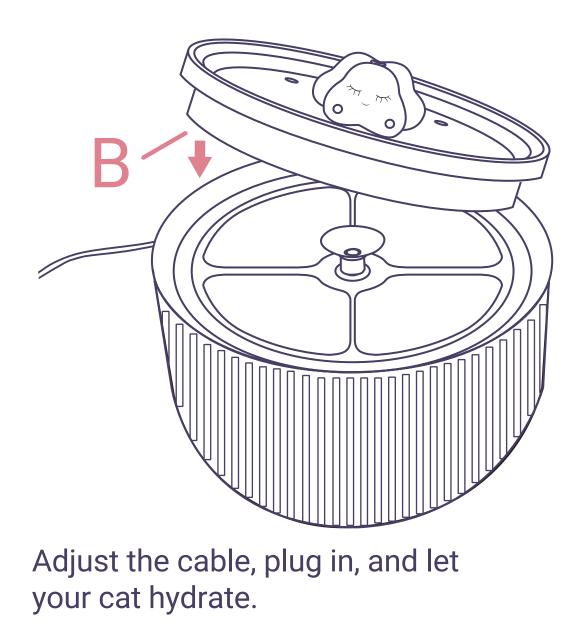

CARE INSTRUCTION: · When using for the first time, please rinse the filter box for 2 minutes to flush out impurities caused by collision. · Clean the Water Fountain every 7 days.

· To achieve the ideal filtering effect, it is recommended to replace the filter box once a month.

www.happyandpolly.com