## MACALLY BLSLIMKEYPROSG Introduction **BACKLIT WHITE LED USB WIRED KEYBOARD FOR MAC** you to increase your productivity! User's Guide Package Contents USB Keyboard User's guide Macally Product Information **Technical Support** MACALLY \_\_\_\_ Please E-mail us at techsupport@macally.com, In U.S.A. please call 1-909-230-6888 Mon-Fri 8:30 AM - 5:30 PM, Pacific Standard Time FAQ & help - https://help.macally.com/help Manual and driver download https://us.macally.com/pages/drivers-and-downloads www.macally.com 270.0 mm Keyboard Setup Assistant for Mac Keyboard Setup Assistant Introduction In Mac, the first time you plug in this new keyboard to use, desktop will pop out a "Keyboard Setup Assistant" window, Please follow Your keyboard cannot be identified and will not be usable until it is identified. To identify this keyboard click Continue. the on-screen instruction to identify the keyboard before you can use the keyboard correctly. If your keyboard is working properly and you have an additional USB input device connected to your computer that is not a keyboard, you After initial setup, if you experience any issue with keyboard or can skip this step. couldn't type correctly, please unplug and replug the keyboard, open keyboard icon in System Preferences, click on "Change Keyboard Type" icon to run Keyboard Setup Assistant to re-identify the keyboard. Delay Until Repeat Long Irn off when computer is not used for: F4 Launchpad Shortcut Setup for Mac secs 10 secs 30 secs 1 min 5 mins Neve Show Keyboard, Emoji, & Symbol Viewers in menu bar 1. After the keyboard is plugged into your Mac, all shortcuts in the Set Up Bluetooth Keyboard... Modifier Key

The Macally BLSLIMKEYPROSG is a stylish backlit USB wired keyboard, especially designed for Mac. It has 107 full size, thin and quiet Scissor-Key-Switch™ tactile keycaps for a sensitive and responsive touch. It also has 16 convenient preset shortcut keys for one-touch control of your Mac applications. The slim BLSLIMKEY-PROSG is a perfect match for your computer as it will greatly help

0	
	Continue

keyboard should work automatically except F4 Launchpad, which requires a quick setup before working. Please open System

### Warranty

use

### Limitation of Liability

Copyright® 2021 by Macally Peripherals

### System Requirement

Mac OS X 10.6 to 11 and above

Preferences, click to open Keyboard icon, go to Shortcuts tab. Highlight the first line, Launchpad & Dock in the left pane, make sure or click on "Restore Defaults" button to see "none" in the field of "Show Launchpad" line to begin, then check to enable "Show Launchpad". When a blank field shows highlighted, from Macally keyboard, type and hold down 3 keys simultaneously, "control", "shift" and forward slash "/". 3 key symbols are recorded in the line of "Show Launchpad" as shown below, you may try pressing F4 Launchpad shortcut key now.

System Preferences
••• < >
Kashaand
Keyboard
To change a shortcut, selec
Launchpad & Dock
🔲 Display
Mission Control
Keyboard
Input Sources
Screenshots
Services
Spotlight
Accessibility
A App Shortcuts
fn Function Keys
_
🗹 Use keyboard navigatior
Press the Tab key to move f

# Macally Product Information

Macally peripherals warrants that this product will be free from defects in title, materials and manufacturing workmanship for two year from the date of purchase. If the product is found to be defective then, as your sole remedy and as the manufacturer's only obligation, Macally will repair or replace the product. This warranty shall not apply to products that have been subject to abuse, misuse, abnormal electrical or environmental conditions, or any condition other than what can be considered as normal

The liability of Macally Peripherals arising from this warranty and sale shall be limited to a refund of the purchase price. In no event shall Macally Peripherals be liable for costs of procurement of substitute products or services, or for any lost profit, or for any consequential, incidental, direct or indirect damages, however caused and on any theory of liability, arising from this warranty and sale. These limitations shall apply not with standing any failure of essential purpose of any limited remedy.

Any desktop and notebook computer with a USB port available

	View	Window	Help	La J	((;-	*	<b>(</b> )	100% 🛃	Wed :
		Keyboard	k			C	ζ Sea	rch	
Tex	t Sh	ortcuts	Input Sou	rces	Dict	tatio	n		
t, cli	ck the k	ey combin	ation, and	then t	tvpe t	he n	ew ke	evs.	
		Dock Hidir						\\ \\ \ \ \ \ \ \ \ \ \ \ \ \ D	
	Show	v Launchpa	d					^☆/ ↑	
		3-k	ey com	bina	tion,	, co	ntro	l+shift+/	
							Resto	ore Defaults	
							Resto	ore Defaults	
							Resto	ore Defaults	
		s between		e back	word		Resto	ore Defaults	
		s between I Shift Tab to		s backy	ward.		Resto	ore Defaults	
									2
								yboard	?
									?

### **Hardware Basics**



2. When setup is done correctly, by pressing F4 Launchpad shortcut key you will get the Launchpad screen as below.



### Shortcut Keys

Shortcut mode - Shortcut mode (when Fn Lock LED indicator is off) is the default mode in Mac. You can press fn and esc together to toggle to Function key mode (when Fn Lock LED indicator is on). Press fn and esc keys together again to toggle back to Shortcut mode.

<u>☆.</u> ☆	Brightness change to built-in display	•	Mute
80	Mission Control	()	Volume Down
	Launchpad	∢)))	Volume Up
s <u>***</u> r	Keyboard backlight dims, last level is off		Eject for Mac
<u>\''</u> >	Keyboard backlight brighens up		Print
	Previous Track	0	Full screen capture
►II	Play/Pause	0]	Area screen capture
	Next Track		File save

### More about mode

In either Shortcut mode or Function key mode, one can also press "fn" key with one of top row key simultaneously to perform the secondary function without switching mode.

www.macally.com

# Front

Peripherals Printing Spec 印刷規格			
<b>Materials Spec:</b> 用料规格:	<b>105G</b> 双铜纸		
INKS 顏色油料: Color Printing 色印刷:	● 単黑		
Additional Process: 额外加工:	🗐 8 页翻身折		
Note備註:			