
EPHOTOINC HEAT PRESS USER'S GUIDE

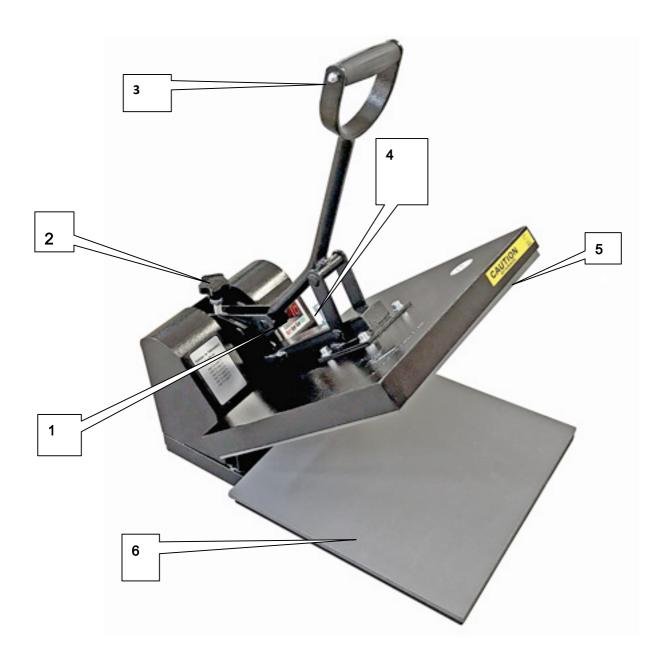

- 1. Time & Control box
- 2. Pressure Knob
- 3. Handle
- 4. On/Off switch
- 5. Heat platen
- 6. Silicon pad

WARNING:

- 1. DON'T leave the machine unattended while it is plugged in or Hot
- 2. DON'T TOUCH hot surface above heat platen
- 3. DON'T pull plug to disconnect
- 4. DON'T allow cord to touch hot surfaces
- 5. Allow heat press to cool completely before storing or transport.
- 6. Do not operate machine if the cord is damaged.
- 7. Keep children away from the machine.

OPERATION INSTRUCTIONS:

- 1. Be sure to operate with safe ground wire
- 2. The correct voltage is 110-120v
- 3. Turn off the machine when not in use
- 4. Hold the handle firmly when opening
- 5. Keep children away from the machine
- 6. Use heat press only for its intended use
- 7. Allow 15-20 minutes for the machine to heat to desire temp

Specifications:

Voltage: 110V-120V

Power: 1500W/1800W

Temperature range: 0 - 500 degrees Fahrenheit

Timing: 0-999 Sec

Working area: 15" x 15" or 38X38CM

Size of package: 29" x 18" x 15"

Weight: 24 KGS

Instructions for setting temp and time:

- 1: Plug in and turn on the power switch
- 2: Press "TEMP" once, last digit will blink
- 3: Press Up or Down Arrow to set desire temp then Press "TEMP" to set
- 4: Press "Time" once last digital will blink
- 5. Press Up or Down arrow to set time by pressing "Time" again

Recommended Temperature and time for heat transfer:

Cotton: 350°F, 25-35 seconds

Ceramic tiles: 400 °F, 180 seconds

Polyester: 350 °F, 15 seconds

Washing & caring for T-shirt:

1. Do not wash transferred shirt within 24 hours

- 2. Don't rub the print on Shirt
- 3. The washing temperature should be warm
- 4. Do not use washer and dry for the T shirt

NOTE** If you apply too much pressure, the machine will not lock. Turn the pressure

knob counter clock wise to reduce pressure

Warranty Duration

There is a 90 day warranty on major components, circuit boards and all other components.

Prior to the 30 days, the shipping label will be provided by EPHOTOINC. EPHOTOINC cannot be held responsible for improper handling or any other damage incurred in transit. No charge will be made for labor and components for repair of in-warranty equipment. OUT-OF WARRANTY machines will be charged at the repair rates in effect at the time the machine is received plus all shipping charges sending to us and back to the customers.