Quick Access Controller

Button Operation:

press and hold On/Off:

Change Auto Program:

will be announced and start Short press; new program



Dial Operation:

Turn left or right to recline or incline

Sounds

Home/Sounds

Sound > Select from Nature sounds

Volume > Set volume level

BEEP > Set to OFF to stop sounds from remote

set to ON prior to selection the sound choice. To play Nature Sounds, Bluetooth must remain

Chromotherapy

Home/Lights

Themes > Select light in programs

Solid - Single color light

brightens in repetition Breathe - Single color that dims, then

level - gradual brightness Wake up: Blue enriched lights to boost energy

waves – gradual darkening Wind down - Colors of sunset absent blue

morphing into each other Multi-wave - All the colors of the rainbow

Multi-rotate – Colors rotate from one to

Intelligent Voice Commands

within 5 seconds, or you will have to re-actvate the you've activated voice control, give a command Use the voice control commands below. (Once

"Switch to Voice Mode" To Active Voice Mode say

- ➤ Power On
- ➤ Switch Off
- Activate Massage
- Sports Refresh
- Extension
- Rest & Sleep
- Working Relief
- ➤ Neck & Shoulder
- Waist & Spine
- Deep Shiatsu

Healthy Breath

- Massage Extend
- Relaxation
- ➤ Air Bag Massage
- ➤ Demo
- Zero Gravity
- ➤ Start Heat
- ➤ Heat Off

NFINITY®

72 Start Road, Seabrook, NH 03874 www.infinitymassagechairs.com 603-910-5000

NFINITY®

Quick Start Guide



Multi-Functional Screen —
Use the directional buttons below to navigate these menu screens. Then

press ok to select

Power — Powers up the remote or returns the chair to the exit position and powers down remote

Home — Shortcut to the home page of all menu screens


OK — After navigating to the command desired on the display, push OK to select.

Zero Gravity — Press for Zero Gravity 1, press again for Zero Gravity 2, press again to restore to recline

Foot Roller — Press to turn off Foot Roller, press again to resume Foot Roller

Footrest — Press and hold up arrow to bring foot rest up, Press and hold down arrow to bring footrest down

Leg Length — Press and hold right arrow to extend the leg length adjustment, press and hold the left arrow to retract the leg length adjustment

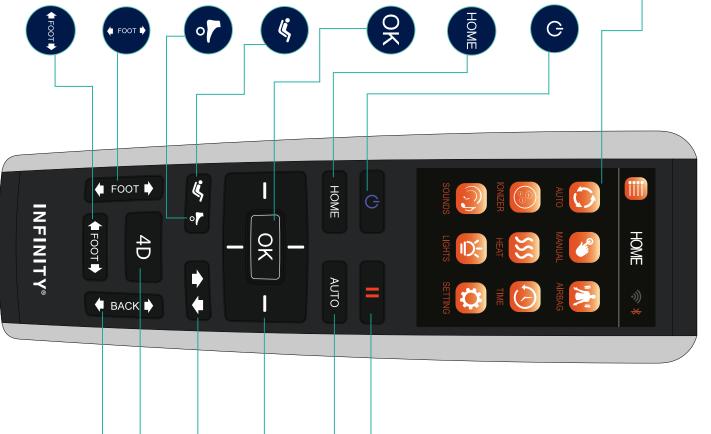



In-Use Screen:

After a massage program is selected displays all settings to that program

Pause — Press pause to immediately stop all massage chair activity, press again to resume

Auto — Shortcut to the Auto Programs menu screen

AUTO

Directional Button — Press up, down, left or right to navigate the display screen

Back Adjustment — Back mechanism position adjustment; press and hold up to raise, press and hold down to lower. Use during initial body scan fine tuning or in manual partial or point zone mode

4D — Press to increase or decrease 4D intensity of back mechanism. In-use screen displays intensity dial

4D

Seat Back Position — Press and hold down arrow to recline the seat back, press and hold the up arrow to upright the seat back

BACK