

Assortment includes the following sizes and quantities.

Catalog #	Description	Size in Millimeters	Size in 32nds	Assortment Quantity
PR-207M 7	Saxophone Pad - plain (no resonator)	7.0	9/32	5
PR-207M 8	Saxophone Pad - plain (no resonator)	8.0	10/32	5
PR-207M 9	Saxophone Pad - plain (no resonator)	9.0	11/32	5
PR-207M 9.5	Saxophone Pad - plain (no resonator)	9.5	12/32	3
PR-207M 10	Saxophone Pad - plain (no resonator)	10.0	13/32	3
PR-207M 11	Saxophone Pad - plain (no resonator)	11.0	14/32	3
PR-207M 12	Saxophone Pad - plain (no resonator)	12.0	15/32	3
PR-207M 12.5	Saxophone Pad - plain (no resonator)	12.5	16/32	3
PR-207M 13.5	Saxophone Pad - plain (no resonator)	13.5	17/32	3
PR-207M 14.5	Saxophone Pad - plain (no resonator)	14.5	18/32	3
PR-207M 15	Saxophone Pad - plain (no resonator)	15.0	19/32	3
PR-210M 16	Saxophone Pad - Selmer style plastic resonator	16.0	20/32	5
PR-210M 16.5	Saxophone Pad - Selmer style plastic resonator	16.5	21/32	5
PR-210M 17.5	Saxophone Pad - Selmer style plastic resonator	17.5	22/32	5
PR-210M 18.5	Saxophone Pad - Selmer style plastic resonator	18.5	23/32	5
PR-210M 19	Saxophone Pad - Selmer style plastic resonator	19.0	24/32	5
PR-210M 20	Saxophone Pad - Selmer style plastic resonator	20.0	25/32	3
PR-210M 20.5	Saxophone Pad - Selmer style plastic resonator	20.5	26/32	3
PR-210M 21.5	Saxophone Pad - Selmer style plastic resonator	21.5	27/32	3
PR-210M 22	Saxophone Pad - Selmer style plastic resonator	22.0	28/32	3
PR-210M 23	Saxophone Pad - Selmer style plastic resonator	23.0	29/32	5
PR-210M 24	Saxophone Pad - Selmer style plastic resonator	24.0	30/32	5
PR-210M 24.5	Saxophone Pad - Selmer style plastic resonator	24.5	31/32	5
PR-210M 25.5	Saxophone Pad - Selmer style plastic resonator	25.5	32/32	5
PR-210M 26	Saxophone Pad - Selmer style plastic resonator	26.0	33/32	5
PR-210M 27	Saxophone Pad - Selmer style plastic resonator	27.0	34/32	3
PR-210M 28	Saxophone Pad - Selmer style plastic resonator	28.0	35/32	3
PR-210M 28.5	Saxophone Pad - Selmer style plastic resonator	28.5	36/32	3
PR-210M 29.5	Saxophone Pad - Selmer style plastic resonator	29.5	37/32	5
PR-210M 30	Saxophone Pad - Selmer style plastic resonator	30.0	38/32	5

Catalog #	Description	Size in Millimeters	Size in 32nds	Assortment Quantity
PR-210M 31	Saxophone Pad - Selmer style plastic resonator	31.0	39/32	3
PR-210M 32	Saxophone Pad - Selmer style plastic resonator	32.0	40/32	3
PR-210M 32.5	Saxophone Pad - Selmer style plastic resonator	32.5	41/32	3
PR-210M 33.5	Saxophone Pad - Selmer style plastic resonator	33.5	42/32	5
PR-210M 34	Saxophone Pad - Selmer style plastic resonator	34.0	43/32	5
PR-210M 35	Saxophone Pad - Selmer style plastic resonator	35.0	44/32	3
PR-210M 36	Saxophone Pad - Selmer style plastic resonator	36.0	45/32	3
PR-210M 36.5	Saxophone Pad - Selmer style plastic resonator	36.5	46/32	3
PR-210M 37.5	Saxophone Pad - Selmer style plastic resonator	37.5	47/32	3
PR-210M 38	Saxophone Pad - Selmer style plastic resonator	38.0	48/32	3
PR-210M 39	Saxophone Pad - Selmer style plastic resonator	39.0	49/32	5
PR-210M 40	Saxophone Pad - Selmer style plastic resonator	40.0	50/32	5
PR-210M 40.5	Saxophone Pad - Selmer style plastic resonator	40.5	51/32	5
PR-210M 41.5	Saxophone Pad - Selmer style plastic resonator	41.5	52/32	5
PR-210M 42	Saxophone Pad - Selmer style plastic resonator	42.0	53/32	2
PR-210M 43	Saxophone Pad - Selmer style plastic resonator	43.0	54/32	2
PR-210M 43.5	Saxophone Pad - Selmer style plastic resonator	43.5	55/32	2
PR-210M 44.5	Saxophone Pad - Selmer style plastic resonator	44.5	56/32	2
PR-210M 45	Saxophone Pad - Selmer style plastic resonator	45.0	57/32	2
PR-210M 46	Saxophone Pad - Selmer style plastic resonator	46.0	58/32	2
PR-210M 47	Saxophone Pad - Selmer style plastic resonator	47.0	59/32	2
PR-210M 47.5	Saxophone Pad - Selmer style plastic resonator	47.5	60/32	2
PR-210M 48.5	Saxophone Pad - Selmer style plastic resonator	48.5	61/32	2
PR-210M 49	Saxophone Pad - Selmer style plastic resonator	49.0	62/32	2
PR-210M 50	Saxophone Pad - Selmer style plastic resonator	50.0	63/32	2
PR-210M 51	Saxophone Pad - Selmer style plastic resonator	51.0	64/32	2
PR-210M 51.5	Saxophone Pad - Selmer style plastic resonator	51.5	65/32	2
PR-210M 52.5	Saxophone Pad - Selmer style plastic resonator	52.5	66/32	2
PR-210M 53	Saxophone Pad - Selmer style plastic resonator	53.0	67/32	2
PR-210M 54	Saxophone Pad - Selmer style plastic resonator	54.0	68/32	2
PR-210M 55	Saxophone Pad - Selmer style plastic resonator	55.0	69/32	2

Total number of pads: 208