



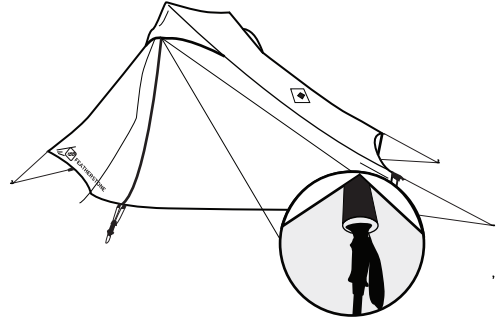


## Tent Assembly Instructions

### Backbone Trekking Pole Tent

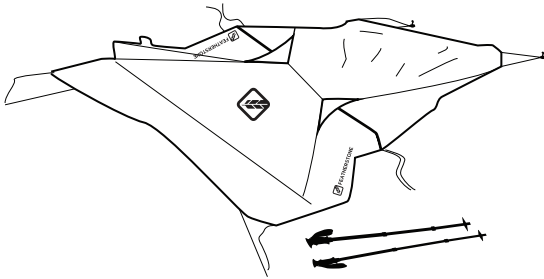


1. Unfold the tent and secure each of the four corners with stakes.
2. Adjust the height of the trekking poles to your preferred setting, within the range of 135-150 cm.

1. Place the poles into the pole pocket with the handle end first. If necessary, you can unzip the vestibule to access the pole pocket.
2. Depending on your trekking poles, insert the pointed end into the grommet or the blunt end into the nylon cord loop.
3. To stabilize the tent and prevent the mesh from sagging, take the cord located near the door and loop it around the trekking pole.

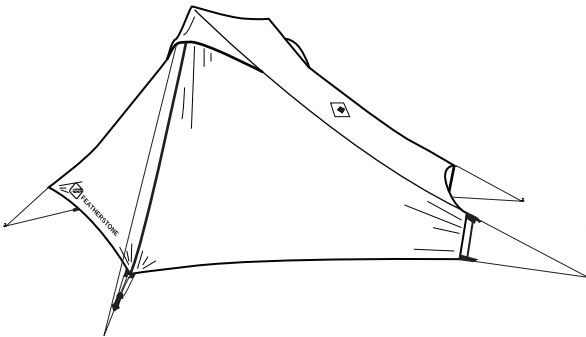

1. Use stakes to secure both vestibules of the tent.
2. Taut out the vent of the tent with the stakes used for the vestibules.
3. Adjust the tension of all sides of the tent to ensure that it is taut.

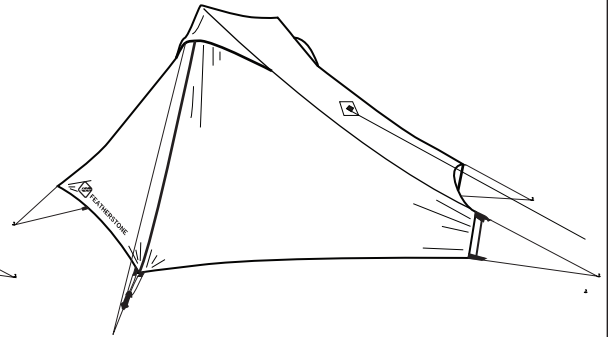

1. Optional: Stake out the midsection of the tent for added security from strong winds.