



HOW TO RE-SYNC YOUR REMOTE

BLINK S2, BLINK S-R, AND BLINK QU4TRO

Your board must be powered on throughout the entire remote pairing process.

1

Turn on your board.

2

Switch on your remote.

3

After turning on the board, hold the power button for 10 seconds

4

Open the battery case of the remote and use a pen tip or similar sized tool to push the silver button once.

5

Once remote is paired, the blue LED light on the top of the remote will flash rapidly.

6

Check the connection by pushing the throttle forward. The wheel should speed up and you're ready to ride!