

CONTOUR

ROAM3

WATERPROOF HD ACTION CAMERA

USER MANUAL

NOR

 
 
 
 
CONTOUR

INNHOOLD

HURTIG START VEILEDNING	2
KAMERA OVERBLIKK	2
OPPSETT/INNSTILLINGER	3
FORHOLDSREGLER OG GARANTI	4
KONTAKT	5



HURTIG START

1. Skyv deksellåsen til venstre, inntil det røde ikonet ikke lenger kan ses.
2. Skyv dekselet til siden for å åpne.
3. Sett microSD-kortet i.
4. Lukk dekselet.
5. Skyv deksellåsen til høyre for å låse den.
6. Skyv Opptak-skyveknappen frem for at ta opp. Skyv den tilbake for å stoppe opptaket.
7. Hold statusknappen inne i 3 sekunder for å gå til fotomodus (stillbilder)

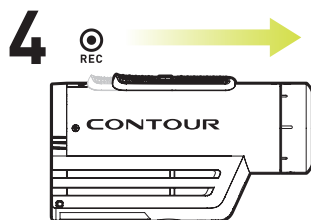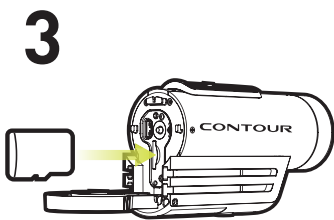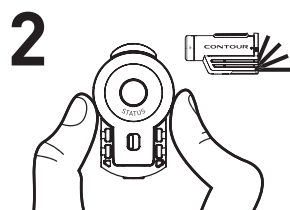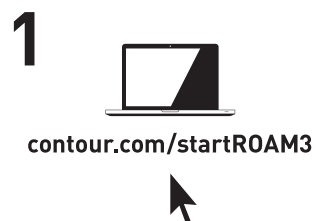

KAMERAFUNKSJONER

A Opptaksstatus	G Statusknapp	M Hukommelsesstatus
B Opptak-skyveknapp	H Nullstillingsknapp	N Batteristatus
C Opptak-skyveknapp Lås	I USB	O Fotostatus
D Dreibart objektiv	J MicroSD-kortplass	P 1-2-opptaksknapp
E Laserlinje	K Kortformateringsknapp	
F Mikrofon	L Deksellås	

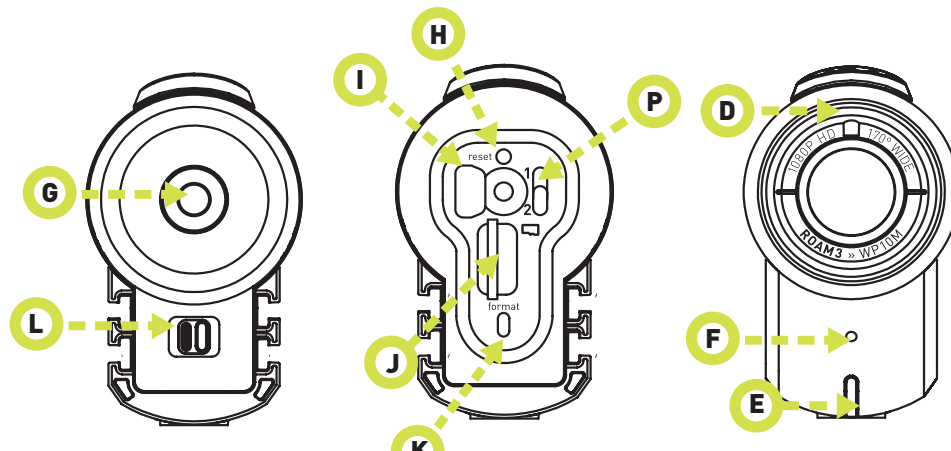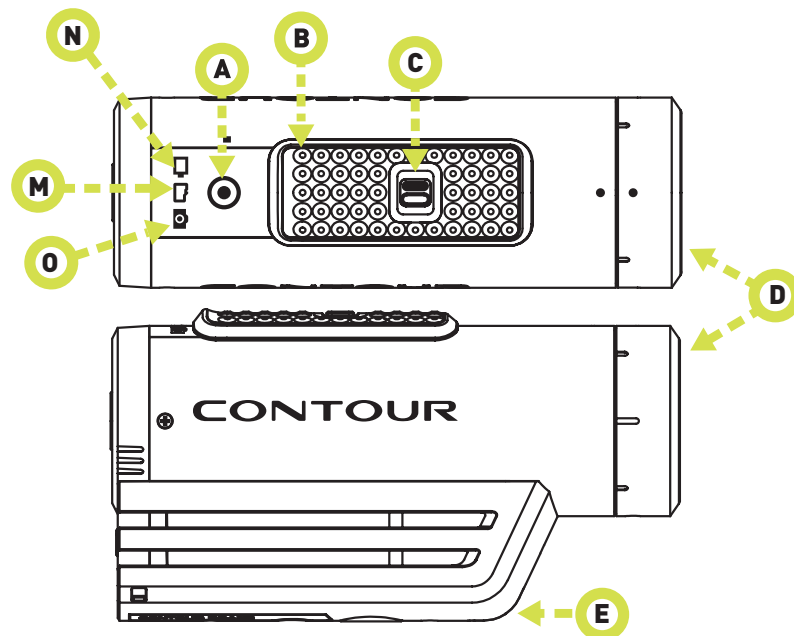  

OPPSETT/INNSTILLINGER

Download Contour Storyteller to your PC/Mac from the Contour website. The Hent Contour Storyteller til din PC/Mac på Contours hjemmeside. Ned-en-stående link vil hjelpe deg med å installere ditt kamera for å sikre at det er registrert, oppdatere klokken på ditt kamera, og få innstillingene tilpasset din egen brukerdefinerte konfigurering.

<http://www.contour.com/startROAM3>

OPPLADING AV BATTERIET

- + Skyv dekselet til side for å åpne.
- + Koble til kameraet til en PC/Mac ved hjelp av den medfølgende USB-kabelen for å lade kameraet.
- + Lysdioden for batteristatus angir ladenivået av batteriet. Den vil endre farge fra rød til grønn i takt med at batteriet lades opp.
- + Oppladingen er helt ferdig, når lysdioden for batteristatus lyser grønt. Dette kan ta opptil tre timer.

FORMATERING AV microSD-KORTET

Formater microSD-kortet før opptak, så ditt kamera skriver og leser korrekt til kortet.

Advarsel: Formatering av kortet vil slette alt innhold.

Kontroller, at Opptak-skyveknapp er i AV-posisjon. Åpne baksiden av ditt kamera, trykk på og hold Formatknappen nede, inntil kameraet piper (tre til syv sekunder), og slipp deretter Formatknappen. MicroSD-kort-lysdioden blinker mens kortet formateres og vil deretter lyse konstant grønt, når formateringen er ferdig.

 
ContourROAM3 er kompatibel med:

- + SDSC (standard kapasitet) klasse 2 microSD Kort med en kapasitet på opptil 2 GB.
- + microSD-kort av typen SDHC (høy kapasitet) klasse 4, 6 eller 10 opp til maks. 32 GB

Kamerastatus

Hvis du trykker på statusknappen:

- + Laserlinjen aktiveres i 15 sekunder.
- + Viser den aktuelle batteri- og minnestatus.

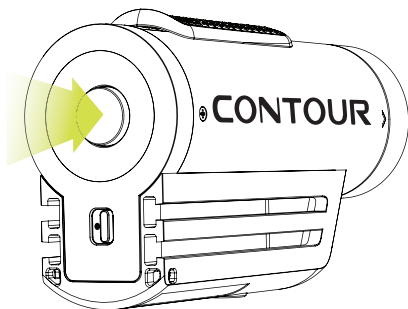

LYSDIODE FOR BATTERISTATUS

- Grønn: 50% eller mer
- Gul: 20 til 50%
- Rød: 20% eller mindre

LYSDIODE FOR MINNESTATUS

- Grønn: 50% eller mer
- Gul: 20 til 50%
- Rød: 20% eller mindre

FEILINDIKERINGER

- + Batterilysdioden blinker rødt: Batteriet er nesten helt brukt opp.
- + Minnelysdioden blinker, og det høres et kontinuerlig pip: Der er ikke adgang til microSD-kortet, enten fordi kortet er fullt, mangler eller ikke er formatert ordentlig.

KAMERAINNSTILLINGER

For å tilpasse innstillingene på ditt kamera, skal du laste ned og installere Contour Storyteller-applikasjonen på din PC/Mac.

<http://contour.com/software/storyteller>

Når kameraet er tilsluttet til din PC, skal du gå til menyen Verktøyer >> Kameraoppsett i Contour Storyteller.

Her kan du tilpasse:

Video Mode (Videotilstand):

- Video i 1080p med 30 bilder pr. sekund (Standard 1)
- Video i 960p med 30 bilder pr. sekund
- Video i 720p med 30 bilder pr. sekund
- Video i 720p med 60 bilder pr. sekund (Standard 2)
- WVGA (480p) at 30 bilder pr. sekund
- WVGA (480p) at 60 bilder pr. sekund
- WVGA (480p) at 120 bilder pr. sekund
- Continuous Photo Mode (with photos taken every 1, 3, 5, 10, 30, or 60 seconds)

Audio

- Mic sensitivity

Lighting

- White-balance settings

Lights

- LED and laser settings

 
Mikrofonfølsomhet Belysning

1-2-opptaksknapp

1-2-opptaksknapp på baksiden av ditt kamera gir deg mulighet for å forhånsinnstille dit ContourROAM3 med to forskjellige konfigurasjoner, som enkelt kan endres direkte i kamerat når du er på farten. Innstillingene for hver switch-posisjon kan settes opp ved hjelp av Contour Storyteller.

OPPTAK AV VIDEO

- + Start opptak: Flytt Opptak-skyveknappens lås, så den røde firkanten ikke vises, og syv deretter Opptak-skyveknappen fremover. Ditt kamera vil slå seg på, pipe en gang, og Opptaksstatus-lysdioden vil lyse rødt, hvilket indikerer at kameraet tar opp en video.
- + Stop opptak: Skyv Opptak-skyveknappen tilbake. Ditt kamera vil pipe to ganger, og Opptakstatus-lysdioden vil slukke, hvilket indikerer at kameraet ikke lenger tar opp og er slått av.
- + Opptak-skyveknappplås: Den lille knappen øverst på Opptak-skyveknappen anvendes for å unngå at opptak-skyveknappen slår på eller av kamerat.

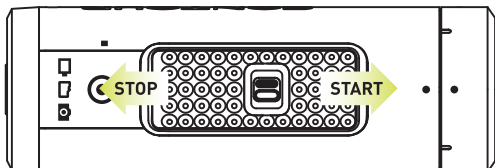

Read all safety information below and operating instructions before using Contour ROAM3 camera to avoid injury.

aet. Du kan flytte Opptak-skyveknappen frem eller tilbake, eller flytte Opptak-skyveknappen så den røde firkanten ikke vises. For å forhindre at Opptak-skyveknappen slår på eller av kameraet, skal du sørge for at Opptak-skyveknappslåsen er i en posisjon så den røde firkanten er synlig.

FOTOMODUS (stillbilder)

- + Aktiver fototilstand: Trykk og hold Statusknappen nede i 2 til 4 sekunder. Du vil høre to pipelyder og lysdioden indikerer at fototilstanden er aktiv og vil lyse grønt.
- + Ta fotografier ved at trykke på Statusknappen. Du vil høre en pipelyd og foto lysdioden vil blinke for å indikere at det er tatt et bilde.
- + Lukk fotomodus: Trykk og hold Statusknappen nede i 2 til 4 sekunder. Du vil høre pipe lyder, foto lysdioden vil blinke og så slukke. Fotomodus er nå deaktivert.
- + Hvis det ikke er tatt et bilde i 60 sekunder eller lengere, vil ditt kamera automatisk slukke.

MONTERING

Det beste bilde avhenger kun av din kreativitet. Contour tilbyr et bredt utvalg av fester, som lar deg sette kameraet opp nesten overalt, så vær kreativ. Husk, at dit ContourROAM3 har et vidvinkelobjektiv, objekter som er langt unna vil virke mindre, enn du forventer i dine videoer.

JUSTERING

Ditt ContourROAM3 har en Laserlinje som hjelper deg med å holde videoopptakene i en horisontal linje. Hvis du vil bruke den skal du aktivere laserlinjen ved at trykke på Status-knappen, plassere din hånd foran laserlinjen eller sikte den på en flat overflate et par meter foran deg og dreie linsen (opp til 270°), inntil laserlinjen er vatret. Ved montering av kameraet på din hjelm eller brille, kan du oppleve at det filmer mer ned enn du trodde. Det kan ta et par prøvevideoer for å finne riktig tilpasning.

SELVKLEBENDE BESLAG

Rens monteringsflaten før du anvender et selvklebende beslag. Vi foreslår rengjøring av overflaten med en liten mengde alkohol og montering av beslaget ved stuetemperatur. La klebemiddelet herde i 24 timer før bruk.

VANNTETT

Ditt ContourROAM3 er vanntett ned til 10 meters dybde uten bruk av et vanntett e-tui. Skal du lengere ned, er du nødt til å bruke et dykkeretui. Dykkeretuiet holder tett ned til 60 meters dybde.

CAUTIONS AND WARRANTY

This Important Product Information Guide contains regulatory, safety, handling, disposal and recycling information, as well as the 1 year limited warranty for your ContourROAM3 camera. Read all safety information below and operating instructions before using ContourROAM3 camera to avoid injury.

WARNING: Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage.

BATTERY AND HANDLING

ContourROAM3 uses a non-removable, non-changeable, rechargeable lithium-ion, 3.7V, 1350mAh battery. The battery may present a hazard if mistreated. Do not disassemble or crush the camera. To charge, only use the Contour USB Cable with a high power USB port on a computer or other device that is compliant with the USB 2.0 or 1.1 standards, or a Contour wall, car, or battery charger.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the U.S. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use proper return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

DISPOSAL INFORMATION

Do not dispose of the ContourROAM3 camera in a fire. Dispose of the camera and its internal battery in accordance with local laws and regulations.

LEASH USE: DO NOT ATTACH THE LEASH TO THE CAMERA WHEN THE CAMERA IS MOUNTED ON HELMET OR GOGGLES, WHEN THE CAMERA WILL BE USED IN HIGH WINDS OR AT HIGH VELOCITIES, OR IN ANY OTHER CIRCUMSTANCES WHEREBY THE CAMERA COULD CAUSE INJURY OR HARM IN THE EVENT THAT IT COMES LOOSE FROM THE MOUNT AND REMAINS TETHERED BY THE LEASH. BY ATTACHING THE LEASH TO THE CAMERA, YOU AGREE TO WAIVE ANY CLAIMS AGAINST CONTOUR, INC. AND ANY OF ITS AFFILIATES, AGENTS, EMPLOYEES, OFFICERS OR DIRECTORS ARISING FROM THE USE OF THE LEASH. ANY CLAIMS AGAINST CONTOUR, INC. ANY OF ITS AFFILIATES, AGENTS, EMPLOYEES, OFFICERS OR DIRECTORS ARISING FROM THE USE OF THE LEASH.



FCC information
ContourROAM3 Camera
Model:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- + This device may not cause harmful interference, and
- + This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modification to this unit not expressly approved by party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with instructions, it may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- + Reorient or relocate the receiving antenna.
- + Increase separation between equipment and receiver.
- + Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- + Consult the dealer or an experienced radio/TV technician for help.



The CE symbol on your ContourROAM3 camera indicates that it is in compliance with the Electromagnetic Compatibility (EMC) directive, and Limits and Methods of Measurement of Radio Interference Characteristics of ITE. Industry Canada This Class B device meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Repairing or Modifying Never attempt to repair or modify a Contour ROAM3 camera yourself. Disassembling Contour ROAM3 camera, including the removal of external screws, may cause damage that is not covered under the warranty. The Contour ROAM3 camera does not contain any user-replaceable parts, except the microSD Card. RoHS Contour ROAM3 cameras comply with the European Union's RoHS directive 2002/95/EC and similar regulations that may be adopted by other countries for European Sales.

CONTOUR, LLC. LIMITED WARRANTY Contour, LLC. ("Manufacturer") warrants to the original end user ("Purchaser") that for the 1 year ("Warranty Period"), the Contour-ROAM3 camera (excluding any third party software) and accessories ("Product") will be free from defects in materials and workmanship when properly installed and used for its intended purpose and in its intended operating environment. This warranty does not apply to any Product that has been: (i) altered, repaired or modified or (ii) damaged or destroyed by accidents or similar events or by any intentional, reckless or negligent acts or omissions of any party. In the event of a defect, return the Product to the original place of purchase or Manufacturer, but only after instructed to do so by Manufacturer. Purchaser shall ship and bear the cost of shipping the Product to Manufacturer and Manufacturer shall bear the cost of shipping the Product back to Purchaser after the completion of service under this limited warranty. Purchaser's exclusive remedy and Manufacturer's entire liability under this warranty will be for Manufacturer at its option to repair or replace the Product or refund purchase price less any rebates. Manufacturer does not warrant against loss of any data (including data stored on Product returned to Manufacturer for service), and assumes no liability for such loss. Purchaser assumes all liability, and as such releases Manufacturer from any liability, for any accident, injury, damage, death, loss, illegal activity or any other claim that may occur resulting from or during use of the Product, whether or not such use is foreseeable by Manufacturer.

ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THE APPLICABLE EXPRESS WARRANTY. ALL OTHER EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF NON-INFRINGEMENT, ARE DISCLAIMED. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to Purchaser. This warranty gives Purchaser specific legal rights, and Purchaser may also have other rights which vary by jurisdiction.

All third party software provided with the Product is provided "AS IS". Purchaser assumes the entire risk as to the quality, performance, accuracy and effect of such software, and should it prove defective, Purchaser, and not Manufacturer, assumes the entire cost of all necessary servicing or repair. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL MANUFACTURER BE LIABLE FOR ANY LOST DATA, REVENUE OR PROFIT, OR FOR SPECIAL, INDIRECT, CONSEQUENTIAL, INCIDENTAL OR PUNITIVE DAMAGES, HOWEVER CAUSED REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF OR RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, EVEN IF MANUFACTURER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT WILL MANUFACTURER'S LIABILITY EXCEED THE AMOUNT PAID BY PURCHASER FOR THE PRODUCT.

The foregoing limitations will apply even if any warranty or remedy provided under this Agreement fails of its essential purpose. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to Purchaser.

Contour Disclaimer All purchasers, users, and any or all parties involved or engaging in the use of Contour, LLC. ("Contour") products agree to the following:

- + Contour does not promote or endorse high risk, careless and/or dangerous actions when using its products.
- + Contour is not liable for any use or misuse of Contour Products or any video captured that may be considered illegal.
- + Contour is not responsible for any illegal actions taken while recording, attempting to record, or editing video that was captured with our products.
- + Contour Products' primary purpose is recording legal sports activities as seen by all Local, State, Federal, and Country laws.

Contour Hands-free Camera and/or associated software and other Contour products are protected by copyright, international treaties, and various patents, including: U.S. patents: D616006 and D621435. Other patents are registered or pending in the U.S. and in various countries around the world. Visit contour.com for a list of applicable patents.

All trademarks and registered trademarks mentioned herein are recognized as the property of their respective holders. ContourROAM3 is a product of Contour, LLC. in Seattle, Washington. <http://contour.com> ©2014 Contour, LLC. All rights reserved.

WE ARE HERE TO HELP

If service is required on your camera or accessory, contact our Technical Support team for troubleshooting or to obtain an RMA Number (Return Materials Authorization) if needed. You will be asked to provide a proof of purchase at this time. Please do not send any product back to Contour without first obtaining an RMA Number or Sales Return Authorization directly from Contour. Contour will, at its sole discretion, replace or repair the product.

Email: support@contour.com Web: <http://contour.com/support>