

CONTOUR

ROAM3

WATERPROOF HD ACTION CAMERA

USER MANUAL

DA

 
 
 
 
CONTOUR

INDHOLD

HURTIG START VEJLEDNING	2
KAMERA OVERBLIK	2
OPSÆTNING	3
FORHOLDSREGLER OG GARANTI	4
KONTAKT	5



QUICK START

1. Skub dæksellåsen til venstre, indtil det røde ikon ikke længere kan ses.
2. Skub dækslet til side for at åbne.
3. Sæt microSD-kortet i.
4. Luk dækslet.
5. Skub dæksellåsen til højre for at låse den.
6. Skub Optag-skydeknappen frem for at optage. Skub den tilbage for at stoppe med at optage
7. Hold statusknappen inde i 3 sekunder for at gå til fototilstand (stilbilleder)

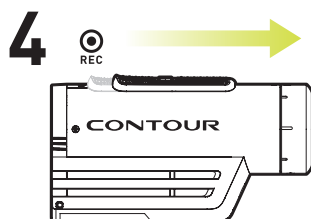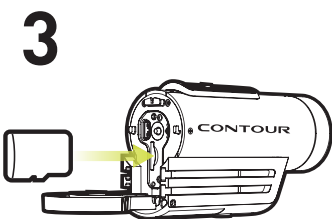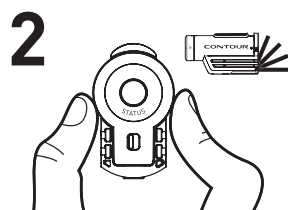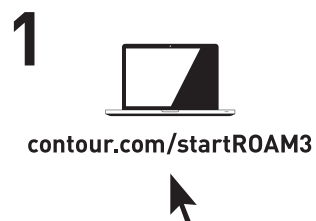

CAMERA DIAGRAM KEY

A Optagelsesstatus	G Statusknap	M Hukommelsesstatus
B Optage-skydeknap	H Nulstillingsknap	N Batteristatus
C Optag-skydeknap Lås	I USB	O Fotostatus
D Drejeligt objektiv	J MicroSD-kortplads	P 1-2-optageknap
E Laserlinje	K Kortformateringsknap	
F Mikrofon	L Dæksellås	

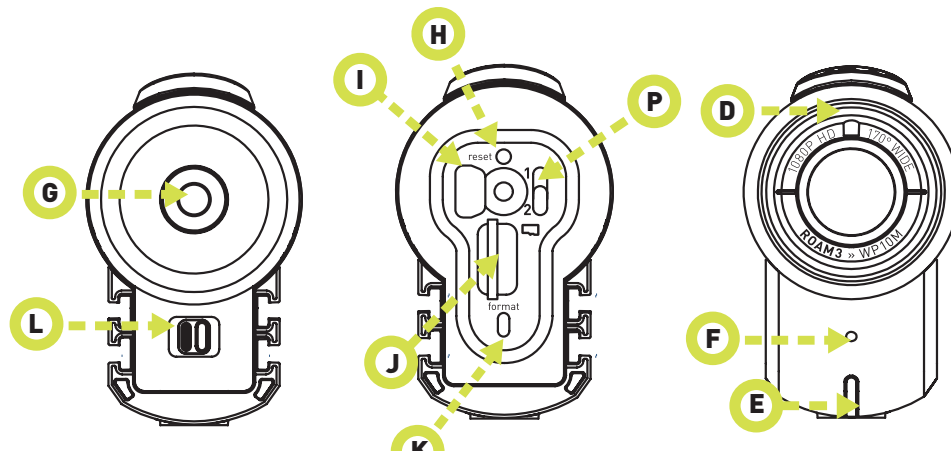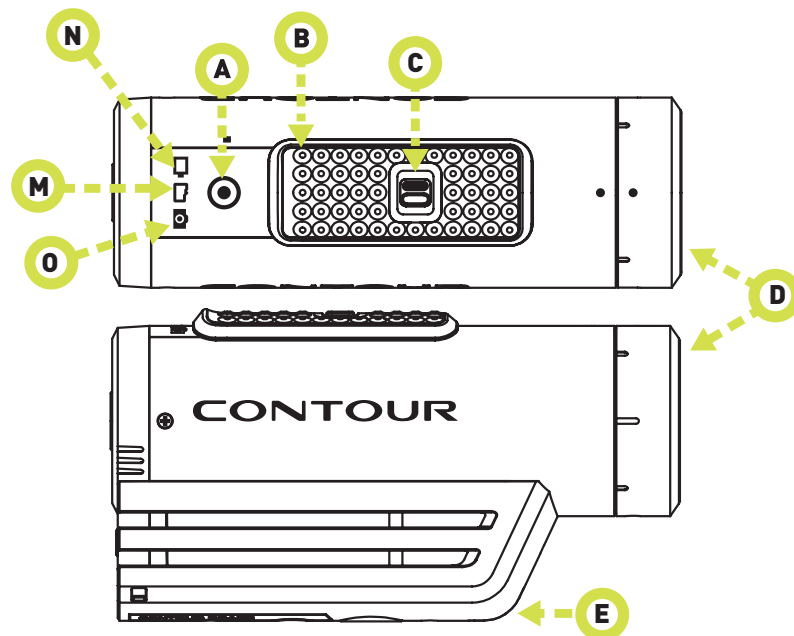  

OPSÆTNING

Hent Contour Storyteller ned til din PC/Mac på Contours hjemmeside. Nedenstående link vil hjælpe dig med at installere dit kamera for at sikre, at det er registreret, opdatere uret på dit kamera, og få indstillingerne tilpasset din egen brugerdefinerede konfiguration.

<http://www.contour.com/startROAM3>

OPLADNING AF BATTERIET

- + Skub dækslet til side for at åbne.
- + Tilslut kameraet til en PC/Mac ved hjælp af det medfølgende USB-kabel for at oplade kameraet.
- + Lysdioden for batteristatus angiver ladeniveauet af batteriet. Den vil ændre farve fra rød til grøn i takt med at batteriet oplades.
- + Opladningen er helt færdig, når lysdioden for batteristatus lyser grønt. Dette kan tage op til tre timer.

FORMATERING AF microSD-KORTET

Formater microSD-kortet forud for optagelse, så dit kamera er i stand til korrekt at læse og skrive til det.

Advarsel: Formatering af kortet vil slette alt på det.

 
Kontroller, at Optage-skydeknop er i off-position. Åbn bagsiden af dit kamera, tryk på og hold Formatknappen nede, indtil kameraet bipper (tre til syv sekunder), og slip derefter Formatknappen. MicroSD-kort-lysdioden blinker mens kortet formateres og vil derefter lyse konstant grønt, når formateringen er færdig.

ContourROAM3 er kompatibelt med:

- + SDSC (standard kapacitet) klasse 2 microSD Kort med en kapacitet på op til 2 GB.
- + microSD-kort af typen SDHC (høj kapacitet) klasse 4, 6 eller 10 op til maks. 32 GB.

Kamerastatus

- Hvis du trykker på statusknappen:
- + Aktiverer laserlinjen i 15 sekunder.
 - + Viser den aktuelle batteri- og hukommelsesstatus

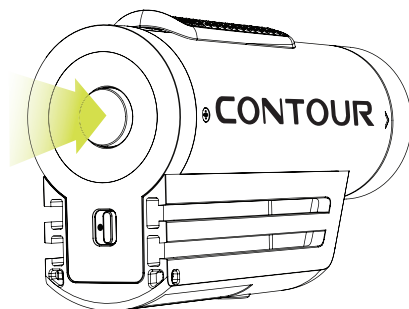

LYSDIODE FOR BATTERISTATUS

- Grøn: 50% eller mere
- Gul: 20 til 50%
- Rød: 20% eller mindre

LYSDIODE FOR HUKOMMELSESSTATUS

- Grøn: 50% eller mere
- Gul: 20 til 50%
- Rød: 20% eller mindre

FEJLSITUATIONER

- + Batterilysdioden blinker rødt: Batteriet er næsten helt afladet.
- + Hukommelseslysdioden blinker, og der lyder kontinuerlige bip: Der er ikke adgang til microSD-kortet, enten fordi kortet er fuldt, mangler eller ikke er formateret ordentligt.

KAMERAINSTILLINGER

For at tilpasse indstillingerne på dit kamera, skal du hente og installere Contour Storyteller-applikationen på din PC/Mac.
<http://contour.com/software/storyteller>

Når kameraet er sluttet til din computer, skal du gå til menuen Værktøjer >> Kameraopsætning i Contour Storyteller.

Her kan du tilpasse:

Video Mode (Videotilstand):

- Video i 1080p med 30 billeder pr. sekund (Standard 1)
- Video i 960p med 30 billeder pr. sekund
- Video i 720p med 30 billeder pr. sekund
- Video i 720p med 60 billeder pr. sekund (Standard 2)
- WVGA (480p) at 30 billeder pr. sekund
- WVGA (480p) at 60 billeder pr. sekund
- WVGA (480p) at 120 billeder pr. sekund
- Continuous Photo Mode (with photos taken every 1, 3, 5, 10, 30, or 60 seconds)

Audio

- Mic sensitivity

Lighting

- White-balance settings

Lights

- LED and laser settings

Mikrofonfølsomhed

 
Belysning

1-2-optageknop

1-2-optageknappen på bagsiden af dit kamera giver dig mulighed for at f rudindstille dit ContourROAM3 med to forskellige konfigurationer, der let kan ændres i felten. Indstillingerne for hver switch-position kan sættes op ved hjælp af Contour Storyteller.

OPTAGELSE AF VIDEO

- + Start optagelse: Flyt Optag-skydeknappens lås, så den røde firkant ikke vises, og skub derefter Optag-skydeknappen fremad. Dit kamera vil tænde, bippe en enkelt gang, og Optagestatus-lysdioden vil lyse rødt, hvilket indikerer, at kameraet nu optager en video.
- + Stop optagelse: Skub Optag-skydeknappen tilbage. Dit kamera vil bippe to gange, og Optagestatus-lysdioden vil slukkes, hvilket indikerer, at kamer-

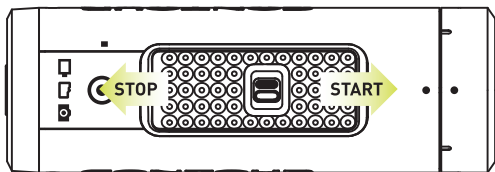

Read all safety information below and operating instructions before using Contour ROAM3 camera to avoid injury.

et ikke længere optager og er slukket.

- + Optag-skydeknapslå: Den lille kontakt oven på Optag-skydeknappen anvendes for at undgå at Optag-skydeknappen tænder eller slukker. Du kan flytte Optag-skydeknappen frem eller tilbage, eller flytte Optag-skydeknappen så den røde firkant ikke vises. For at forhindre at Optag-skydeknappen enten tænder eller slukker, skal du sørge for at Optag-skydeknapslåen er i position så den røde firkant er synlig.

FOTOTILSTAND (stilbilleder)

- + Aktivér fototilstand: Tryk og hold Statusknappen ned i 2 til 4 sekunder. Du vil høre to beep lyde og lysdioden der indikerer at fototilstand er aktiv vil lyse grønt.
- + Tag fotografier ved at trykke på Statusknappen. Du vil høre en bip lyd og foto lysdioden vil blinke for at indikere at der er taget et foto.
- + Sluk fototilstand: Tryk og hold Statusknappen ned i 2 til 4 sekunder. Du vil høre tre bip lyde, foto lysdioden vil blinke og så slukke. Fototilstand er hermed deaktiveret.
- + Hvis der ikke er taget et foto i 60 sekunder eller længere, vil dit kamera automatisk slukke.

MONTERING

Det bedste billede afhænger kun af din kreativitet. Contour tilbyder et bredt udvalg af beslag, der lader dig sætte kameraet op næsten overalt, så vær kreativ. Husk, at dit ContourROAM3 har et vidvinkelobjektiv, og objekter, der er langt væk, vil virke mindre, end du forventer i dine videoer.

JUSTERING

Dit ContourROAM3 har en Laserlinje som hjælper dig med at holde videooptagelserne i en lige horisontal linje. Hvis du vil bruge den, skal du aktivere laserlinjen ved at trykke på Status-knappen, placere din hånd foran laserlinjen eller sigte den på en flad overflade et par meter foran dig og dreje linsen (op til 270°), indtil laserlinjen er vandret.

Ved montering af kameraet på din hjelm eller briller, kan du opdage, at du kigger ned mere, end du troede. Det kan tage et par prøvevideoer at finde den rigtige tilpasning.

SELVKLÆBENDE BESLAG

Rens og tør monteringsfladen før du anvender et selvklæbende beslag. Vi foreslår rengøring af overfladen med en lille mængde alkohol og påsætning af beslaget ved stuetemperatur. Lad klæbemidlet hærde i 24 timer før brug.

VANDTÆT

Dit ContourROAM3 er vandtæt ned til 10 meters dybde uden brug af et vandtæte-tui. Skal du længere ned, er du nødt til at bruge et dykkeretui. Dykkeretuiet holder tæt ned til 60 meters dybde.

CAUTIONS AND WARRANTY

This Important Product Information Guide contains regulatory, safety, handling, disposal and recycling information, as well as the 1 year limited warranty for your ContourROAM3 camera. Read all safety information below and operating instructions before using ContourROAM3 camera to avoid injury.

WARNING: Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage.

BATTERY AND HANDLING

ContourROAM3 uses a non-removable, non-changeable, rechargeable lithium-ion, 3.7V, 1350mAh battery. The battery may present a hazard if mistreated. Do not disassemble or crush the camera. To charge, only use the Contour USB Cable with a high power USB port on a computer or other device that is compliant with the USB 2.0 or 1.1 standards, or a Contour wall, car, or battery charger.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the U.S. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use proper return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

um-ion, 3.7V, 1350mAh battery. The battery may present a hazard if mistreated. Do not disassemble or crush the camera. To charge, only use the Contour USB Cable with a high power USB port on a computer or other device that is compliant with the USB 2.0 or 1.1 standards, or a Contour wall, car, or battery charger.

DISPOSAL INFORMATION

Do not dispose of the ContourROAM3 camera in a fire. Dispose of the camera and its internal battery in accordance with local laws and regulations.

LEASH USE: DO NOT ATTACH THE LEASH TO THE CAMERA WHEN THE CAMERA IS MOUNTED ON HELMET OR GOGGLES, WHEN THE CAMERA WILL BE USED IN HIGH WINDS OR AT HIGH VELOCITIES, OR IN ANY OTHER CIRCUMSTANCES WHEREBY THE CAMERA COULD CAUSE INJURY OR HARM IN THE EVENT THAT IT COMES LOOSE FROM THE MOUNT AND REMAINS TETHERED BY THE LEASH. BY ATTACHING THE LEASH TO THE CAMERA, YOU AGREE TO WAIVE ANY CLAIMS AGAINST CONTOUR, INC. AND ANY OF ITS AFFILIATES, AGENTS, EMPLOYEES, OFFICERS OR DIRECTORS ARISING FROM THE USE OF THE LEASH.

ANY CLAIMS AGAINST CONTOUR, INC. ANY OF ITS AFFILIATES, AGENTS, EMPLOYEES, OFFICERS OR DIRECTORS ARISING FROM THE USE OF THE LEASH.



FCC information
ContourROAM3 Camera
Model:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- + This device may not cause harmful interference, and
- + This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modification to this unit not expressly approved by party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with instructions, it may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- + Reorient or relocate the receiving antenna.
- + Increase separation between equipment and receiver.
- + Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- + Consult the dealer or an experienced radio/TV technician for help.

The CE symbol on your ContourROAM3 camera indicates that it is in compliance with the Electromagnetic Compatibility (EMC) directive, and Limits and Methods of Measurement of Radio Interference Characteristics of ITE.



Industry Canada This Class B device meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Repairing or Modifying Never attempt to repair or modify a Contour ROAM3 camera yourself. Disassembling Contour ROAM3 camera, including the removal of external screws, may cause damage that is not covered under the warranty. The Contour ROAM3 camera does not contain any user-replaceable parts, except the microSD Card. RoHS Contour ROAM3 cameras comply with the European Union's RoHS directive 2002/95/EC and similar regulations that may be adopted by other countries for European Sales.

CONTOUR, LLC. LIMITED WARRANTY Contour, LLC. ("Manufacturer") warrants to the original end user ("Purchaser") that for the 1 year ("Warranty Period"), the Contour-ROAM3 camera (excluding any third party software) and accessories ("Product") will be free from defects in materials and workmanship when properly installed and used for its intended purpose and in its intended operating environment. This warranty does not apply to any Product that has been: (i) altered, repaired or modified or (ii) damaged or destroyed by accidents or similar events or by any intentional, reckless or negligent acts or omissions of any party. In the event of a defect, return the Product to the original place of purchase or Manufacturer, but only after instructed to do so by Manufacturer. Purchaser shall ship and bear the cost of shipping the Product to Manufacturer and Manufacturer shall bear the cost of shipping the Product back to Purchaser after the completion of service under this limited warranty. Purchaser's exclusive remedy and Manufacturer's entire liability under this warranty will be for Manufacturer at its option to repair or replace the Product or refund purchase

price less any rebates. Manufacturer does not warrant against loss of any data (including data stored on Product returned to Manufacturer for service), and assumes no liability for such loss. Purchaser assumes all liability, and as such releases Manufacturer from any liability, for any accident, injury, damage, death, loss, illegal activity or any other claim that may occur resulting from or during use of the Product, whether or not such use is foreseeable by Manufacturer.

ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THE APPLICABLE EXPRESS WARRANTY. ALL OTHER EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF NON-INFRINGEMENT, ARE DISCLAIMED. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to Purchaser. This warranty gives Purchaser specific legal rights, and Purchaser may also have other rights which vary by jurisdiction.

All third party software provided with the Product is provided "AS IS". Purchaser assumes the entire risk as to the quality, performance, accuracy and effect of such software, and should it prove defective, Purchaser, and not Manufacturer, assumes the entire cost of all necessary servicing or repair. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL MANUFACTURER BE LIABLE FOR ANY LOST DATA, REVENUE OR PROFIT, OR FOR SPECIAL, INDIRECT, CONSEQUENTIAL, INCIDENTAL OR PUNITIVE DAMAGES, HOWEVER CAUSED REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF OR RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, EVEN IF MANUFACTURER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT WILL MANUFACTURER'S LIABILITY EXCEED THE AMOUNT PAID BY PURCHASER FOR THE PRODUCT.

The foregoing limitations will apply even if any warranty or remedy provided under this Agreement fails of its essential purpose. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to Purchaser.

Contour Disclaimer All purchasers, users, and any or all parties involved or engaging in the use of Contour, LLC. ("Contour") products agree to the following:

- + Contour does not promote or endorse high risk, careless and/or dangerous actions when using its products.
- + Contour is not liable for any use or misuse of Contour Products or any video captured that may be considered illegal.
- + Contour is not responsible for any illegal actions taken while recording, attempting to record, or editing video that was captured with our products.
- + Contour Products' primary purpose is recording legal sports activities as seen by all Local, State, Federal, and Country laws.

Contour Hands-free Camera and/or associated software and other Contour products are protected by copyright, international treaties, and various patents, including: U.S. patents: D616006 and D621435. Other patents are registered or pending in the U.S. and in various countries around the world. Visit contour.com for a list of applicable patents.

All trademarks and registered trademarks mentioned herein are recognized as the property of their respective holders. ContourROAM3 is a product of Contour, LLC. in Seattle, Washington. <http://contour.com> ©2014 Contour, LLC. All rights reserved. **WE ARE HERE TO HELP**

If service is required on your camera or accessory, contact our Technical Support team for troubleshooting or to obtain an RMA Number (Return Materials Authorization) if needed. You will be asked to provide a proof of purchase at this time.

Please do not send any product back to Contour without first obtaining an RMA Number or Sales Return Authorization directly from Contour. Contour will, at its sole discretion, replace or repair the product.

Email: support@contour.com Web: <http://contour.com/support>