

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * For warranty details refer to www.clark.com.au
- * All pipework must be thoroughly flushed prior to installation.

Installation

- 1) Fit the cover plate (2) together with 'O'ring (1) over threaded nipple (2) and check that the thread is the correct length, as shown (Fig.1). Cut to length if required ensuring end face is square. Apply thread tape to the thread.
- 2) Screw the wall outlet (4) onto the threaded nipple (3) and position as required. DO NOT OVERTIGHTEN.

Removing Aerator Insert

- 1) Carefully remove aerator housing (7) from bath outlet (4), taking care not to damage the decorative finish.
- 2) Remove seal (5) & aerator insert (6) from aerator housing. Check that aerator housing is clean. Deposits of lime can be removed by washing in a vinegar solution.
- 3) Fit aerator insert (6) into aerator housing (7) followed by seal (5) then screw assembly onto bath outlet (4) and tighten securely.

IMPORTANT
Pressure & Temperature Requirements.
<ul style="list-style-type: none"> • Hot and cold water inlet pressures should be equal. • Static inlet pressure range : 150 -1000 kPa New Regulation : -500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1) • Maximum hot water temperature : 80°C.

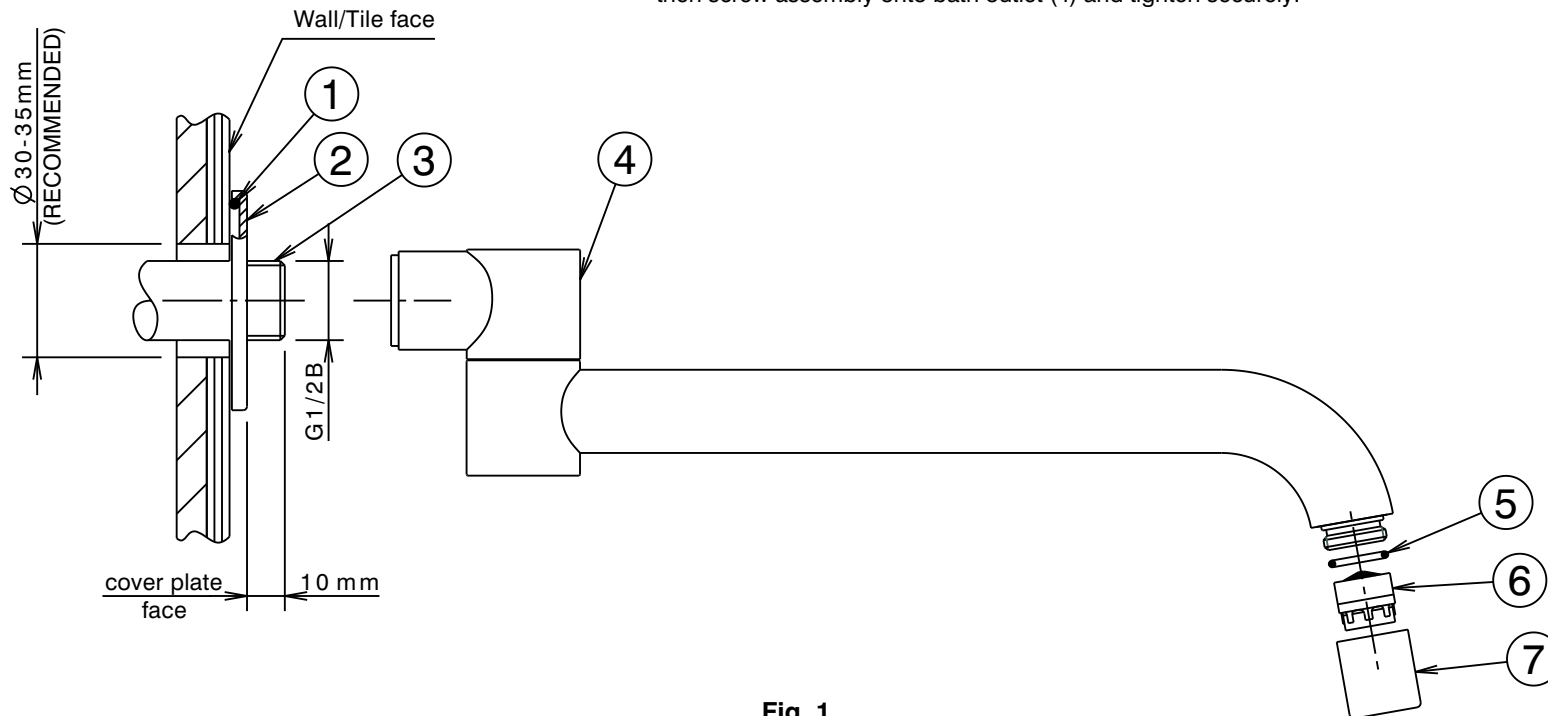


Fig. 1