### M8274 / M8274-S



Always read all product literature  $\underline{\textbf{BEFORE}}$  installing product.

#### www.warn.com

# **A** WARNING

- Always position fairlead with warning readily visible on top.
- Always use class 8.8 metric (grade 5) or better hardware.
- Never weld mounting bolts.
- Never use bolts that are too long.
- **Always** confirm required bolt length to ensure proper thread engagement.
- Always complete the winch installation and hook attachment before installing the wiring.

## Mounting

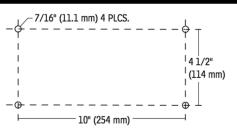



Plate Thickness	Bolt Length
1/4" (7 mm)	1.5" (40 mm)
3/8" (10 mm)	1.5" (40 mm)
1/2" (13 mm) <i>Not supplied</i>	1.75" (45 mm)

### **Synthetic**

### <u>Wire</u>

ltem	Qty	Description
Α	4	7/16" -14
В	4	7/16" (11.1 mm)
С	2	7/16" - 14 X 1 1/2"
D	2	7/16" - 14 X 1 3/4"

ltem	Qty	Description
Α	4	7/16″-14
В	4	7/16" (11.1 mm)
С	4	7/16" - 14 X 1 1/2"

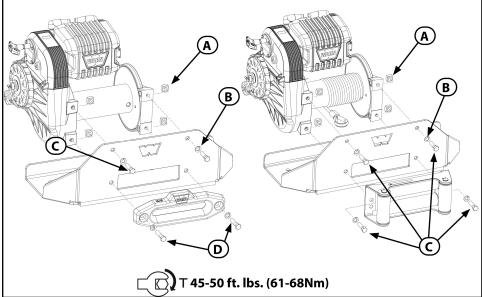

# Wiring

### **A** WARNING



Always remove jewelry and wear eye protection when making battery connections.

**Never** route electrical cables across sharp edges.


**Never** route electrical cables near parts that get hot. **Never** route electrical cables over battery terminals.

...., ....,

**Never** route electrical cables through or near moving parts.

**Always** insulate and protect all exposed wiring and electrical terminals.

**Always** place the supplied terminal boots on wires and terminals.

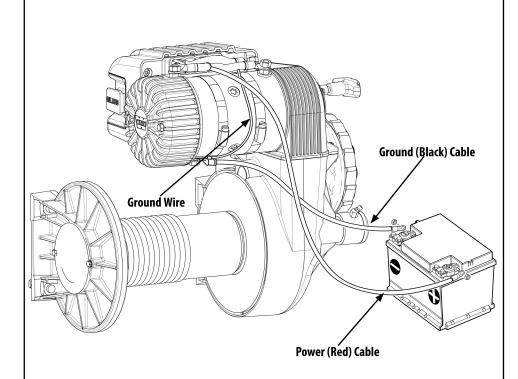

NOTE: For M8274-S model: Install winch completely and verify winch operation before installing rope.

106116A1 106116A1