

ACCESSORY FITTING GUIDE

UMBRELLA HOLDER



Step 1:
The Umbrella Holder mounts to the area of the Accessory Dock shown in the image to the left.



Step 2:
Attach the Umbrella Holder to the Accessory Dock. Ensure the screw is tightened sufficiently.



Step 3:
The Umbrella Holder is now attached. The angle can be adjusted by loosening the screw circled in the picture to the left.

SCORE CARD HOLDER



Step 1:
The Score Card Holder mounts to the area of the Accessory Dock shown in the image to the left.



Step 2:
Attach the Score Card Holder to the Accessory Dock. Ensure that the screw is tightened sufficiently.



Step 3:
The Score Card Holder is now attached. The angle can be adjusted by loosening the fixing screw.

GPS DEVICE HOLDER



Step 1:
The Device Holder mounts to the area of the Accessory Dock shown in the image to the left.



Step 2:
Clip the two Device Holder parts together as shown in the image to the left.



Step 3:
The Device Holder is now attached. The angle can be adjusted by loosening the fixing screw.

SCORECARD & DEVICE HOLDER



Step 1:
The long fixing screw included with the Score Card Holder is required to attach both the Device and Score Card Holder at the same time.



Step 2:
Attach the Device and Score Card Holder to the Accessory Dock as shown. Ensure the screw is tightened sufficiently.



Step 3:
Both accessories are now attached. The angle can be adjusted by loosening the fixing screw.