

Congratulations on your purchase of the Connective Peripherals USB2-F-6001 USB to RS422 adapter. Getting started is quick and easy:

- Detailed device driver installation instructions, port information and mechanical details are available in the USB2-F-6001 datasheet. This can be downloaded from: <http://www.connectiveperipherals.com>.
- To begin, connect the USB cable to your PC USB Host or a USB Hub connector and the USB2-F-6001. Power is supplied by the USB bus, so no external power supply is required.
- Device drivers are needed for the PC to communicate with the USB2-F-6001. If your computer is connected to the Internet, you can use the Microsoft Windows Update service to automatically download the latest WHQL-certified device drivers. Alternatively these can be downloaded from: <http://www.connectiveperipherals.com>.

To install the drivers, follow the steps given below:

1. Download and unzip the drivers to a folder.
2. Connect the USB cable to your PC USB Host or a USB Hub connector and the USB2-F-6001. Power is supplied by the USB bus, so no external power supply is required.
3. The Windows “Found New Hardware Wizard” will appear. Select the choice to install the drivers from a specific location, then browse to the folder just created when the drivers were downloaded from the Connective Peripherals website.
4. If a notice appears indicating that the drivers are not signed, select “Install Anyway”.
5. The Driver wizard will appear a second time. Repeat the steps 2 to 4 above to complete the installation.

© Connective Peripherals Pte Ltd

**Clearance Number: CP#049**

**Document Reference Number: CP\_000059**

**USB2-F-6001\_Quick\_Start\_Guide Version 1.1**

The DE-9P pin-out is as follows:

Pin	Function
1	TXD- = Transmit Data, negative polarity
2	TXD+ = Transmit Data, positive polarity
3	RXD+ = Receive Data, positive polarity
4	RXD- = Receive Data, negative polarity
5	GND = signal ground
6	RTS- = Request To Send, negative polarity
7	RTS+ = Request To Send, positive polarity
8	CTS+ = Clear To Send, positive polarity
9	CTS- = Clear To Send, negative polarity

## Revision History:

Version 1.0 2009-05-22 Initial release

Version 1.1 2019-03-29 Re-branding to reflect the migration of the product from EasySync to Connective Peripherals name (changed logo, copyright, internal hyperlinks)

© Connective Peripherals Pte Ltd

**Clearance Number: CP#049**

**Document Reference Number: CP\_000059**

**USB2-F-6001\_Quick\_Start\_Guide Version 1.1**