




QUICK START GUIDE

Features

- ☆ Your favorite apps
- Useful recipes
- (3) Information as a Glance Clock face
- C Do Not Disturb (DND) mode
- Silent mode
- Date, time, twelve hourly dots

What is in the box

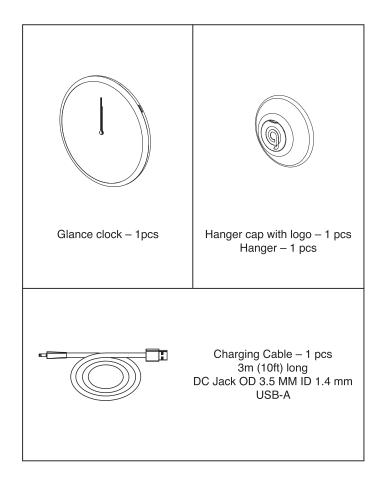

Let's hang your clock

 
(1)

To hang your Glance Clock to a wall you will need a screw and dowel that is appropriate for your wall type. Please ask for a 4mm countersunk screw with dowel in your hardware store.




(2)

Take the hanger and remove the cap (with the Glance Clock logo). Drill a hole in the wall and place the dowel into the hole. Place the hanger against the hole and screw in the 4mm screw through the hole in the hanger. Place the cap back.




(3)

 Check that the hanger is firmly attached to the wall. Take the Glance Clock and hang it to the hanger. The Glance Clock should be hanging vertically.



(4)

Plug in the cable to the clock, insert the USB plug into the adapter (not included), then plug in the power adapter. USB-type adapter and wall mount plug are shown for the reference.

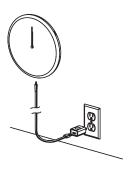



Download the app from the App Store to your phone, it will help you to setup your clock. Use QR code or find an app by name "Glance Clock" on App Store.







Turn on your clock by holding the button on the right side. You will see the 'Hello' sign once it is turned on. If you see the sign [/] you need to charge the clock. Launch the Glance Clock app and follow the instructions on the screen.



Technical Support Information

For support inquiries, please contact support@glanceclock.com

Certification

FCC AND IC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reaso nable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient or relocate the receiver antenna, increase the separation between the equipment and receiver, connect the equipment into an outlet on a circuit different from that to which the receiver is connected, consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or

Operation is subject to the following two conditions:

- This device may not cause harmful interference This device must accept any interference received, including interference that may cause undesired operation

DECLARATION OF CONFORMITY WITH REGARD TO THE FU DIRECTIVE 1999/5/FC

Glance Tech Pte. Ltd. is authorized to apply the CE (Conformité Européene) Mark on its product, thereby declaring conformity to the essential requirements and other relevant provisions of directive 1999/5/EC and other applicable directives

Caution! The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

Disposal and Recycling Information

The symbol on the product or its packaging signifies that this product has to be disposed separately from ordinary household wastes at its end of life. Please kindly be aware that it is your responsibility to dispose electronic equipment at recycling centers so as to help

Each country in the European Union should have its collection centers for electrical and electronic equipment recycling. For information about your recycling drop off point, please



To charge your clock, locate the connector slot at the back of your device. Remove the charging cable from the box and connect to the clock. Insert USB connector to the charger (not included) and plug in the wall outlet. You can now try switching on your clock again. Please charge your clock for at least 2 hours. You can continue with the setup process simultaneously.



Power Status

☑ Battery is dead

The clock cannot be turned on. Charge your clock for at least 2 hours.

Battery is less than 15%

The clock needs to be charged.

■ Battery is fully charged

When the charging cable is plugged in the indicator shows that the clock is fully charged.

III∃∃ Battery level

When you remove the cable the clock shows you the battery level.

(i)

Glance Clock In-app battery level

You can always check the battery level in Glance Clock app.

contact your local related electric at and electronic equipment waste management

- authority or the retailer where you bought the product.

 Do not dispose of your glance product with household waste.
- Disposal of the packaging and your glance product should be done in accordance with local regulations.
- Batteries are not to be disposed of in municipal waste stream and require separate collection.

PLEASE RECYCLE!

Warranty Information

Glance Tech Pte. Ltd. is covered by a 1 year limited warranty that covers defects in workmanship and / or materials for a period of 1 year from original purchase date. This warranty does not apply to any products which have been abused, neglected, modified or used for a purpose other than the one for which they were manufactured. Warranty terms may be revised without notification at the discretion of the manufacturer.

For warranty work contact: 71 Ayer Rajah Crescent, #01-23, Singapore 139951

Contact Support: support@glanceclock.com Online Product Support: glanceclock.com/faq

Glance Clock by Glance Tech Pte. Ltd. Designed in Singapore. Assembled in Malaysia. All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim ar responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

