

INSTALLATION MANUAL

FOR MOUNT TYPE 1





We know you want to jump right into installation, but read me first!











Read instructions carefully before assembling and installing

Use caution when handling the Kleen Opener during unpacking, assembly, and installation. Kleen Opener has metal edges that can cause harm.

Misuse of this product can cause breakage and/or personal harm.

DO NOT USE KLEEN OPENER TO MOVE DUMPSTER

For questions or comments please call us at:

1 (818) 280 3907

or e-mail us at:

owner@firmfresh.com

Visit us at:

kleentools.com



PACKAGE CONTENTS

Please review the contents of your Kleen Opener to ensure all parts are ready

IDO NOT REMOVE THE ZIP-TIE UNTIL INSTRUCTED



- LEFT & RIGHT Kleen Opener arms



- 2x Adjustment channels
 - 4x Orange Pull-down straps



- 2x Red Threadlocker



- 1x Ratchet tool



- 1x 1/4" Hex Drive Socket



- 1x 5/32" Hex Drive Socket



- 2 x Adjustment Channel 1/4" x 1.5" Long Screws



- 2x Adjustment Screw Lock Washers




- 2 x Leveling 1/4" x 0.5" Short Screws



- 4x Extra cone point bolts

ANATOMY OF A KLEEN OPENER

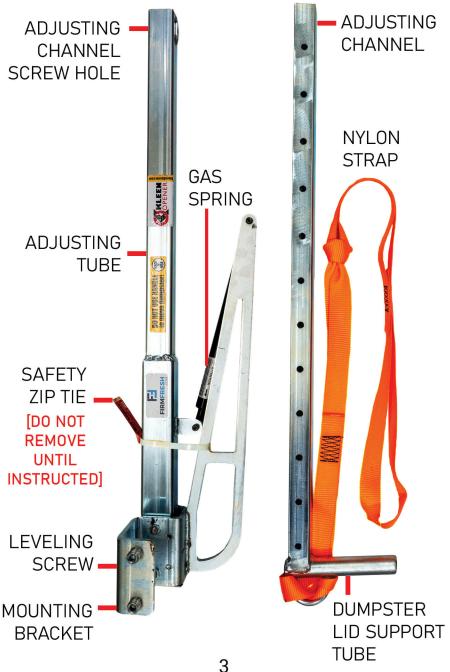



Assembling the Arm

Kit comes with LEFT & RIGHT side assemblies. Prior to installing Kleen Openers on the dumpster, the adjusting channel should be set into the adjusting tube to secure it during mounting.





FULLY INSERT ADJUSTING CHANNEL INTO ADJUSTING TUBE






ALIGN THE LAST ADJUSTING CHANNEL HOLE WITH THE ADJUSTING TUBE SCREW HOLE AND HAND TIGHTEN THE ½" X 1.5" SCREW WITH ½" LOCK WASHER TO KEEP ADJUSTING CHANNEL IN PLACE PRIOR TO INSTALLATION ON DUMPSTER.




Mounting the Bracket

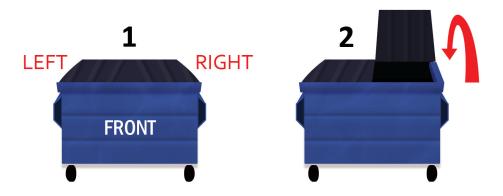

Identify your dumspter sides from the front. Lift lid up all the way so it rests on the back of the dumpster.

Installation is the same for left & right sides.

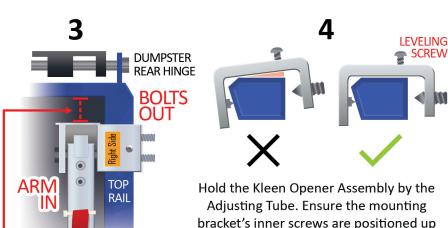

2 yard = 1/2" to 4" 3-4 yard = 2 to 4"

6-8 yard = 6 to 12"

ADJUSTING

Adjusting Tube. Ensure the mounting bracket's inner screws are positioned up against the lower angle of Dumpster's inner wall. Position the mounting bracket as close to level with Top Rail. If Dumpster's Top Rail is damaged or is not level, you can adjust the Top Leveling Screw to adjust the mounting bracket to help level the Mounting Bracket. (See Step 5)




Mounting the Bracket



Lightly fasten cone point bolts with 1/4"
Hex Drive until tip is in contact with dumpster's side. If the mounting bracket is not level turn the Leveling Screw clockwise with the 5/32" Hex Drive until Mounting Bracket is level and aligned with Top Rail

Appy Red Threadlocker to about 3 threads on each Cone Point bolt.

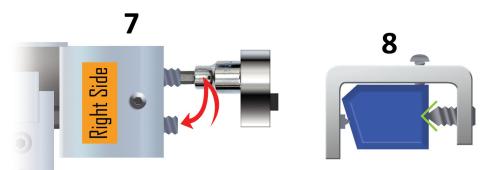


Continue fasting the Cone Point Bolts with the 1/4" Hex Drive, being sure to alternate between each bolt to ensure even pressure and alignment. Tighten until Cone Point Bolts are firmly pressed in the side of the Dumpster.

Then give one final ¼ turn to securely fasten.



Adjusting Arm Length

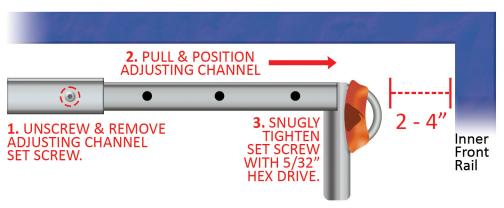




[YOU CAN NOW SAFELY CUT THE ZIP-TIE]



OPERATIONAL GUIDE

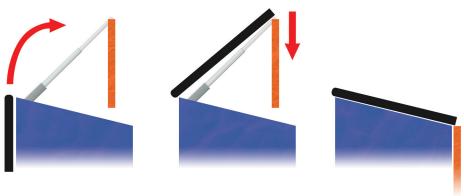

After installation, lift arm up using guide below, place lid onto the arm and close using Nylon Strap, like shown below.



To open dumpster lid, lift strap UP 6" to 8" until gas spring takes over and opens remainder of the way.



To close dumpster lid, pull strap TOWARDS you and DOWN until the lid is closed entirely. You can let go of the strap at this point.



I'm missing parts listed in the Package Contents Please refer to Page 1 and contact us immediately!

I think I have the wrong version for my dumpster Please refer to Page 1 and contact us immediately!

My set screw isn't threading into the adjusting tube

The alignment between the Adjusting Channel and the Adjusting Tube holes may need slight adjustment to fully engage the $\frac{1}{4}$ " x 1.5" Adjusting Channel Set Screw to fully engage the Adjusting Tube threads.

My bracket doesnt fit my dumpster

Ensure the Kleen Opener's Mount Type is the correct for the Dumpster you are installing it on. Please refer to Page I and contact us Immediately.

Kleen Opener isn't sitting correctly on my dumpster Ensure bracket is flush with top rail and double check your mount type is appropriate for your dumpster style.

Strap won't reach the front and lid doesn't open easilyCheck that the Kleen Opener distance from the dumpster rear wall is appropriate for the size of your dumpster. Refer to the distance guide on Page 5.



Kleen Opener is too loose or crooked after securing bolts

Ensure the Mounting Bracket's Cone Point Bolts were tightened enough, and tightening was performed alternating between both bolts for even pressure and alignment. In addition, we provide a ¼" x 0.5" leveling screw on top of the Mounting bracket that may be used to help level the Mounting Bracket if the Top Rail of the Dumpster, where the Kleen Opener Assembly is being mounted, is not level.

Arm doesn't reach 2-4" distance from front

Check install depth from back wall is appropriate for your size dumpster. If need be, you can move the Kleen Opener 2" - 8" towards the front of the dumpster.

Kleen Opener wont engage gas spring to open lid

If lifting 6" - 8" inches and the gas spring does not engage, your lid may be too heavy for the current spring. Please refer to Page 1 and contact us immediately!

Does the Adjusting Screw located on Top of the Kleen Opener Mounting Bracket always need to be adjusted to level the Kleen Opener Assembly? No, we provided a ¼" x 0.5" leveling screw on top of the Mounting bracket as a new feature to the Kleen Opener Mounting Bracket; as some Dumpsters' Top Rail, where the Kleen Opener is mounted, are damaged or not level. The Adjusting Screw may be used to help level and align the Mounting Bracket.



SEE OUR INSTALLATION VIDEO



