



1 Connect the Home Dock and Dock the Radio

Select a location in close proximity to your stereo system or powered speakers, and also where the cable from the Indoor/Outdoor Home Antenna can reach the Home Dock. The location should be easily accessible and provide good visibility of the display, but should not be located where it will be in direct sunlight, which will reduce the visibility of the display screen.


A. Connect the Indoor/Outdoor Home Antenna to the **silver ANT** connector at the rear of the Home Dock.

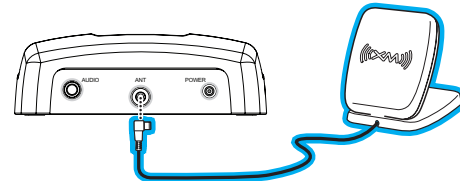


B. Connect the Home Power Adapter to the **red Power** connector at the rear of the Home Dock, and plug it into a wall outlet.

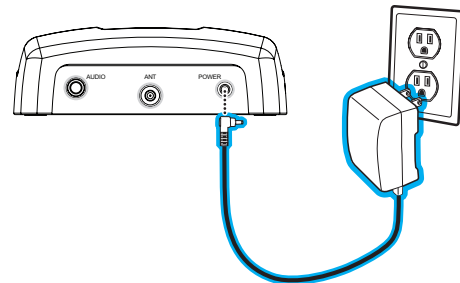

C. Place your Edge in the Home Dock.

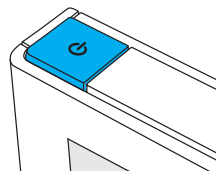


D. Power on your Edge by pressing the **Power** button.

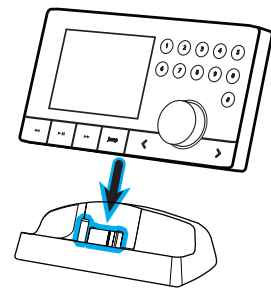

2 Place & Aim the Indoor/Outdoor Home Antenna

A. Check the signal strength indicator at the top left of the screen. If there are 2 or 3 bars of signal strength, continue with step 3. If not, continue with step B below.

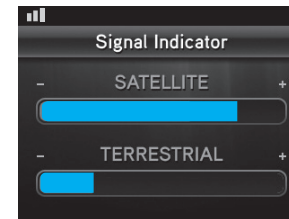



B. Access the **Signal Indicator** screen by pressing **menu** and then turning the **Rotary Knob** to scroll to and highlight **Signal Indicator**. Press the **Select** button.

C. Try experimenting with the Indoor/Outdoor Home Antenna to get a feel for the reception in your location. If either the Satellite or Terrestrial signal strength bar is at least more than half filled, you should be done aiming the antenna. Press and hold **menu** to exit the **Signal Indicator** screen. The Radio should be tuned to channel 1, the XM Preview channel. There should be 2 or 3 bars of signal strength shown in the upper left corner of the screen. Continue with step 3.



D. If you are not yet receiving a good signal, move the antenna around the room, or from room to room. Aim it at different windows, try moving the antenna closer to a window, ideally one that is facing due south.

Not sure which way is south? Think about where the sun rises (in the east) and sets (in the west). Then stand so that east is to your left and you'll be facing south. Is there a window in the direction you're facing? Place the antenna on the windowsill making sure it faces the glass and not the window frame. If you are receiving a good Satellite or Terrestrial signal (or both), you're done aiming the antenna. Press and hold **menu** to exit the **Signal Indicator** screen. The radio should be tuned to channel 1, the XM Preview channel. There should be 2 or 3 bars of signal strength shown in the upper left corner of the screen. Continue with step 3.

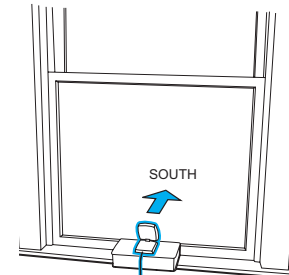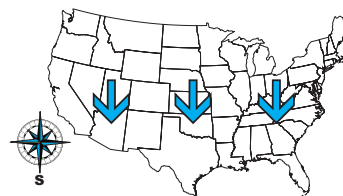

If you were unable to find an indoor location for the antenna, you will need to place it outdoors. Refer to "Step 2: Place and Aim the Indoor/Outdoor Home Antenna" on page 16 of the User Guide for outdoor location options.


3 Connect the Audio

The Home Dock can be connected to your stereo system, or to a set of powered speakers.


To Connect the Home Dock to Your Stereo System:

- A.** Take the provided Stereo Audio Cable and connect the single connector to the **green AUDIO** connector at the rear of the Home Dock.
- B.** Connect the white left and red right Stereo Audio Cable connectors ("L" and "R" are also on each respective tip) to any available input other than PHONO on your stereo system. (If your stereo's inputs are marked red and black, connect the white plug to the black input.)

C. Turn the stereo system On, and make sure you select the correct input on your stereo system for the AUX In or LINE In connection.

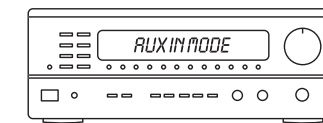

D. Ensure Edge is tuned to channel 1, the XM Preview channel. If everything is connected correctly, and you are receiving a good signal, you should hear the SiriusXM audio.

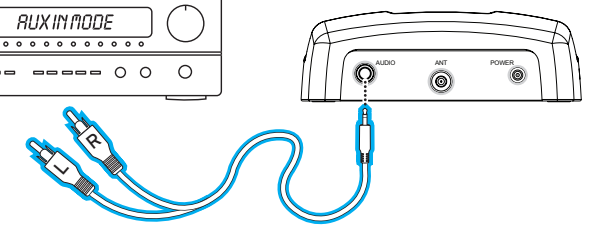


E. The audio level of your Radio can also be adjusted, if necessary. Refer to "Set Audio Level" on page 50 of the User Guide to adjust the audio level.

To Connect the Home Dock to Your Powered Speakers:

- A.** Connect the powered speakers to the **green AUDIO** connector at the rear of the Home Dock.
- B.** Plug the powered speakers into a wall outlet.

C. Turn On the powered speakers.

D. Ensure Edge is tuned to channel 1, the XM Preview channel. If everything is connected correctly, and you are receiving a good signal, you should hear the SiriusXM audio.

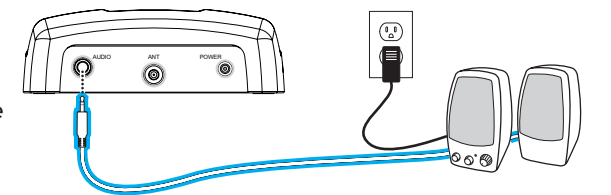

E. The audio level of your Radio can also be adjusted, if necessary. Refer to "Set Audio Level" on page 50 of the User Guide to adjust the audio level.

4 Subscribe

You can either follow the general activation and subscription process or use the on-board activation guide to activate your Edge and subscribe to the SiriusXM service.

General activation and subscription process:

- A.** Make sure your Edge is turned on, tuned to channel 1, the XM Preview channel, and receiving a good signal so that you can hear the SiriusXM audio.
- B.** Make a note of your Radio ID. You can find it by selecting **Radio ID** in menu items, by tuning to channel 0, on a label on the bottom of the gift box, and on the label on the back of your Edge.

NOTE! The Radio ID does not use the letters I, O, S, or F.

C. To subscribe:

- **Online:** Go to www.siriusxm.com/activatenow to access or set up an online account, subscribe to the service, and activate your Radio.
- OR
- **By phone:** Call 1-866-635-2349.

D. Activation usually takes less than 15 minutes after you have completed the subscription process, but sometimes may take up to an hour. We recommend that your Radio remain on until activated. When your service is activated, Edge will display an alert message. To continue, press any button.




Turn the **Rotary Knob** to tune to other channels, and press ◀ or ▶ to browse the different categories of channels. Learn what all the buttons do on the opposite side of this Quick Start Guide.

Activation guide:

For your convenience, Edge has an on-board activation guide. You can activate your Radio and subscribe to the SiriusXM service by using this guide, where you will be guided step-by-step through the subscription process. To access and use the guide, simply follow these steps:

- A.** Turn Edge On and press **menu**.
- B.** **Activate Radio** will be highlighted. Press the **Select** button.
- C.** Follow the directions on each successive screen until you complete the subscription process.

Turn the **Rotary Knob** to tune to other channels, and press ◀ or ▶ to browse the different categories of channels. Learn what all the buttons do on the opposite side of this Quick Start Guide.

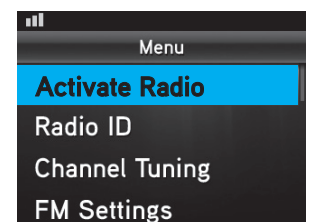



Dock & Play Radio with Home Kit

EDGE HOME QUICK START GUIDE



Self installation instructions and tips are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills and physical ability required to properly perform an installation. SiriusXM shall have no liability for damage or injury resulting from the installation or use of any SiriusXM or third party products. SiriusXM product warranties do not cover the installation, removal or reinstallation of any product.

Sirius XM Radio Inc.
1221 Avenue of the Americas
New York, NY 10020
1.866.635.2349

siriusxm.com

Edge Main Display

When listening to a channel, information about the channel and what is currently playing is displayed.

- Antenna Signal Strength**: Indicated by a bar graph.
- Category Name (displayed briefly as channels are tuned)**: "Rock" is shown above the main display.
- Channel Number and Channel Name**: "27" and "DEEP TRACKS" are shown.
- Artist Name or Talk Show Host or Sports Teams/Score**: "Tom Petty's Buried Treasure" is shown.
- Song/Program Title or Talk Show Schedule or Game Time/Game Details**: "FAV 5" is shown.
- Favorite Channel Preset Number**: "FAV 5" is shown.

Remote Control Functions

- Power Button**: Press to turn Radio on and off.
- Pause and Replay Buttons**: Pause, rewind, and replay up to 30 minutes of live radio.
- Select Button**: Press to confirm selection of highlighted items in a menu or list.
- Not Used**: Buttons for left and right arrow keys.
- / FM Button**: FM: Press to access and cycle through FM presets (Vehicle Dock only). -: Not used.
- Number Buttons**: Press to tune to a stored favorite channel, press and hold to store a favorite channel; also enter a channel number.
- Jump Button**: Press to go back to the previous channel to which you were listening; or press it to directly access traffic and weather for the city of your choice.
- Arrow Buttons Up/Down**: Press to preview and tune to channels through the channel lineup; also press to scroll through lists and highlight menu items.
- Arrow Buttons Left/Right**: Press to search for channels by category.
- Menu Button**: Press to access advanced features and configuration options; in configuration options, press and hold to return to main display screen.
- + / Direct Button**: Direct: Press first before entering the channel number, to directly tune to a channel. + : Not used.
- Mute Button**: Press to silence SiriusXM audio.

What's in the Box?

- Edge Radio
- Home Dock
- Remote Control
- Indoor/Outdoor Home Antenna
- Home Power Adapter
- Stereo Audio Cable

Edge Button Functions

- Power Button**: Press to turn Radio on and off.
- Menu Button**: Press to access advanced features and configuration options; in configuration options, press and hold to return to main display screen.
- FM Button**: Press to access and cycle through FM presets (Vehicle Dock only).
- Number Buttons**: Press to tune to a stored favorite channel, press and hold to store a favorite channel; also enter a channel number.
- Direct Button**: Press first before entering the channel number, to directly tune to a channel.
- Select Button**: Press to confirm selection of highlighted items in a menu or list, and of settings.
- Left and Right Buttons**: Press to search for channels by category.
- Pause and Replay Buttons**: Pause, rewind, and replay up to 30 minutes of live radio.
- Jump Button**: Press to go back to the previous channel to which you were listening; or press to directly access traffic and weather for the city of your choice.
- Rotary Knob**: Rotate to preview and tune to channels through the channel lineup; also scroll through lists and highlight menu options.