



**EDGE**

HOME 

USER GUIDE

Dock & Play Radio  
with Home Kit





If you experience problems with the operation  
or performance of your SiriusXM product,

**DO NOT RETURN THIS PRODUCT TO YOUR RETAILER.**

Call SiriusXM Listener Care at 1-866-746-7961  
and speak to one of our service representatives.



# Table of Contents

<b>Introduction</b> . . . . .	<b>5</b>	Channel Tuning . . . . .	47
Features . . . . .	6	Jump Settings . . . . .	48
Safety and Care Information . . . . .	7	Set Brightness . . . . .	49
What's in the Box? . . . . .	9	Set Audio Level . . . . .	50
Edge Button Functions . . . . .	10	Signal Indicator . . . . .	51
Home Dock . . . . .	11	Factory Settings . . . . .	52
Remote Control Functions . . . . .	12	Demo Mode . . . . .	53
<b>Home Installation</b> . . . . .	<b>13</b>	<b>Using Edge with a Vehicle Dock</b> . .	<b>55</b>
Step 1: Connect the Home Dock and Dock the Edge Radio . . . . .	14	Find Available FM Channels in Your Area . . . . .	57
Step 2: Place and Aim the Indoor/Outdoor Home Antenna . . . . .	16	Set and Select an FM Channel . . . . .	60
Step 3: Connect the Home Dock to a Stereo System or Powered Speakers . . . . .	21	FM Presets . . . . .	63
<b>Subscribe</b> . . . . .	<b>23</b>	Auto Shut Off . . . . .	64
<b>Using Your Edge</b> . . . . .	<b>27</b>	Using the Vehicle Dock From the Universal Xpress Car Kit . . . . .	65
The Main Display . . . . .	28	Turn FM Transmitter On/Off . . . . .	66
Navigation Basics . . . . .	29	AUX Detect . . . . .	68
Listening to Satellite Radio . . . . .	31	<b>Troubleshooting</b> . . . . .	<b>71</b>
<b>Special Features</b> . . . . .	<b>35</b>	<b>Product Specifications</b> . . . . .	<b>75</b>
Pause & Replay . . . . .	36	Patent Information . . . . .	77
Parental Controls . . . . .	38	Environmental Information . . . . .	77
<b>Where Else Can You Use Your   Edge?</b> . . . . .	<b>43</b>	Indoor/Outdoor Home Antenna Template . . . . .	81
<b>Configuring Your Edge</b> . . . . .	<b>45</b>	<b>SiriusXM 90-Day Limited   Warranty</b> . . . . .	<b>83</b>
Radio ID . . . . .	46		





# Introduction

## Features

### Thank you for purchasing the SiriusXM Edge with Home Kit!

SiriusXM Edge has these exciting features to enhance your overall experience:

- Listen to SiriusXM through your home stereo or powered speakers with easy, do-it-yourself set-up.\*
- Enjoy SiriusXM Xtra Channels - 20+ channels of additional music, sports, entertainment and SiriusXM Latino, a collection of 12 Spanish language channels.\*\*
- Pause, rewind and replay up to 30 minutes of live satellite radio.
- View artist name, song or program title, and channel information on the large color graphic display.
- Use the Remote Control to conveniently operate your Radio from across the room.
- Listen in multiple vehicles, outdoors, at the office, or another home – all with just one subscription.
- Browse other channels while listening to the current one.
- Store up to 10 of your favorite channels for one-touch access.
- Lock and unlock channels with mature content using easy-to-use parental control.
- One-Touch Jump™ back to your previous channel or to traffic and weather for the city of your choice.
- Includes Home Kit - add optional accessories for your vehicles, office, outdoors, or even another home.
- Works on the XM network.

### Please read through this User Guide before using your Edge!

\* Requires home stereo or powered speakers with auxiliary input.

\*\* Access to Xtra channels depends on subscription package. Subscription sold separately.

## Safety and Care Information



**IMPORTANT!** Self installation instructions and tips are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. SiriusXM shall have no liability for damage or injury resulting from the installation or use of any SiriusXM or third party products. SiriusXM product warranties do not cover the installation, removal or reinstallation of any product.

- Do not expose to extreme temperatures (above 140°F or below -4°F, or above 60°C or below -20°C).
- Do not expose to moisture. Do not use device near or in water. Do not touch the device with wet hands.
- Do not let any foreign matter spill into device.
- Do not store in dusty areas.
- Do not expose to chemicals such as benzene and thinners. Do not use liquid or aerosol cleaners. Clean with a soft damp cloth only.
- Do not expose to direct sunlight for a prolonged period of time, and do not expose to fire, flame, or other heat sources.
- Do not try to disassemble and/or repair device yourself.
- Do not drop your device or subject it to severe impact.
- Do not place heavy objects on device.
- Do not subject device to excessive pressure.
- If the LCD screen is damaged, do not touch the liquid crystal fluid.

# Introduction


## Warning!

- Opening the case may result in electric shock.
- Make sure that you insert the Home Power Adapter's plug all the way into the outlet.
- If the liquid crystal fluid comes in contact with your skin, wipe the skin area with a cloth and then wash the skin thoroughly with soap and running water. If the liquid crystal fluid comes into contact with your eyes, flush the eyes with clean water for at least 15 minutes and seek medical care. If the liquid crystal fluid is ingested, flush your mouth thoroughly with water. Drink large quantities of water, and induce vomiting. Seek medical care.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.


Your device should be placed in your vehicle where it will not interfere with the function of safety features, e.g., deployment of airbags. Failure to correctly place device may result in injury to you or others, if the unit becomes detached during an accident and/or obstructs the deployment of an airbag.



## What's in the Box?

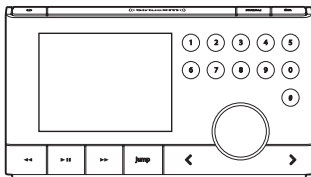


Edge Radio

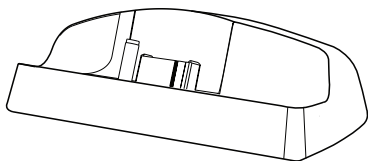


Home Dock



 
Indoor/Outdoor  
Home Antenna



Home Power  
Adapter

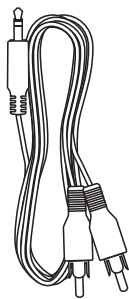

Stereo Audio  
Cable

 

Remote Control

# Introduction

## Edge Button Functions

### Power Button

Press to turn Radio on and off.

### Menu Button

Press to access advanced features and configuration options; in configuration options, press and hold to return to main display screen.

### FM Button

Press to access and cycle through FM presets (Vehicle Dock only).

### Number Buttons

Press to tune to a stored favorite channel, press and hold to store a favorite channel; also enter a channel number.

### Direct Button

Press first before entering the channel number, to directly tune to a channel.

### Select Button


Press to confirm selection of highlighted items in a menu or list, and of settings.

### Left and Right Buttons

Press to search for channels by category.

### Rotary Knob

Rotate to preview and tune to channels through the channel lineup; also scroll through lists and highlight menu options.

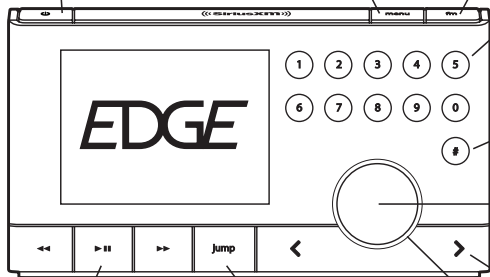

### Pause and Replay Buttons

Pause, rewind, and replay up to 30 minutes of live radio.


### Jump Button

Press to go back to the previous channel to which you were listening; or press to directly access traffic and weather for the city of your choice.

## Home Dock

### Color-Coded Connections

The color-coded Home Dock makes it simple to connect. Just match the colors on the cable ends to the colors on the dock to see what goes where.

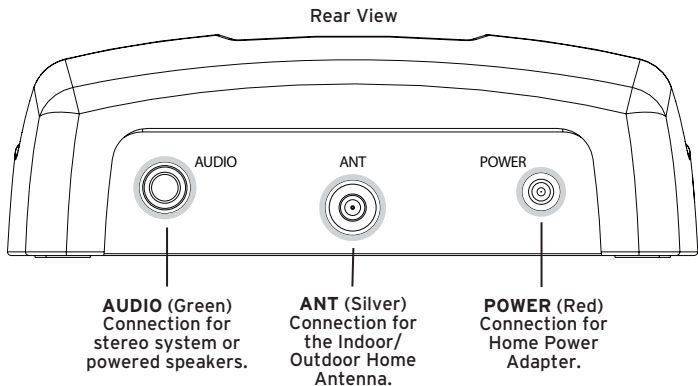

# Introduction

## Remote Control Functions

### Power Button

Press to turn Radio on and off.

### Pause and Replay Buttons

Pause, rewind, and replay up to 30 minutes of live radio.

### Select Button

Press to confirm selection of highlighted items in a menu or list.

### Not Used

### - / FM Button

**FM:** Press to access and cycle through FM presets (Vehicle Dock only).


**- :** Not used.

### Number Buttons

Press to tune to a stored favorite channel, press and hold to store a favorite channel; also enter a channel number.

### Jump Button

Press to go back to the previous channel to which you were listening; or press it to directly access traffic and weather for the city of your choice.

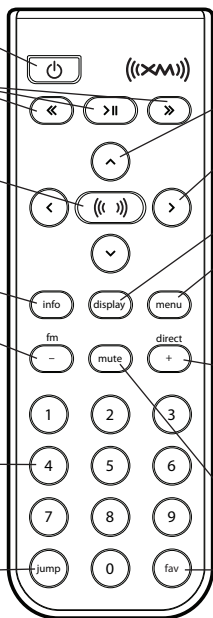

### Arrow Buttons Up/Down

Press to preview and tune to channels through the channel lineup; also press to scroll through lists and highlight menu items.

### Arrow Buttons Left/Right

Press to search for channels by category.

### Not Used

### Menu Button

Press to access advanced features and configuration options; in configuration options, press and hold to return to main display screen.

### + / Direct Button

**Direct:** Press first before entering the channel number, to directly tune to a channel.

**+** : Not used.

### Mute Button

Press to silence SiriusXM audio.

### Not Used

# Home Installation

# Home Installation

There are several parts to setting up your Home Kit. Follow these 3 steps for an easy installation.


## Step 1: Connect the Home Dock and Dock the Edge Radio

When installing the Home Dock in your home, choose a location in close proximity to your stereo system or powered speakers, and also where the cable from the Indoor/Outdoor Home Antenna can reach the Home Dock. The location should be easily accessible and provide good visibility of the display, but should not be located where it will be in direct sunlight, which will affect the visibility of the display screen.

### A. Connect the Indoor/Outdoor Home Antenna


Once you have selected a location, connect the antenna to the **silver ANT** connector at the rear of the Home Dock.

We will work on the location and aiming of the antenna in the next step.

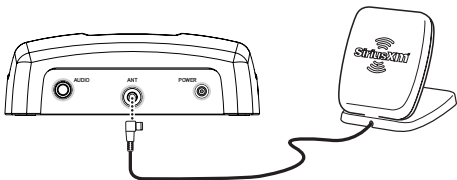



## B. Connect the Home Power Adapter

Connect the Home Power Adapter to the **red Power** connector at the rear of the Home Dock, and plug it into a wall outlet.

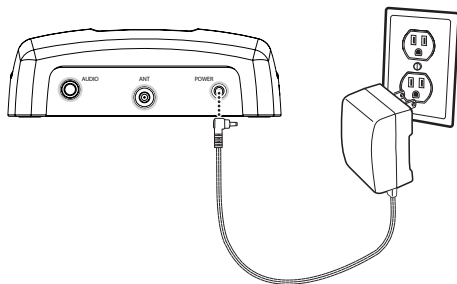

## C. Dock the Edge Radio

Place your Edge Radio into the Home Dock and press the **Power** button to turn it on.

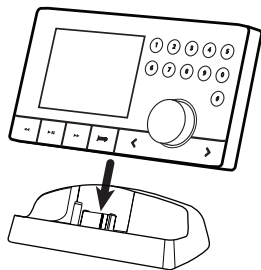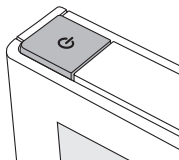


# Vehicle Installation

## Step 2: Place and Aim the Indoor/Outdoor Home Antenna

To begin, try experimenting with the Indoor/Outdoor Home Antenna to get a feel for the reception in your location. In major metropolitan areas, you might find that you get great reception in several locations without worrying too much about aim and placement. If two to three bars of signal strength are being displayed at the upper left corner of the screen, continue with step 3 on page 21.

If there is not at least two bars of signal strength displayed, refer to "Signal Indicator" on page 51 and access the **Signal Indicator** screen to see a visual indication of signal strength. Move the antenna around the room or from room to room. Aim it from different windows. If you find a location where you are receiving good Satellite or Terrestrial signal strength (or both), press and hold **menu** to exit the Signal Indicator screen. The radio should be tuned to channel 1, the XM Preview channel. Continue with the step 3 on page 21.

If you are unable to find a location where you are receiving good Satellite or Terrestrial signal strength, try some of the suggestions which follow.

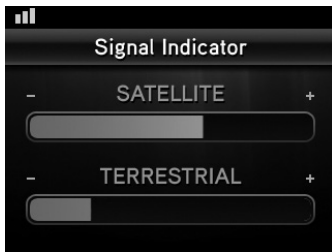




## Other Indoor/Outdoor Home Antenna Installation Suggestions



**NOTE!** If the signal reception is low, intermittent, or **No Satellite Signal** is displayed, after a period of time the Radio may enter demo mode. Demo mode is a feature for retail display purposes, and the Radio will automatically exit demo mode once it begins to receive a good signal. To exit demo mode immediately, press and hold the **Select** button for 10 seconds. Demo mode can be disabled, if desired, by following the instructions in "Demo Mode" on page 53.

Try moving the Indoor/Outdoor Home Antenna closer to a window, ideally one that is facing due south.

Not sure which way is south? Think about where the sun rises (in the east) and sets (in the west). Then stand so that east is to your left and you'll be facing south. Is there a window in the direction you're facing? Move the antenna closer to the window.

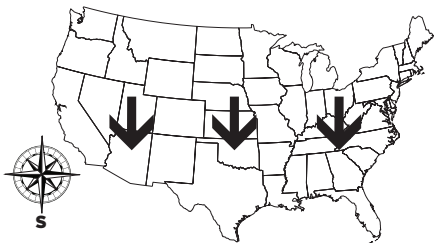

**TIP!** Still not sure which way is south or where to place your Indoor/Outdoor Home Antenna? Look up your location on an online mapping website that offers satellite views of street addresses where you can easily see which way is south, and what window may offer an unobstructed view of the sky.

Another easy method is to start at any window, then work from window to window in a simple pattern to find the window gives the best signal strength. Note that the antenna must also have an unobstructed view, with no trees or buildings blocking its aim. If the antenna is aimed through a window, be aware that blinds, screens, or any other non-glass elements such as thermal insulation can sometimes cause reception issues. If this is the case, you may want to use another window or place the antenna outside of the window.

# Home Installation



If you find a window that gives you good signal strength, you can place the antenna on the windowsill. The antenna may need to be placed on something to raise it above the level of the window frame.

If you don't have a window where you receive a consistent signal, or placing the antenna in a window is not a practical solution for you, **BETTER** reception can be achieved by placing the antenna outside on a window ledge, porch, table, or patio. The location you choose should provide the antenna with a clear view of the southern sky.

If none of the previous solutions work for you, then the **BEST** reception can be achieved by mounting the antenna outdoors, with a clear view of the southern sky.

Note that you will want to consider any potential hazards when you choose the mounting location, and possibly consider professional installation. Sirius XM Radio Inc. is not liable for any damages.

To mount the antenna, you will need four screws (not included) with a 1/4" head (e.g., an M3 screw), and that are suitable for the material onto which you are affixing the antenna, (e.g., wood, metal, etc.). The screws should be spaced 1-3/8" apart horizontally

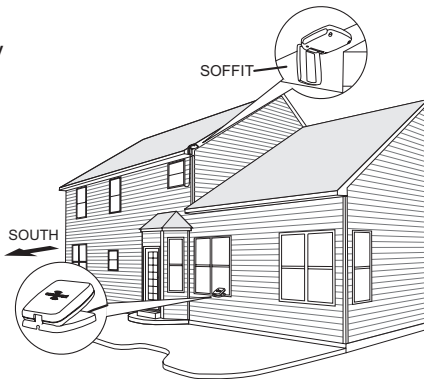
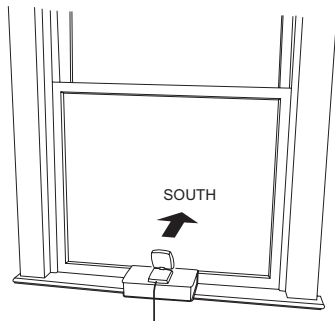


and 1-1/8" vertically. Refer to the template on "Indoor/Outdoor Home Antenna Template" on page 81.

Once you have found a suitable location for the antenna, route the antenna cable to the Home Dock. Be sure you avoid any obstructions that could crimp, kink, or twist the cable. Use protective grommets wherever rough openings are encountered. If the antenna is installed outdoors, route the cable from the antenna location to the interior of the home, working the cable through the basement, under a window sill, etc., and make adjustments to take up cable slack as necessary. Reconnect the antenna to the **silver ANT** connector at the rear of the Home Dock.



**TIP!** If your Indoor/Outdoor Home Antenna's cable isn't long enough, visit [www.siriusxm.com/accessories](http://www.siriusxm.com/accessories), or your favorite retailer, and consider a 50 ft. Home Antenna Extension Cable or a Wireless Home Signal Repeater.

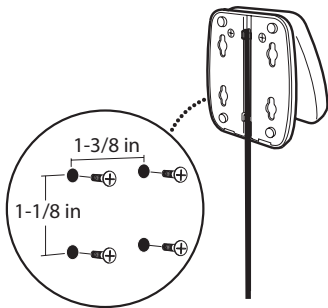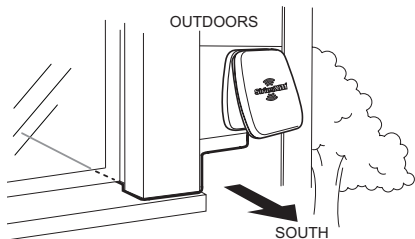


Verify that the antenna is pointed south, and that the antenna's view of the sky is not blocked by a tree, a building, a bridge, or anything else. Try various locations until you find one where are receiving a good signal.

The Indoor/Outdoor Home Antenna's reception can also be tweaked by opening or closing the antenna clamshell, and turning the antenna. While observing the

# Home Installation

signal strength, make small adjustments to the angle of tilt of the clamshell until the highest possible signal strength is achieved. If you have not wall-mounted the antenna, turn the antenna slightly to the right or left and observe if the signal strength increases. For each tweak, allow a few seconds in each position to determine if the signal strength increases.

If the signal strength is good for either Satellite or Terrestrial (or both), exit the Signal Indicator screen by pressing and holding **menu**. If the Radio is displaying channel 1, the XM Preview channel, with two to three bars of signal strength

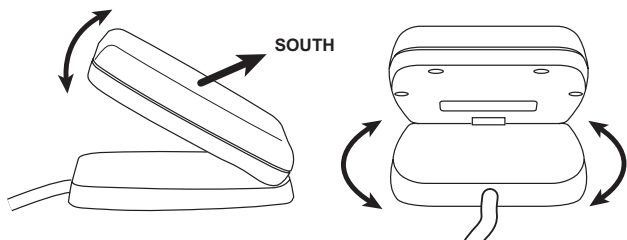

displayed at the upper left of the screen, continue with the next step, otherwise, continue trying other locations for the antenna.




## Step 3: Connect the Home Dock to a Stereo System or Powered Speakers

The Home Dock can be connected to your stereo system, or to a set of powered speakers. If you are connecting to a stereo system, see the following section. If you are connecting to a set of powered speakers, see “To Connect the Home Dock to Your Powered Speakers” on page 22.

### *To Connect the Home Dock to Your Stereo System*

The Home Dock can be connected to your stereo system through the **AUX In** or **LINE In** connection of your stereo system, using the provided Stereo Audio Cable.

- 1 Take the provided Stereo Audio Cable and connect the single 1/8" (3.5 mm) connector to the **green AUDIO** connector at the rear of the Home Dock.
- 2 Connect the white left and red right Stereo Audio Cable connectors (“L” and “R” are also on each respective tip) to any available input other than PHONO on your stereo system. (If your stereo’s inputs are marked red and black, simply connect the white plug to the black input.)
- 3 Turn the stereo system On, and make sure you select the correct input on your stereo system for the **AUX In** or **LINE In** connection.

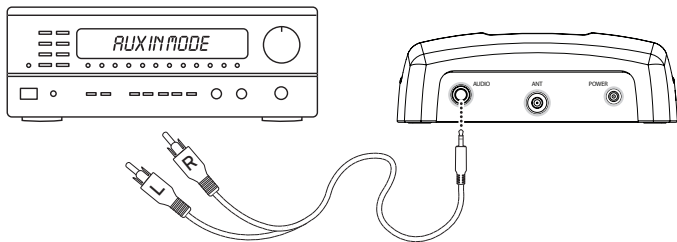


# Home Installation

- 4 Ensure Edge is tuned to channel 1, the XM Preview channel. If you have connected everything correctly, and you are receiving signal, you should hear the SiriusXM audio from channel 1.
- 5 The audio level of your Radio can also be adjusted, if necessary. Refer to "Set Audio Level" on page 50 to adjust the audio level.

## *To Connect the Home Dock to Your Powered Speakers*

The Home Dock can be connected directly to a set of powered speakers.

- 1 Connect the 1/8" (3.5 mm) connector from the powered speakers to the **green AUDIO** connector at the rear of the Home Dock.
- 2 Plug the powered speakers into a wall outlet.
- 3 Turn On the powered speakers.
- 4 Ensure Edge is tuned to channel 1, the XM Preview channel. If you have connected everything correctly, and you are receiving signal, you should hear the SiriusXM audio from channel 1.
- 5 The audio level of your Radio can also be adjusted, if necessary. Refer to "Set Audio Level" on page 50 to adjust the audio level.

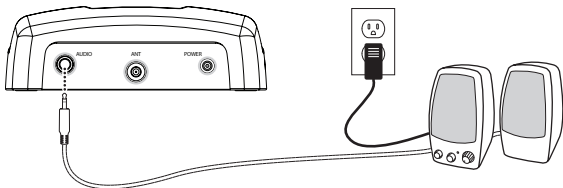


**Subscribe**

# Subscribe

You can either follow the general activation and subscription process or use the on-board activation guide to activate your Edge and subscribe to the SiriusXM service.

## *General activation and subscription process:*

- 1 Make sure your Edge is turned on, tuned to channel 1, the XM Preview channel, and receiving signal so that you can hear the SiriusXM audio.
- 2 Make a note of the Radio ID. You can find it:
  - by selecting **Radio ID** in menu items
  - by tuning to channel 0 (zero)
  - on a label on the bottom of the gift box
  - on the label on the back of your Edge
- 3 To subscribe:
  - Online: Go to [www.siriusxm.com/activatenow](http://www.siriusxm.com/activatenow) to access or set up an online account, subscribe to the service, and activate your Radio.
  - OR
  - By phone: Call **1-866-635-2349**.
- 4 Activation usually takes less than 15 minutes after you have completed the subscription process, but sometimes may take up to an hour. We recommend that your Radio remain on until activated. When your service is

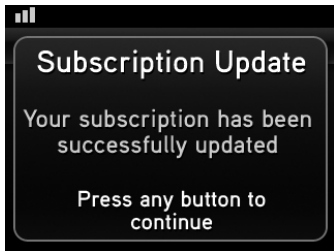



activated, Edge will display an alert message. To continue, press any button.

Turn the **Rotary Knob** to tune to other channels, and press **<** or **>** to browse the different categories of channels. Learn what all the buttons do by turning to “Navigation Basics” on page 29.

### ***Activation guide:***

For your convenience, Edge has an on-board activation guide. You can activate your Radio and subscribe to the SiriusXM service by using this guide, where you will be guided step-by-step through the subscription process. To access and use the guide, simply follow these steps:

- 1** Press **menu**.
- 2** **Activate Radio** will be highlighted. Press the **Select button**.
- 3** Follow the directions on each successive screen until you complete the subscription process.



### **IMPORTANT NOTE ABOUT SUBSCRIPTIONS:**

**SiriusXM subscriptions are sold separately and are continuous until you call us at 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com).** All fees and programming are subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and DC. Our Sirius satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. Certain channels are not available on our Internet radio service, including MLB® play-by-play.




# Using Your Edge

# Using Your Edge

## The Main Display

When listening to a channel, information about the channel and what is currently playing is displayed.

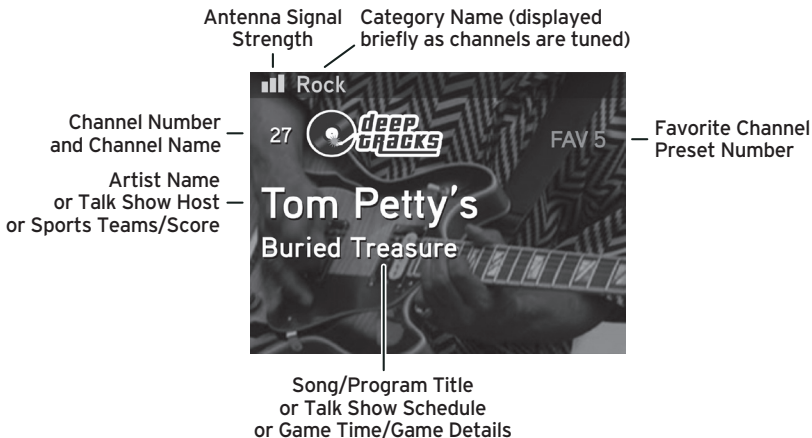

## Navigation Basics

### Power Button

Pressing the **Power button** turns Edge On or Off.



### Rotary Knob and Select Button

- **Rotary Knob:** Rotating clockwise or counter-clockwise previews and tunes to channels through the channel line up. Also, scrolls through lists and highlights an item in the list.
- **Select button** (press and release): Pressing in the center selects a highlighted item in a menu or list and confirms settings.



### Category Buttons

Pressing **<** or **>** displays the channel categories such as Rock, Pop, Sports, Talk/News, etc. Repeated presses cycle through the categories one at a time.



### Menu Button

Pressing **menu** displays various options to make setup and feature changes. Pressing **menu** when in menu options returns to the previous menu option screen until menu options is exited. Pressing and holding **menu** returns to the main display screen in most instances.



# Using Your Edge

## FM Button (Applies to Vehicle Dock)

Pressing **FM** provides easy tuning of FM presets for optimized *PowerConnect* performance. Repeatedly pressing **FM** displays and cycles through the list of preset FM channels one at a time. The Radio automatically tunes to the displayed FM channel. Pressing and holding **FM** accesses the FM Settings menu. It is not available when an Aux In Cable or Cassette Adapter is used for audio connection.

A rectangular button with a light gray background and a thin black border, containing the lowercase letters "fm" in a dark gray font.

## Jump Button

Depending on how it is configured, pressing **jump** either tunes to the channel broadcasting traffic and weather conditions of a city of your choice, selected from a list of the 22 most congested cities, or tunes to the previous channel that was being played. Pressing it again returns it to the original channel.

A rectangular button with a light gray background and a thin black border, containing the word "jump" in a dark gray font.

## Pause and Replay Buttons

Replays approximately 30 minutes of live radio. ▶|| plays/pauses, ◀◀ rewinds, and ▶▶ fast-forwards through temporarily stored content.

A horizontal row of three rectangular buttons with light gray backgrounds and thin black borders. From left to right: a button with two left-pointing arrows (◀◀), a button with a vertical bar and two right-pointing arrows (▶||), and a button with two right-pointing arrows (▶▶).

## # Button

Pressing **#** prompts for the entry of a channel number using the number buttons. Once the channel number is entered, the Radio directly tunes to the new channel.

A circular button with a light gray background and a thin black border, containing a dark gray hash symbol (#).

## Number Buttons

Each number button stores a favorite channel in its button location and provides one touch access to it afterward. Number buttons also directly tune to a channel when the channel number is entered after pressing **#**.

A row of three circular buttons with light gray backgrounds and thin black borders. The first button contains the number "1", followed by three dots "...", and the last button contains the number "0".

## Listening to Satellite Radio

### *Tune to a channel:*

Turn the **Rotary Knob** to immediately tune to the next or previous channel. When changing channels, the channel category will be displayed briefly at the top left of the screen.

### *View a category:*

Channels are organized into categories to make it easier for you to find the ones that suit your taste.

To view channels in a category in list mode press **<** or **>**.

- 1 Scroll through the category by turning the **Rotary Knob**, and find the channel you want.
- 2 Press the **Select button** to select the channel, or press **<** or **>** to view channels in the previous or next category.



**TIP!** To briefly listen to each channel in the category, scroll to and highlight Scan at the end of the category list and press the **Select button**. Refer to “Scanning Channels in a Category” on page 34 to learn more about Scan.



**TIP!** See “Channel Tuning” on page 47 to learn about the two different channel tuning modes.

Channel Tuning set to  
Tune by Channel



Channel Tuning set to  
Tune by Category




# Using Your Edge

## Direct Tune

A channel can be tuned directly by entering the channel number using the number buttons.

- 1 To directly tune to a channel press **#**.
- 2 Use the number buttons **0-9** to enter the channel number and wait a moment until the channel is tuned, or press the **Select button** to immediately tune to the channel.

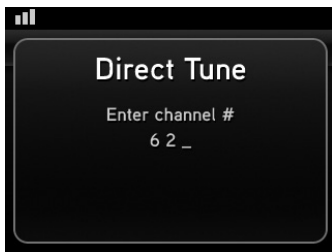

## Jump

Depending upon how you configure the mode, pressing **jump** will either tune to the traffic and weather channel for the city of your choice which you select from a list of the 22 most congested cities, or tune to the last channel to which you were listening.



**TIP!** By default **jump** is configured to tune to a traffic/weather channel. To select a city for traffic and weather, or to configure **jump** to tune to the last channel to which you were listening, refer to “Jump Settings” on page 48.

## Return to Main Display Screen

Pressing and holding **menu** in most instances will return you to the main display screen. In some cases, you may need to follow the instructions on the display screen.




## Favorite Channels



You can set up to 10 of your favorite channels so you can easily access them. Each favorite channel can be assigned to a number button.

### *To assign a favorite channel to a number button:*

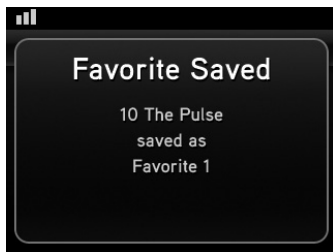- 1 Tune to the desired channel.
- 2 Press and hold a number button between **0-9** that you want to assign to that favorite channel. An advisory with the channel number and name will be displayed on the screen confirming that the channel has been assigned.



### *To listen to a favorite channel:*

- 1 Press the number button between **0-9** that was assigned to the desired favorite channel. Edge will tune to that channel.
-  **TIP!** When you are at the main display screen, press  to see your list of favorite channels. Scroll to highlight a favorite and press the **Select button** to listen to that channel.


# Using Your Edge

## Scanning Channels in a Category

You can scan a category and listen to each channel for 10 seconds before Edge automatically tunes to the next channel. If you want to stay tuned to the channel being played and stop the scan, just press the **Select** button.

### *To scan a category:*

- 1 Press **<** or **>** until the desired category is displayed.
- 2 Scroll down to highlight the last item in the category which will be **Scan** and the category name.
- 3 Press the **Select** button. The scan will begin.
- 4 Press the **Select** button to stop the scan, and to continue to listen to the channel currently being played, or turn the **Rotary Knob** to return to the channel you were listening to before you began the scan.

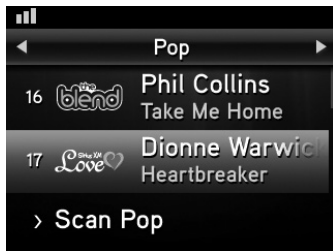

# Special Features

# Special Features

## Pause & Replay

Pause & Replay gives you the opportunity to “hear that again” by temporarily storing and letting you access content of the currently tuned channel which played in approximately the last 30 minutes. Pressing ►|| or ◀◀ places Edge into Replay mode.



**TIP!** This feature applies to the current channel to which you are listening, and for the current tuning and listening session only. Changing channels or turning off Edge removes the temporarily stored content from the Radio.

### To Play/Pause:

- 1 Press and release ►|| to pause the live broadcast. At this point the Radio will mute and continue to store live audio.

Length of Stored Content Behind Play/Pause Point — 10:00 — [Play/Pause] — Time Behind Live Broadcast — -3:01

- 2 Pressing and releasing ►|| again will begin playing stored audio from the point at which the program was paused.



**TIP!** Pressing ◀ (or pressing ◀ twice, if favorite channels are stored) will show the **Replay List**. A listing of artist names and song or show titles are shown for the stored audio from most recent to oldest, beginning with entry called “Go to live”. Turn the **Rotary Knob** to scroll to highlight a song or program and press the **Select** button to play it. Choosing “Go to live” exits Pause & Replay mode

and resumes playing the live broadcast.

***To listen to the previous track:***

- 1 Press and release ◀◀ to rewind to the beginning of the current song or program.
- 2 Repeated press and releases skips backwards to the start of the previous songs or programs until the beginning of the stored audio is reached. When the beginning is reached, playback automatically begins.



**TIP!** Pressing and holding ◀◀ rewinds through stored audio. Playback begins when the button is released. If beginning of the stored audio is reached, playback automatically begins.

***To listen to the next track:***

- 1 Press and release ▶▶ to skip forward to the start of the next song or program.
- 2 Repeated press and releases skips forward to the beginning of the next songs or programs until the end of stored audio is reached. When the end is reached, Edge exits Pause & Replay mode and resumes playing the live broadcast.



**TIP!** Pressing and holding ▶▶ advances through the stored audio. Playback begins when button is released. If end of stored audio is reached, Edge exits Pause & Replay mode and resumes playing the live broadcast.


***To listen to live broadcast:***


- 1 Pressing and holding ▶|| while Edge is in Pause & Replay mode exits Pause and Replay mode and resumes playing the live broadcast.

# Special Features

## Parental Controls


Edge has a parental control feature which allows you to lock access to channels, or lock access to an entire category. A 4-digit code controls access to the locked channel or locked category.

When you browse a category, the channel information of the locked channel will be shown but not the artist and song/program information. Instead, a lock icon  and the word "Locked" is shown. If you scroll through the channels using the **Rotary Knob**, the locked channels are skipped and are neither displayed, nor tuned.


If you attempt to tune to a locked channel, either by using direct tune or through the category list, you'll be prompted to enter your 4-digit code. When the correct code is entered, you'll be able to tune to and listen to the channel. All locked channels become unlocked and remain unlocked until you turn Edge Off, and back On. In the category list, the previously locked channels will show an unlocked icon .



### To turn Parental Controls On (or Off):

- 1 Press **menu**.
- 2 Press  to scroll to and highlight **Parental Controls**. Press the **Select button**.
  - **If this is the first time** you want to turn on Parental Controls, **Parental Controls** will be highlighted. Press the **Select button**. You will be prompted to select a 4-digit code:

- i. For each digit, press one of the 0-9 keys (or turn the **Rotary Knob** to select digits) and then press **>** to advance to the next digit. (Press **<** if you need to go back and edit a previous digit.)
  - ii. When you have selected all 4 digits of your code press the **Select button**.
  - iii. The Code Confirmation screen will be displayed. For your records, write down the code you have selected. Press the **Select button**. Continue with step 3.
- If you had previously selected a 4-digit code you will be prompted to enter your code:
    - i. For each digit, press one of the 0-9 keys (or turn the **Rotary Knob** to select digits) and then press **>** to advance to the next digit. (Press **<** if you need to go back and edit a previous digit.)
    - ii. When you have selected all 4 digits of the code press the **Select button**.
- 3 At the "Parental Controls" screen, **Parental Controls** will be highlighted. Press the **Select button** to turn parental control On (or press the **Select button** to turn parental control Off).
  - 4 Press and hold **menu** to return to the main display screen.

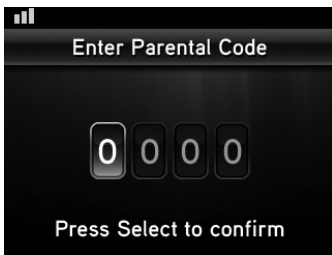


# Special Features


*To lock (or unlock) channels or categories:*

- 1 Press **menu**.
- 2 Turn the **Rotary Knob** to scroll to and highlight **Parental Controls**. Press the **Select button**.
- 3 You will be prompted to enter the 4-digit code. For each digit, press one of the **0-9** keys (or turn the **Rotary Knob** to select digits) and then press **>** to advance to the next digit. (Press **<** if you need to go back and edit a previous digit.)
- 4 When you have entered all 4 digits of the code press the **Select button**.
- 5 If **Parental Controls** is shown as Off, press the **Select button** to turn it On, otherwise continue with the next step.
- 6 At the "Parental Controls" screen, turn the **Rotary Knob** to scroll to and highlight **Locked Channels**. Press the **Select button**.
- 7 A list of all the categories and the channels in each category will be displayed. Turn the **Rotary Knob** to scroll to and highlight a channel or category you want to lock. Press the **Select button**. A lock icon **🔒** will be displayed to the left of the channel or category you locked. (To unlock a

Locked Channels

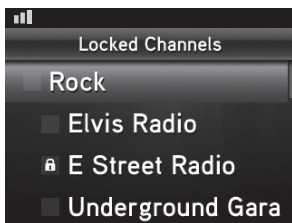

Locked Categories

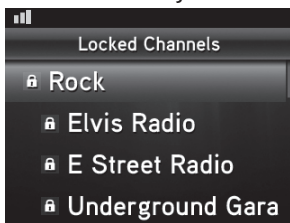



locked channel or category, simply highlight the locked channel or category and press the **Select button**. The lock icon will disappear indicating the channel or category is unlocked.)

- 8 You can continue to lock and unlock as many channels or categories as you wish. When you are finished, press and hold **menu** to return to the main display screen.

**To change your code:**

- 1 Press **menu**.
- 2 Turn the **Rotary Knob** to scroll to and highlight **Parental Controls**. Press the **Select button**.
- 3 You will be prompted to enter your existing 4-digit code. For each digit, press one of the **0-9** keys (or turn the **Rotary Knob** to select digits) and then press **>** to advance to the next digit. (Press **<** if you need to go back and edit a previous digit.)
- 4 When you have entered all 4 digits of the code press the **Select button**.
- 5 If **Parental Controls** are shown as Off, press the **Select button** to turn it On, otherwise continue with the next step.
- 6 At the "Parental Controls" screen, turn the **Rotary Knob** to scroll to and highlight **Change My Code**. Press the **Select button**.
- 7 You will be prompted to enter a new 4-digit code. For each digit, press one of the **0-9** keys (or turn the **Rotary Knob** to select digits) and then press **>** to advance to the next digit. (Press **<** if



# Special Features

you need to go back and edit a previous digit.)

- 8 The Code Confirmation screen will be displayed. For your records, write down the code you have selected. Press the **Select button**.
- 9 Press and hold **menu** to return to the main display screen.

## *To listen to a locked channel:*

There are two ways to tune to a channel which has been locked. The first is to directly tune to the locked channel, and the second is to select the locked channel from a category list.


- 1 Directly tune to or select the locked channel:

### To directly tune to a locked channel:

- i. Press **#** and enter the channel number using the **0-9** keys.

### To select a locked channel from the category list:

- i. Press **<** or **>** to view the category list of the locked channel to which you wish to tune.
- ii. Turn the **Rotary Knob** to scroll to and highlight the locked channel. Press the **Select button**.

- 2 You will be prompted to enter your existing 4-digit code. For each digit, press one of the **0-9** keys (or turn the **Rotary Knob** to select digits) and then press **>** to advance to the next digit. (Press **<** if you need to go back and edit a previous digit.)
- 3 When you have entered all 4 digits of the code, press the **Select button**. If your code is correct the channel will be tuned. All locked channels become unlocked and remain unlocked until you turn Edge Off and back On. In the category list, the previously locked channels will show an unlocked icon .

**Where Else Can You Use Your Edge?**

# Where Else Can You Use Your Edge?

SiriusXM offers a variety of accessories that allow you to adapt your Edge to your lifestyle and enhance your listening experience. With these accessories, you can effortlessly take your satellite radio listening experience from your home or office to your vehicle or on the go – all with a single subscription.

- In Your Vehicle - With Vehicle Kits, you can enjoy your Edge in each of your vehicles.
- In Your Office, Other Homes, etc. - With additional Home Kits, you can play your Edge through an existing stereo system or powered speakers where you work, or in other homes.
- In Almost Any Location You Like - With a Portable Speaker Dock you have the freedom to listen to your Edge where and when you want, from your kitchen or den, to the office, to outside on the deck, or at a picnic.

For more information on accessories or to purchase an accessory, please visit your local retailer or [www.siriusxm.com/accessories](http://www.siriusxm.com/accessories).

# Configuring Your Edge


# Configuring Your Edge

## Radio ID

Your Edge has an 8 character alphanumeric ID which uniquely identifies your Radio. This ID is used during the subscription process.

### *To display the Radio ID:*

- 1 Press **menu**.
- 2 **Radio ID** will be highlighted. If it is not highlighted, turn the **Rotary Knob** to scroll to and highlight **Radio ID**. Press the **Select button**. The Radio ID will be displayed.
- 3 Press and hold **menu** to return to the main display screen.

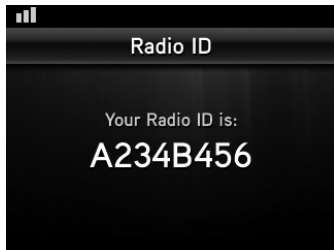


## Channel Tuning

Channel tuning controls the way channels are displayed when using the Rotary Knob to preview and tune to channels through the channel line up. During this time, the category of each channel is shown at the top of the screen. There are two different channel tuning modes, Tune by Channel and Tune by Category. The default setting is Tune by Channel.

- **Tune by Channel:** Channels are displayed in ascending or descending numerical order, regardless of their category. The numerical channel numbers are shown when channels in a category are viewed in list mode.
- **Tune by Category:** Channels are grouped and displayed according to their category such as Rock, Pop, Christian, etc., regardless of numerical channel number. Once you have scrolled through all the channels in a category, the channels in the next category are shown. The numerical channel numbers are not shown when channels in a category are viewed in list mode.

### *To change the Channel Tuning mode:*

- 1 Press **menu**.
- 2 Turn the **Rotary Knob** to scroll to and highlight **Channel Tuning** and press the **Select** button.
- 3 Turn the **Rotary Knob** to select the desired channel tuning mode.
- 4 Press the **Select** button to confirm channel tuning mode.
- 5 Press and hold **menu** to return to the main display screen.

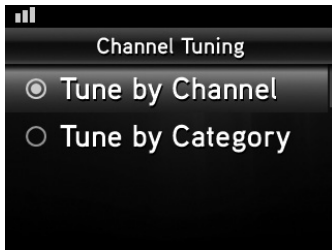



# Configuring Your Edge

## Jump Settings

The **jump** button can be configured to either jump to the traffic and weather for the city of your choice from a list of 22 of the most congested cities, or to jump back to the last channel to which you were listening. When configuring for traffic/weather, you'll need to select your city.

### *To configure jump:*


- 1 Press **menu**.
- 2 Turn the **Rotary Knob** to scroll to and highlight **JUMP Settings** and press the **Select button**.
- 3 **Mode** will be highlighted with either **Last Channel** or **Traffic/Weather**. If you want to change the mode, press the **Select button**. Otherwise, just leave it as shown. (Repeatedly pressing the **Select button** toggles between the choices.)
- 4 If you have selected **Last Channel**, press and hold **menu** to return to the main display screen. If you have selected **Traffic/Weather** continue with step 5.
- 5 Turn the **Rotary Knob** to scroll to and highlight **Set Location** and press the **Select button**.
- 6 A list of cities will be displayed. Turn

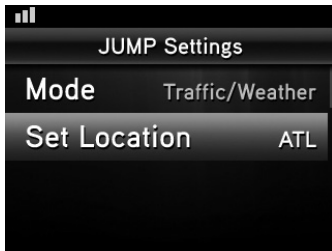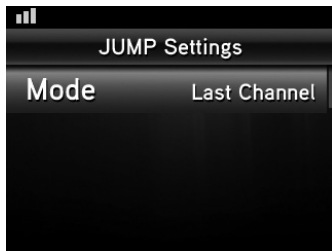



the **Rotary Knob** to scroll to and highlight your desired city and press the **Select button**.


- 7 The **JUMP Settings** screen will display the location you selected. Press and hold **menu** to return to the main display screen.

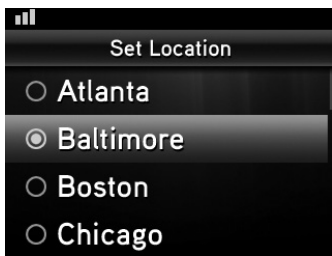

## Set Brightness

*To change the display's brightness:*

- 1 Press **menu**.
- 2 Turn the **Rotary Knob** to scroll to and highlight **Brightness** and press the **Select button**.
- 3 Turn the **Rotary Knob** to increase the brightness of the display.
- 4 Press the **Select button** to confirm the brightness setting.
- 5 Press and hold **menu** to return to the main display screen.

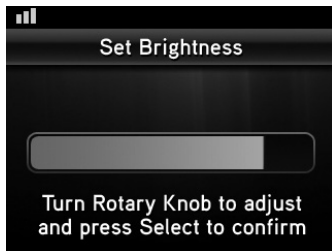

# Configuring Your Edge


## Set Audio Level

The audio level of Edge can be adjusted when an audio connection is made between the dock and the vehicle's stereo system. Audio level is used to adjust Edge's volume level to match the volume of other audio sources you may use, such as a CD player, other FM stations, or an MP3 player.

Do not use the audio level as a volume control. Use the volume control on your vehicle's stereo instead.

### *To adjust the audio level:*

- 1 Press **menu**.
- 2 Turn the **Rotary Knob** to scroll to and highlight **Audio Level** and press the **Select button**.
- 3 Turn the **Rotary Knob** to increase the audio level.
- 4 Press the **Select button** to confirm the new audio level.
- 5 Press and hold **menu** to return to the main display screen.

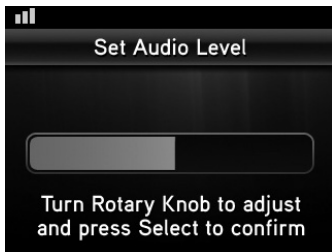


## Signal Indicator

For best reception, your Magnetic Mount Antenna should have an unobstructed view of the SiriusXM satellites. In large cities, there are terrestrial transmitters (ground repeaters) to help increase the signal coverage.

Your Edge can display the received strength of the satellite and terrestrial signals being received.

### *To display the signal strength:*

- 1 Press **menu**.
- 2 Turn the **Rotary Knob** to scroll to and highlight **Signal Indicator** and press the **Select** button.
- 3 The Satellite and Terrestrial bars show the strength of the signal being received.
- 4 Reposition the antenna if you are having trouble receiving the signal. Be sure your vehicle is outside with an unobstructed view of the sky.
- 5 Press and hold **menu** to return to the main display screen.

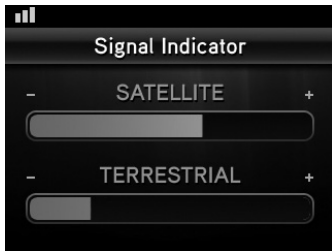

# Configuring Your Edge

## Factory Settings

The factory settings menu has two choices, **AUX Detect** and **Restore Defaults**. Aux Detect applies to the Vehicle Dock only (refer to page 68).

### Restore Defaults



You can clear all of your personal settings, such as favorite channels, FM presets, etc., and return the Radio to its original out-of-the-box settings

*To reset Edge to factory defaults:*



**NOTE!** Restoring defaults permanently removes all personal settings.

- 1 Press **menu**.
- 2 Turn the **Rotary Knob** to scroll to and highlight **Factory Settings** and press the **Select** button.
- 3 Turn the **Rotary Knob** to scroll to and highlight **Restore Defaults** and press the **Select** button.
- 4 A warning screen will be displayed. If you are certain that you want to reset your Edge to the default settings, press the **Select** button to confirm.
- 5 If you want to cancel, press **menu** to return to **Factory Settings**.

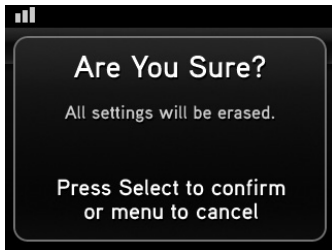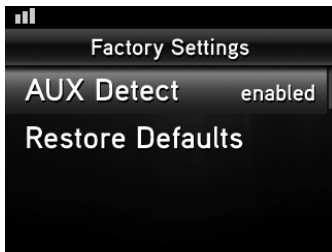


## Demo Mode

Your Edge has a demo mode that starts playing when, for a prolonged period of time (more than 1 hour), the Radio either detects it's not connected to the antenna, or the antenna stops receiving a signal. It disappears when the antenna is connected properly or when the Radio starts receiving a signal. You can also exit demo mode at any time, by pressing and holding the **Select button** for 10 seconds. If desired, you can also manually put Edge in demo mode.

The ability for Edge to enter demo mode is enabled by default. If you don't want Edge to ever enter the demo mode, you can disable the demo feature. You can enable it again at another time if desired.


### *To enable or disable the demo mode:*

- 1 Press **menu**.
- 2 Turn the **Rotary Knob** to scroll to and highlight **Demo Mode** and press the **Select button**.
- 3 **Status** will be highlighted. Press the **Select button** to toggle the setting between enabled or disabled. (Repeatedly pressing the **Select button** toggles between the choices.)
- 4 If you have selected disabled, press and hold **menu** to return to the main display screen. If you have selected enabled continue with step 5.
- 5 Turn the **Rotary Knob** to scroll to and highlight **Enter Demo Mode** and press the **Select button**. The demo mode will start in 10 seconds.

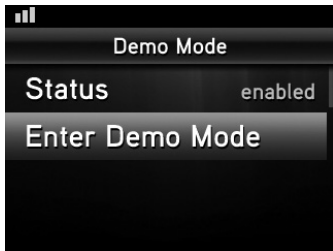

# Configuring Your Edge

- 6 To exit demo mode at any time, press and hold the **Select** button for 10 seconds.

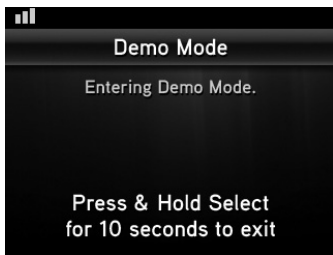

# Using Edge with a Vehicle Dock

# Using Edge With a Vehicle Dock

This section contains information applicable only when using your Edge with a Vehicle Dock.

- If you purchase an XM Dock and Play *PowerConnect* Vehicle Kit to use your Edge in your vehicle, follow the instructions included with the kit for installation. When those instructions refer you to the User Guide for your Radio for additional instructions, you will find the information in this User Guide, in these sections:
  - “Find Available FM Channels in Your Area” on page 57
  - “Set and Select an FM Channel” on page 60
  - “FM Presets” on page 63
  - “Turn FM Transmitter On/Off” on page 66
- If you decide to use a Vehicle Dock from a Universal Xpress Car Kit, you'll need to do some additional configuration found in this User Guide in the section:
  - “Using the Vehicle Dock From the Universal Xpress Car Kit” on page 65.

For troubleshooting information when using a Vehicle Dock, refer to the User Guide for the Vehicle Dock.



## Find Available FM Channels in Your Area

Before attempting any of the procedures below, you should park your vehicle in a safe location. Do not attempt to set up your FM channels or any Edge function while driving.

*PowerConnect* allows you to listen to SiriusXM through your existing vehicle radio. You will first need to find an available FM channel, which is a channel that is not being used by an FM radio station in your area. When you tune your vehicle's FM radio to an available channel, you should only hear static or silence - not talk or music.

Once you have found an available FM channel, you'll need to tune Edge and your vehicle's radio to the same FM channel to receive SiriusXM audio through your vehicle's radio.

We recommend one of the following methods to find an available FM channel:

### **1 Use the SiriusXM FM Channel Finder**

Use the SiriusXM FM Channel Finder at [www.siriusxm.com/fmchannel](http://www.siriusxm.com/fmchannel). Go to the website and enter your zip code. The Channel Finder will suggest a list of available FM channels in your area. For convenience, write down or print out the list.

Tune Edge to a favorite SiriusXM channel (or to channel 1, the XM Preview channel, if it's not activated). Turn on your vehicle's FM radio. Pick the first FM channel on your Channel Finder list and tune the FM radio to that channel. If you do not hear a local FM station broadcast, then tune Edge to the same FM channel. (Refer to "Jump Settings" on page 48.) You should hear the SiriusXM channel through your vehicle's radio. If you are satisfied with the sound quality, you're done! If this FM channel doesn't work well for you, work down the list until you find an FM channel that allows you to hear SiriusXM clearly.

# Using Edge With a Vehicle Dock

OR

## 2 Manually tune through your local FM channels

Manually tune through your local FM channels on your vehicle's FM radio. Turn on your vehicle's FM radio. Start at 88.1 and use the 'Manual' tune function on your vehicle's FM radio to tune through each FM channel one-by-one (88.1 followed by 88.3 etc.), to locate channels that aren't being used by a local FM radio station. Write down each FM channel that has only static or silence on it, until you reach 107.9. Once you have created your list of available FM channels, you will need to find the one that provides the best match for Edge.

Tune Edge to a favorite SiriusXM channel (or to channel 1, the XM Preview channel, if it's not activated). Pick the first FM channel on your list and tune the FM radio to that channel. Then tune Edge to the same FM channel. (Refer to "Set and Select an FM Channel" on page 60.) You should hear the SiriusXM channel through your vehicle's radio. If you are satisfied with the sound quality, you're done! If this FM channel doesn't work well for you, work down the list until you find an FM channel that allows you to hear SiriusXM clearly.



**NOTE!** You may find an FM channel with static or silence that does not work with Edge. It is possible that some type of inaudible interference is present that prevents reception of the SiriusXM broadcast. Your only options are to use another FM channel or a different audio connection method.



**TIP!** If you regularly drive from one location to another, such as your daily commute, you may need to use different FM channels along your route for best performance. If this is the case, we recommend saving the best FM channels as presets on your FM radio and Edge. Then you simply select and match the best channel for the area you are in.



**TIP!** It will be much more difficult to find available FM channels in large cities than in most suburban or rural locations. A direct audio connection using the

Aux In Cable, Cassette Adapter, or professional installation is your best solution if you drive in or near large metropolitan areas.



**NOTE!** The SiriusXM FM Channel Finder relies on data from the Federal Communications Commission. The data may not reflect the latest stations in your area. In addition, local geography and weather conditions can impact reception, so your results may be different from the list.



**NOTE!** The performance of FM radios are different, based on manufacturer and vehicle style. Some may not work well with the type of FM transmitter used by Edge. This is why we recommend a direct audio connection using the Aux In Cable or Cassette Adapter if they can be used in your vehicle. Professional installation can also resolve almost any performance issue.

# Using Edge With a Vehicle Dock

## Set and Select an FM Channel

Edge allows you to easily store (i.e., preset) up to 5 different FM channels. At any time, you can select any one of these 5 FM presets to hear SiriusXM through your existing vehicle radio. Having a choice of 5 FM presets also makes it easy to switch to the appropriate FM channel as you travel from one area to another. Each FM preset is stored in its own storage location. You can easily add or edit the FM preset in any one of the 5 storage locations.



**IMPORTANT!** Edge and the vehicle's FM radio need to be tuned to the same FM channel in order to hear the audio.



**TIP!** The FM 1 storage location is preset with FM channel 97.9.

### To set and select an FM preset:

- 1 Press **menu**.
- 2 Turn the **Rotary Knob** to scroll to and highlight **FM Settings** and press the **Select button**.
- 3 **FM Channels** will be highlighted. If it is not highlighted, turn the **Rotary Knob** to scroll to and highlight **FM Channels**. Press the **Select button**.
- 4 Turn the **Rotary Knob** to scroll to and highlight the storage location (FM 1 to FM 5) you want to set and press the **Select button**. You can choose among the following options:
  - i. If the chosen storage location is empty (denoted by "---"), or if the storage location contains the FM preset currently being used (denoted by "current"), then the FM channel tuning screen is displayed.

FM Channels		
FM 1	97.9	
FM 2	99.3	current
FM 3	103.7	
FM 4	---	

- ii. If the chosen storage location has an FM preset that is not currently being used, and you want to edit it, **Edit Channel** is highlighted. Press the **Select button**. The FM channel tuning screen is displayed.
  - iii. If the chosen storage location has an FM preset that is not currently being used, and you want to start using it, turn the **Rotary Knob** to highlight **Start Using** and press the **Select button**. Skip to step 7.
- 5 Turn the **Rotary Knob** to tune to the desired FM channel in steps of .2, i.e., 99.3 to 99.5. Press **<** and **>** to tune to the desired channel in steps of 1, i.e., 99.3 to 100.3. Press the **Select button** to select the FM channel.
  - 6 If you are editing the storage location that has the “current” FM preset, skip to step 7. Otherwise, **Start Using** will be highlighted. Press the **Select button**.





**NOTE!** You can also set an FM preset without having to start using it right away. Just press menu and exit the screen.

- 7 The chosen FM channel will be confirmed on the display screen and Edge will tune to that FM channel.
- 8 Set your vehicle's FM radio to same FM channel.





**IMPORTANT!** You'll first need to find a suitable FM channel that is unused or available in your area.

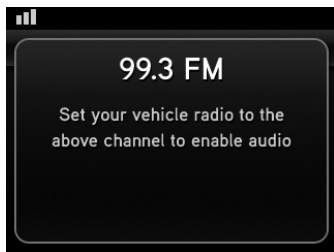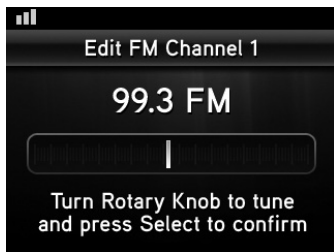

# Using Edge With a Vehicle Dock

## *To quickly select an FM preset:*

- 1** Press **FM** to display the current FM preset.
- 2** To display and select the next FM preset, press **FM**. Edge will tune to the displayed FM channel. If the preset is the one you want, press **menu** or wait for the screen to time-out.
- 3** Repeatedly pressing **FM** will cycle through the FM presets.
- 4** Set your vehicle's FM radio to same FM channel.

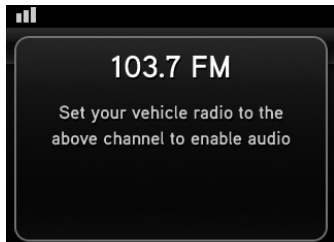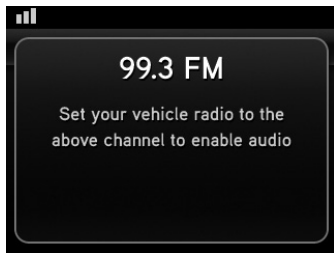

## FM Presets

FM presets make it easy to quickly access stored FM channels and choose a new FM channel from them.

Use FM presets when you use *PowerConnect* or the *FMDA* to listen to your Edge through your vehicle's FM radio.

### *To use a different FM preset:*



- 1 Press **FM** to display the current FM preset.
- 2 To display and select the next FM preset, press **FM**. The Radio will tune to the displayed FM channel. If the preset is the one you want, press **menu** or wait for the screen to time-out.
- 3 Repeatedly pressing **FM** will cycle through the FM presets.
- 4 Set your vehicle's FM radio to the same FM channel.



**IMPORTANT!** You need to ensure that your vehicle's FM radio is tuned to the same FM channel.



**TIP!** To configure the list of preset FM channels, you need to find available FM channels in your area. Refer to "Find Available FM Channels in Your Area" on page 57. Next, refer to "Set and Select an FM Channel" on page 60.

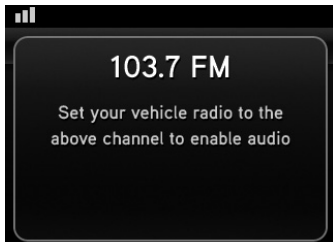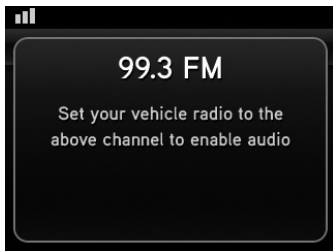

# Using Edge With a Vehicle Dock

## Auto Shut Off


When Edge is in a Vehicle Dock, and Auto Shut Off has been enabled, Edge will automatically shut off after 8 hours of inactivity, i.e., when no buttons have been pressed. This feature prevents the vehicle battery from being discharged if you forget to turn your Edge off.

When Edge is about to shut off, the message **Auto Shut Off, Started auto shut off due to inactivity** is displayed, followed by **Press any button to cancel**. If you wish to continue listening, press any button.

Auto Shut Off is disabled by default.

### *To enable or disable Auto Shut Off:*

- 1 Press **menu**.
- 2 Turn the **Rotary Knob** to scroll to and highlight **Auto Shut Off** and press the **Select button**.
- 3 **Status** will be highlighted. Press the **Select button** to toggle the setting between disabled and enabled.
- 4 Press and hold **menu** to return to the main display screen.

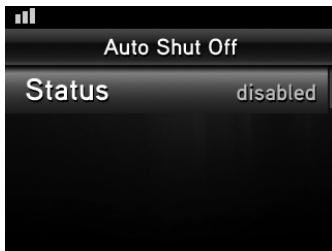



## Using the Vehicle Dock From the Universal Xpress Car Kit

If you have chosen to use the Vehicle Dock from the Universal Xpress Car Kit rather than the *PowerConnect* Vehicle Dock included with your Edge Radio, you will need to complete some additional installation steps. When you have completed these additional steps, you can continue with the installation of your Edge.

When you are using the Universal Xpress Vehicle Dock, the screen will initially display “AUX Connected” when you power on your Edge. Ignore this message. Once you have completed the steps below, it will not be displayed again.

### *If you are connecting the audio through your vehicle's FM radio (SureConnect or FMDA):*

- 1 Disable the AUX Detect feature. Refer to “AUX Detect” on page 68, and disable AUX Detect.
- 2 Turn the FM Transmitter in Edge On. Refer to “Turn FM Transmitter On/Off” on page 66, and turn the FM Transmitter On.
- 3 Continue with the installation.

### *If you are connecting the audio using the Aux In Cable or Cassette Adapter:*

- 1 Disable the AUX Detect feature. Refer to “AUX Detect” on page 68, and disable AUX Detect.




**TIP!** The FM Transmitter must be Off. To verify that the FM Transmitter is Off, refer to “Turn FM Transmitter On/Off” on page 66.

- 2 Continue with the installation.


# Using Edge With a Vehicle Dock

## Turn FM Transmitter On/Off

Turning the FM Transmitter On applies only if you are using the older model Vehicle Dock from the Universal Xpress Car Kit, and plan to use *SureConnect* or *FMDA* as the audio connection option.

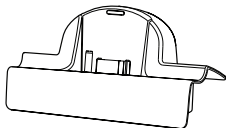

You'll have to turn On the FM Transmitter under the **FM Settings** menu. However, before you can access the **FM Settings** menu, you first need to disable AUX Detect. Refer to "AUX Detect" on page 68. Once you have disabled AUX Detect, the **FM Settings** menu will be accessible.

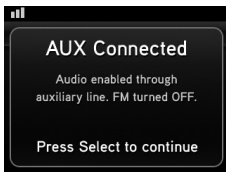

*To turn the FM Transmitter On:*

- 1 Press **menu**.
- 2 Turn the **Rotary Knob** to scroll to and highlight **FM Settings** and press the **Select button**.
- 3 **FM Transmitter** will be highlighted. Press the **Select button** to toggle the setting from Off to On.
- 4 The **FM Channels** menu item will now be accessible, allowing you to tune Edge and the FM radio in your vehicle to the same FM channel.




**TIP!** Edge is programmed with FM channel 97.9 as the default setting.

### ***To turn the FM Transmitter Off:***

If you are using the older model Vehicle Dock from the Universal Xpress Car Kit, and plan to use the Aux In Cable or a Cassette Adapter as the audio connection option, you'll have to turn the FM Transmitter under the **FM Settings** menu in Edge Off, if it was previously turned On.

- 1** Press **menu**.
- 2** Turn the **Rotary Knob** to scroll to and highlight **FM Settings** and press the **Select button**.
- 3** **FM Transmitter** will be highlighted. Press the **Select button** to toggle the setting from On to Off.
- 4** A warning message will be displayed advising you to connect the Aux In Cable. Press the **Select button** to confirm that you want to turn off the FM Transmitter.
- 5** Press and hold **menu** to exit.

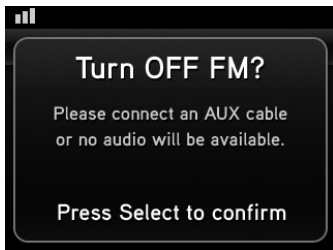

# Using Edge With a Vehicle Dock

## AUX Detect

AUX Detect allows Edge to automatically detect a connection made to the **AUDIO** connector of the *PowerConnect* Vehicle Dock by an Aux In Cable or Cassette Adapter. AUX Detect is enabled by default.



**IMPORTANT!** If you are using the *PowerConnect* Vehicle Dock which came with your Edge, AUX Detect should remain enabled.

If you are using the older model Vehicle Dock from the Universal Xpress Car Kit, and plan to use *PowerConnect* or FMDA as the audio connection option, you will need to disable AUX Detect. Please read the additional instructions, "Using the Vehicle Dock From the Universal Xpress Car Kit" on page 65. Once AUX Detect is disabled, you'll have to turn the FM Transmitter On. Refer to "Turn FM Transmitter On/Off" on page 66.

### *To disable AUX Detect:*

(Do this only when using the older model Vehicle Dock.)

- 1 Press **menu**.
- 2 Turn the **Rotary Knob** to scroll to and highlight **Factory Settings** and press the **Select button**.
- 3 **AUX Detect** should be highlighted and show as enabled. Press the **Select button** to toggle the setting.
- 4 A warning screen will be displayed. Press the **Select button** to confirm that you want to disable AUX Detect.
- 5 If you want to cancel press **menu** to return to **Factory Settings**. AUX Detect will remain enabled.
- 6 AUX Detect will show as disabled. Press and hold **menu** to return to the main display screen.

### ***To enable AUX Detect***

(Do this when the Radio is transferred to the *PowerConnect* Vehicle Dock from an older model Vehicle Dock.)

- 1** Press menu.
- 2** Turn the **Rotary Knob** to scroll to and highlight **Factory Settings** and press the **Select button**.
- 3** **AUX Detect** will be highlighted and show as disabled. Press the **Select button** again to toggle the setting to enabled.
- 4** Press and hold **menu** to return to the main display screen.





# Troubleshooting

# Troubleshooting

Edge has been designed and built to be trouble-free but if you experience a problem, try this:

- Check that all connections are firm and secure.
- Make sure you have connected the Home Dock as described in this User Guide. Verify that the AC power outlet is working

If you see this on the screen:	Try this:
No Satellite Signal	<ul style="list-style-type: none"><li>• Move the antenna to a south-facing window. Not sure which way is south? Think about where the sun rises (in the east) and sets (in the west). Then stand so that east is to your left and you'll be facing south. Is there a window in the direction you're facing?</li><li>• You may need to find a better location for the antenna. Refer to "Step 2: Place and Aim the Indoor/Outdoor Home Antenna" on page 16.</li></ul>
Check Antenna	<ul style="list-style-type: none"><li>• Make sure that the antenna cable is firmly and securely plugged into the Home Dock. Make sure the cable is not bent or broken.</li><li>• Turn Edge Off, then On, to reset this message.</li><li>• If the message persists, most likely the Indoor/Outdoor Home Antenna cable has been damaged. Replace the antenna.</li></ul>
Channel Unavailable	<ul style="list-style-type: none"><li>• The channel you've selected is not currently broadcasting. Tune to another channel.</li></ul>



<b>If you see this on the screen:</b>	<b>Try this:</b>
Acquiring Signal	<ul style="list-style-type: none"> <li>• Your Edge is acquiring audio or program information. This message usually goes away in a few seconds.</li> </ul>
–	<ul style="list-style-type: none"> <li>• No program information, such as artist name, song title, or channel exists.</li> </ul>
<b>If this happens:</b>	<b>Try this:</b>
You do not receive all the channels to which you subscribed	<ul style="list-style-type: none"> <li>• Ensure that you have subscribed to the service by following the steps in “Subscribe” on page 24.</li> <li>• Go to <a href="http://www.siriusxm.com/refresh">www.siriusxm.com/refresh</a> and follow the directions to refresh your Radio.</li> <li>• Call 1-866-635-2349 for further assistance.</li> </ul>
Audio sounds too soft	<ul style="list-style-type: none"> <li>• Raise the volume of your stereo system or increase the audio level of your Edge until the sound quality improves. Refer to “Set Audio Level” on page 50.</li> </ul>
Audio fades	<ul style="list-style-type: none"> <li>• Check all cables for a firm and secure connection.</li> </ul>
No Audio	<ul style="list-style-type: none"> <li>• Check all cables between your Edge and your stereo system or powered speakers for a firm and secure connection.</li> <li>• Ensure you have selected the proper input source on your stereo system, or try another source.</li> <li>• Increase the audio level of your Edge. Refer to “Set Audio Level” on page 50.</li> </ul>

# Troubleshooting

If this happens:	Try this:
No song title or artist name is displayed	<ul style="list-style-type: none"><li>• The information may not be available or updates may be in progress.</li></ul>
Traffic and Weather channels sound different from other channels	<ul style="list-style-type: none"><li>• These channels use a different audio technology than other channels so they often sound different from other channels.</li></ul>
The demo is playing	<ul style="list-style-type: none"><li>• Your Indoor/Outdoor Home Antenna is not connected, or you are not receiving the signal. Check that the antenna is connected properly and is not obstructed.</li><li>• Press and hold the <b>Select button</b> for 10 seconds to exit Demo Mode.</li><li>• You can disable Demo Mode. Refer to "Demo Mode" on page 53.</li></ul>

# Product Specifications

# Product Specifications

## System

Power Requirements:	110 V AC, 400 mA (max)
Operating Temperature:	-4°F to +140°F (-20°C to +60°C)
Audio Output:	1.5 Vrms (max)

## Edge Radio

Dimensions:	4.6 in (width) x 2.6 in (height) x 0.7 in (depth) 117 mm (width) x 65 mm (height) x 17 mm (depth)
Weight:	4.0 oz (112 g)

## Home Dock

Dimensions:	3.6 in (width) x 1.1 in (height) x 1.5 in (depth) 93 mm (width) x 29 mm (height) x 38 mm (depth)
Weight:	3.8 oz (109 g)
Audio Connector:	1/8 in (3.5 mm) female
Antenna Connector:	SMB male

## Home Power Adapter

Input:	100-240 V AC, 50-60 Hz, 0.4 A
Output:	5.2 V DC, 1.6 A

## Indoor/Outdoor Home Antenna

Type:	SiriusXM (or XM) Indoor/Outdoor
Connector:	SMB female, right angle
Cable Length:	20 ft (6.1 m)

## Stereo Audio Cable

Connectors:	1/8 in (3.5 mm) stereo male to RCA left & right
Cable Length:	3 ft (91 cm)

# Patent and Environmental Information

## Patent Information

It is prohibited to, and you agree that you will not, copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise access and/or make available any technology incorporated in this product. Furthermore, the AMBE™ voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc. The software is licensed solely for use within this product. The music, talk, news, entertainment, data, and other content on the Services are protected by copyright and other intellectual property laws and all ownership rights remain with the respective content and data service providers. You are prohibited from any export of the content and/or data (or derivative thereof ) except in compliance with applicable export laws, rules and regulations. The user of this or any other software contained in a SiriusXM Radio is explicitly prohibited from attempting to copy, decompile, reverse engineer, hack, manipulate or disassemble the object code, or in any other way convert the object code into human-readable form.

## Environmental Information

Follow local guidelines for waste disposal when discarding packaging and electronic appliances.

# FCC Statement

The user is cautioned that changes or modifications not expressly approved by Sirius XM Radio Inc. can void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the installation instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna of the affected receiver.
- Increase the separation between the SiriusXM equipment and the affected receiver.
- Connect the SiriusXM equipment into an outlet on a circuit different from that to which the affected receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING!** The FCC and FAA have not certified this Satellite Radio Receiver for use in any aircraft (neither portable nor permanent installation). Therefore, Sirius XM Radio Inc. cannot support this type of application or installation.

# Copyrights and Trademarks

©2012 Sirius XM Radio Inc. "Sirius", "XM" and all related marks and logos are trademarks of Sirius XM Radio Inc. "BBC" and "Radio One" are trademarks of the British Broadcasting Corporation and are used under license. BBC logo © BBC 1996. Radio 1 logo © BBC 2001. Cosmopolitan™ is a registered trademark of Hearst Communications, Inc. Elvis Radio logo © EPE Reg. U.S. Pat & TM off. IndyCar (and Design) are registered trademarks of Brickyard Trademarks, Inc., used with permission. IZOD is a registered trademark of Phillips-Van Heusen Corporation, used with permission. Major League Baseball trademarks and copyrights are used with permission of Major League Baseball Properties, Inc. Visit the official website at MLB.com. Games subject to availability and change and may not include all spring training games. All rights reserved. NASCAR™ is a registered trademark of the National Association for Stock Car Auto Racing, Inc. The NBA identifications are the intellectual property of NBA Properties, Inc. and the respective NBA member teams. © 2012 NBA Properties, Inc. © 2012 NFL Properties LLC. All NFL-related trademarks are trademarks of the National Football League. NHL and the NHL Shield are registered trademarks of the National Hockey League. © NHL 2012. All NHL logos and marks and NHL team logos and marks depicted herein are the property of the NHL and the respective teams and may not be reproduced without the prior written consent of NHL Enterprises, L.P. PGA TOUR and the Swinging Golfer Design are trademarks owned by PGA TOUR, Inc. Visit [www.siriusxm.com/channellineup](http://www.siriusxm.com/channellineup) for updates. All programming/channel lineup/XM service subject to change or preemption. All other marks and logos are the property of their respective owners. All rights reserved.

## IMPORTANT NOTICE: REQUIRED SUBSCRIPTION

Hardware and subscription sold separately, and activation fee required. Other fees and taxes apply. **Service will automatically renew into the subscription package you choose (which may differ from the package which arrived with the Radio), and will automatically bill at the rates in effect at the time of renewal, until you call us at 1-866-635-2349 to cancel. See our Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com).** All fees and programming are subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and DC. Our Sirius satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. Certain channels are not available on our Internet radio service, including MLB® play-by-play.

# Owners Record

The Radio model number is located below and the Radio ID is located on the label on the back of Edge.

Record the Radio ID in the space provided below. Refer to these numbers whenever you call your dealer regarding this product.


Radio Model Number: SX1E

Radio ID: \_\_\_\_\_



# Indoor/Outdoor Home Antenna Template

## Indoor/Outdoor Home Antenna Template

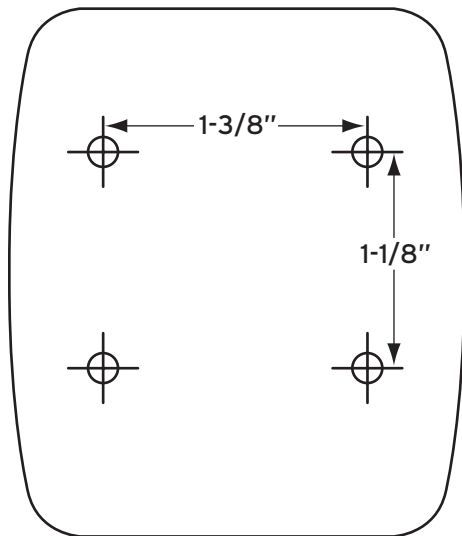



# SiriusXM 90-Day Limited Warranty

## **What This Warranty Covers**

This warranty covers defects in material and workmanship for 90 days from the date of purchase by the original retail purchaser only. Sirius XM Radio Inc., at its sole option, will repair or replace the product with a new or reconditioned product without charge for parts and labor. Products replaced under this warranty become the property of SiriusXM. Replacement products are warranted to be free from defects for 30 days or the remainder of the original warranty, whichever is longer.

## **What This Warranty Does Not Cover**

This warranty does not cover: products sold as used, as is, reconditioned or refurbished; software stored on internal or removable memory; non-rechargeable batteries, surface preparation cleaners, adhesive pads, fasteners, and ear-buds; costs incurred for installation, removal or reinstallation of the product; correction of installation problems, such as elimination of externally generated static or noise and antenna placement and aiming; defects or damage caused by alteration, improper installation or removal, use of third party accessories, mishandling, misuse, neglect, accident, power surges or acts of nature.

## **How to Obtain Warranty Service**

To obtain warranty service, please call SiriusXM Listener Care at 1-866-746-7961. You will be required to provide proof of purchase and a description of the defect. You must prepay the cost of shipping the product to an approved service center.

## **LIMITATIONS OF LIABILITY**

THE LIABILITY OF SIRIUSXM UNDER THIS WARRANTY IS LIMITED TO REPAIR OR REPLACEMENT AS PROVIDED ABOVE AND, IN NO EVENT, SHALL THE LIABILITY EXCEED THE PURCHASE PRICE PAID FOR THE PRODUCT. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF WARRANTY, INCLUDING BREACH OF ANY IMPLIED WARRANTY OF MERCHANTABILITY, MUST BE BROUGHT WITHIN 48 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL SIRIUSXM BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

**Sirius XM Radio Inc.**  
**1221 Avenue of the Americas**  
**New York, NY 10020**

**1.866.635.2349**

**[siriusxm.com](http://siriusxm.com)**

© 2012 Sirius XM Radio Inc.

SX1EHKUG 120126a