 


**Cord/Cordless Lithium Ion Trimmer  
Model No. 8171L**

**Operating Manual  
Manual De Operación  
Manual D'Utilisation**

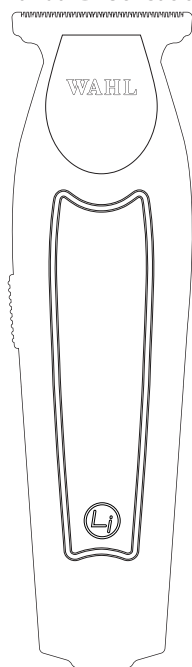

**Includes But Not Limited To:  
No. 8171**

**FOR TECHNICAL SUPPORT  
OR QUESTIONS**

**Phone/Téléphone/Teléfono:** 1-800-776-9245  
**Email:** techsupport@wahlclipper.com  
**Website:** www.wahlpro.com

FIND US ON SOCIAL MEDIA



WAHL CLIPPER CORPORATION  
STERLING, IL, USA.

FORM # 92566

**IMPORTANT SAFETY PRECAUTIONS  
WHEN USING A TRIMMER, BASIC PRECAUTIONS  
SHOULD ALWAYS BE FOLLOWED, INCLUDING  
THE FOLLOWING:**

**READ ALL INSTRUCTIONS BEFORE USING**

**DANGER**

**TO REDUCE THE RISK OF DEATH OR INJURY BY  
ELECTRIC SHOCK:**

1. Do not reach for a charger that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store trimmer where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Except when charging, always unplug trimmer from the electrical outlet immediately after using.
5. Unplug trimmer before cleaning.

**WARNING**

**TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC  
SHOCK OR INJURY TO PERSONS:**

1. Do Not Crush, Disassemble, Heat above 100°C (212°F), or Incinerate the appliance, due to Risk of Fire, Explosion, or Burns.
2. This appliance is not suitable for use by people (including children) with physical, sensory or mental disabilities or who do not have the relevant experience or knowledge of using such appliance unless under the supervision of or after having received instruction in the use of the appliance by an individual who is responsible for their safety.

Children should be supervised to ensure they do not play with the appliance.

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Do not use this appliance with a damaged or broken blades or broken attachments, as facial injury may occur.
5. Never operate this appliance if it has a damaged cord or battery charger transformer, if it is not working properly, if it has been dropped or damaged, dropped into water. Return the appliance to Wahl Clipper Corporation for examination and repair.
6. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to off position then remove plug from outlet.
7. During use, do not place or leave the appliance where it is expected to be subject to damage by an animal, or exposed to weather.
8. Do not carry this appliance by supply cord or use cord as a handle.
9. Never drop or insert any object into any opening.
10. Do not use outdoors.
11. Do not operate where aerosol (spray) products are being used or where oxygen is being administered. Do not use clipper germicide cleaners containing phynyl phenol.
12. Use only the charger supplied by the manufacturer to recharge.

 
 
**SAVE THESE INSTRUCTIONS**

THIS PRODUCT IS DESIGNED FOR COMMERCIAL  
USE ONLY.

**TRIMMER USE  
USING RECHARGEABLE  
CORD/CORDLESS TRIMMERS**

If battery power is low, power cord can attach directly to the unit for continued use as a corded unit.

- Plug power cord into an outlet.
- CONNECT POWER CORD PLUG INTO RECEPTACLE IN BACK OF STAND and place trimmer in stand so nameplate faces forward. (Not all units have recharge stands. To recharge these units, plug power cord directly into unit.) Be sure trimmer is switched OFF when charging.
- FOR CORDED OPERATION, disconnect power cord from back of stand and connect to receptacle on the bottom of the unit. If your battery is completely run down, allow the unit to charge for 1 minute (switched OFF) before using as a corded unit.
- If the cord is left attached to the unit when not in use, the cord will automatically charge the unit when left in the OFF position.

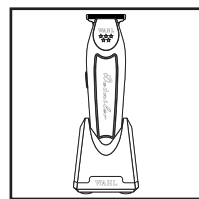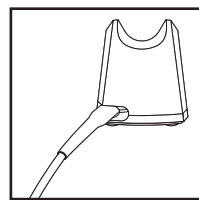

**CHARGING THE BATTERY**

Before the equipment is used for the first time, it should be charged 45 minutes to an hour. Connect power cord plug into receptacle in back of stand and place trimmer in stand so nameplate faces forward. (Not all units have recharge stands. To recharge these units, plug power cord directly into unit.) Be sure the trimmer is switched OFF when charging.

**Recommendation:** the batteries should only be recharged when the performance of the equipment has deteriorated noticeably.

**DO NOT RUN TRIMMER CORDED WITH A FULLY  
CHARGED BATTERY.**

**BATTERY OPERATION**

Switch on the equipment using the on/off switch and, after use, switch it off again. When the battery is fully charged, the equipment can be used for up to 100 minutes of continuous run.

**LIMITED 1 (ONE) YEAR WARRANTY**

This warranty applies to products purchased from Wahl Professional and its authorized sellers.

If your Wahl product fails to operate satisfactorily within one (1) year from the date of original purchase or receipt as a gift, Wahl will at our option repair or replace it and return it to you FREE OF CHARGE. Our warranty does not cover blades which are wear out parts. Please mail your product prepaid to Wahl Clipper Corporation, 3001 N. Locust St., Sterling, Illinois 61081, Attention: Repair Department. Include a note describing the defect and the date of original purchase or receipt as a gift (if in warranty). Products out of warranty will be repaired at our standard repair charges. This warranty does not cover:

1. Products damaged by modification in any manner;
2. Products damaged by repair by anyone other than Wahl Clipper Corporation;
3. Products that have been subject to unreasonable use;
4. Products purchased from an unauthorized seller.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. No other written express warranty is given. Any implied warranty including any warranty of merchantability, which may arise from purchase or use is limited to the one-year period provided in this express warranty. Some states may not allow such limitation, so it may not apply to you. No responsibility is assumed for incidental or consequential damages of any type, or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation or exclusion may not apply to you. Warranty valid only in the United States.

PATENTS PENDING

**GARANTIA LIMITADA POR UN (1) AÑO**

Esta garantía se aplica a los productos comprados a Wahl Professional y a sus distribuidores autorizados.

Si su producto Wahl no funciona satisfactoriamente en un período de un (1) año desde la fecha de la compra original o de la recepción como un regalo, Wahl, según su propio criterio, lo reparará o reemplazará y se lo devolverá SIN COSTO. Nuestra garantía no cubre las cuchillas, puesto que son piezas sujetas a desgaste. Envíe por correo su producto con franco de prepago a Wahl Clipper Corporation, 3001 N. Locust St., Sterling, Illinois 61081, Atención a: Departamento de Reparaciones (Repair Department), junto con una nota que describa el defecto y la fecha de la compra original o de la recepción como regalo (si está dentro de la garantía). Los productos no cubiertos por la garantía serán reparados a nuestro precio de reparación estándar. Esta garantía no cubre productos dañados por:

1. Modificación de cualquier naturaleza;
2. Reparación por cualquier otra persona o entidad ajenas a Wahl Clipper Corporation;
3. Productos que han sido sometidos a un uso indebido;
4. Productos comprados a un distribuidor no autorizado.

Esta garantía le otorga derechos legales específicos, y usted puede tener además otros derechos que varían según el estado. No se otorga otra garantía expresa escrita. Cualquier garantía implícita, incluida cualquier garantía de comerciabilidad, que pueda surgir de la compra o uso se limita al período de un año establecido en esta garantía expresa. Es posible que algunos estados no permitan dicha limitación, en cuyo caso esta quizás no se aplique a usted. No asumimos responsabilidad alguna por daños incidentales o consecuentes de cualquier tipo, así como tampoco por el uso de accesorios no autorizados. Es posible que algunos estados no permitan la exclusión o la limitación de daños incidentales o consecuentes, en cuyo caso la limitación o exclusión quizás no se apliquen a usted. La garantía es válida solo en Estados Unidos.

PATENTES PENDIENTES

**GARANTIE LIMITÉE D'UN AN**

La présente garantie couvre les produits achetés auprès de Wahl Professional et de ses vendeurs autorisés.

 
Si votre produit Wahl ne fonctionne pas à votre entière satisfaction dans l'année (1 an) suivant la date de l'achat original ou de réception du produit offert en cadeau, Wahl, à son gré exclusif, réparera le produit ou le remplacera et vous le renverra SANS FRAIS. Notre garantie ne couvre pas les lames, celles-ci étant des pièces qui s'usent. Veuillez envoyer votre produit par courrier, port payé, à Wahl Clipper Corporation, 3001 N. Locust St., Sterling, Illinois 61081, Attention: Repair Department, accompagné d'une note décrivant la nature du problème et indiquant la date de l'achat original ou de réception du produit offert en cadeau (si la garantie s'applique). Les produits non couverts par la garantie seront réparés selon nos tarifs de réparation habituels. La présente garantie ne couvre pas:

1. Les produits altérés d'une quelconque manière;
2. Les produits endommagés après avoir été réparés par une entité autre que Wahl Clipper Corporation;
3. Les produits ayant été assujettis à une utilisation non raisonnable;
4. Les produits achetés auprès d'un vendeur non autorisé.


La présente garantie vous donne des droits spécifiques reconnus par la loi et il est possible que vous ayez d'autres droits qui varient d'un État à l'autre. Aucune autre garantie expresse et écrite n'est fournie. Toute garantie implicite, y compris toute garantie de qualité marchande découlant de l'achat ou de l'utilisation est limitée à la période d'un an, indiquée dans la présente garantie expresse. Certains États peuvent ne pas permettre ladite restriction, de sorte qu'elle peut ne pas s'appliquer à vous. Nous n'assumons aucune responsabilité en cas de dommages consécutifs ou indirects de quelque nature que ce soit ou de l'utilisation d'accessoires non autorisés. Certains États peuvent ne pas permettre l'exclusion ou la restriction des dommages consécutifs ou indirects, de sorte que l'exclusion ou la restriction peut ne pas s'appliquer à vous. Garantie valide uniquement aux États-Unis.

BREVETS EN COURS

(USE WAHL OIL ONLY.)

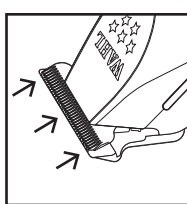

3 STEP SYSTEM

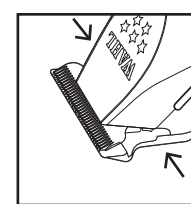 

PERIODICALLY OIL  
HEEL OF BLADE

WIPE OFF EXCESS OIL so it does not run into the motor compartment. Oil in the motor compartment will eventually lead to poor motor performance.

**Blades should be oiled after using disinfectant  
or sanitizing solution.**

**UNIT CARE**

 
Use a clean cloth (dry or dampened with water). DO NOT USE bleach, benzene or thinner to clean the unit.

**CORD CARE**


The cord should never be used to pull the trimmer. Freedom of movement needs to be maintained. Care should be used to keep the cord untwisted, and undamaged. When stored, the cord should be coiled and placed neatly in a dry place.

**LED INDICATOR**

- **Solid:** LED will be fully lit in use or when the battery has reached full charge.
- **Flashing:** The battery has approximately 20% charge remaining.
- **Pulse:** While charging, the LED will pulse until battery is fully charged. The LED will change to solid when the battery has a full charge.

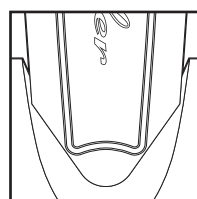

OFF

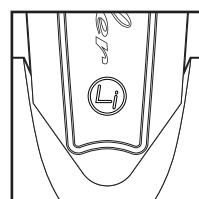 

ON

**QUICK CHARGE**

- **For a one minute charge:** Average use is 4 minute run time.
- **For a five minute charge:** Average use is 14 minute run time.

**TRIMMER CARE  
BLADE CARE & OILING**

In order to ensure that you get the most life and performance out of the trimmer, we recommend oiling daily. To oil it properly, the trimmer should be held so the blades are in a downward position as shown. Place one drop of Wahl oil in the center of the movable top blade and one drop of oil on each end of the top blade. Turn trimmer on and run to distribute the oil. When oil is evenly distributed, turn trimmer off and wipe off excess oil with a soft cloth.

Periodically oil heel of blade (shown in image) to reduce blade friction.

**LITHIUM-ION BATTERY REPLACEMENT,  
TRIMMER DISPOSAL AND RECYCLING**

This trimmer uses a lithium-ion battery. For battery replacement send the entire, intact trimmer unit to: Wahl Annex 3001 North Locust P.O. Box 578 Sterling, IL 61081. Do not attempt to remove the battery. Lithium-Ion batteries can explode, catch fire, and/or cause burns if disassembled, damaged, or exposed to water or high temperatures.

If you choose not to send the appliance in for battery replacement, the entire intact trimmer must be disposed.

Do not attempt to remove the battery for disposal. Lithium-Ion batteries may be subject to local disposal regulations. Many locations prohibit disposal in standard waste receptacles. Check your local laws and regulations.

For recycling contact a government recycling agency, waste disposal service, retailer, or visit online recycling sources, such as www.batteryrecycling.com or www.rbrcc.org.

**TROUBLESHOOTING**

If your rechargeable trimmer does not seem to be operating or charging properly, please check the following:

- Check the outlet's current by plugging another appliance (one you know is in proper working condition) into the outlet.
- Make sure the unit is not connected to a power source that turns itself off when lights are turned off.
- Verify that the blade assembly moves freely and is mounted properly.

If you still encounter problems with your unit, ship your trimmer, stand and its recharging cord, prepaid, to our factory with a note explaining the problem. Please mail your product prepaid to: Wahl Clipper Corporation Attention: Repair Department 3001 N. Locust St., P.O. Box 578, Sterling, Illinois 61081.

