

⚠ PLEASE READ ⚠

IMPORTANT INSTRUCTIONS FOR BATTERY PACK

For shipping and storage purposes, the battery pack is initially set in Ship Mode to ensure very low power consumption. It is not fully operational in this state.

Before its first use, the battery pack must be activated (it will arrive in Ship Mode). Activate the pack by plugging it into the charger for a few seconds. Once activated, the battery pack is fully functional and ready to use in your BenchBUD workbench. While not required, it is recommended that you fully charge the battery pack before installing onto the BenchBUD.

With normal use, the battery pack is estimated to be used for 2 to 3 months on a single charge.

You can identify the charge level by looking at the number of LEDs lit up on the battery pack (a low charge will only show 1 LED light).

It is important to follow the guidelines outlined below to ensure the life of your battery pack and maximize standby and storage periods. Non-compliance of these guidelines may result in a voided warranty and your battery going into a deep discharge (your battery pack dies and will no longer be able to hold a charge).

The battery pack can be charged by either 1) removing the pack from the control box housing and plugging it into the charger, or by 2) keeping the pack in the control box housing and plugging it into the charger.

If you are not regularly using your BenchBUD with the battery pack, the battery should be placed on the charger and fully charged at least every 6 months. Otherwise your battery is susceptible to a deep discharge.

If you plan on not using your BenchBUD for 6 months or more, fully charge the battery pack and place it back into ship mode. To put back into ship mode, push the button on the pack (near the LED lights) and hold for 7-9 seconds until the LEDs no longer light up. Once fully charged and in ship mode, the battery pack can be stored for up to 2 years on the shelf. Once you're ready to activate the battery pack again, plug it into the charger for a few seconds.

If you're changing the height of your BenchBUD and it stops moving, you may have lost charge in your battery pack. Simply charge it to regain power to your table.

Please note that any time you remove the battery pack from the control box housing or the battery pack loses sufficient charge, you will need to follow the reset procedure for your BenchBUD. You can find the [reset procedure in your instructions on page 22](#).