 
Monocle





ENGLISH

ENGLISH

Monocle is a rechargeable lightweight headlamp.

Warnings

Do not look directly into the light beam or shine into eyes of others.

Bookman AB does not accept any liability for injuries or other damages resulting in the use of this product under any circumstances.

Warranty

Monocle carries a two year warranty from the original purchase date to the original owner (proof of purchase is required).

The warranty covers any manufacturing defects in material or workmanship. Issues not covered by warranty include normal wear and tear, improper installation, attempting to access or modify electronics, damage or failure due to accident, misuse, abuse and/or neglect.

Contents

1 × Headlamp light


Size

55 x 31 mm (excluding strap)

Water resistance


Monocle is protected from splashing water from all directions (IPX4).

Attaching the headlamp

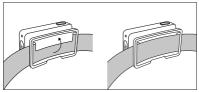

To attach the light, feed the strap through the gap in the light, then under and through the opening.

Strap adjustment

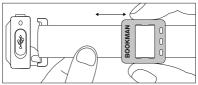


The strap is elastic and adjustable to fit all sizes. Adjust the strap by pulling it through the loops.

Angle adjustment



Monocle features stepless angle adjustment, so you can point it exactly where you need to by tilting the headlamp. If the light will not stay in the desired position, gently tighten the screws on the back of the headlamp.

Operation

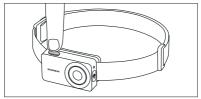

On/off: Press and hold 1.5 seconds Change mode: One click Monocle will remember the mode you used last time.

Lock mode

To avoid accidentally turning Monocle on when stored in a bag, the light can be locked.

When on:

Press and hold button for 5 seconds to enter lock mode. Main Led will flash 2 times.

When in lock mode:

Press and hold button for 5 seconds to exit lock mode and turn on the headlamp.

Green indicator LED will flash 2 times if the button is pressed during lock mode. Modes

MODES	HIGH 🔅	MID 🔅	LOW •
LUMENS	225	110	35
RUNTIME	1.5 H	4H	10H

Battery indicator


When Monocle is ON: 25-50% battery - Amber LED on 0-25% battery - Red LED flashes

When Monocle is OFF: One quick press to display battery level for 6 seconds. 50-100% battery – Green LED on 25-50% battery – Amber LED on 0-25% battery – Red LED flashes

When Monocle is charging:

BATTERY LEVEL	LED INDICATOR
FULLY CHARGED	GREEN LED STEADY -
> 75%	GREEN LED FLASH
25% - 75%	AMBER LED FLASH •••
<25%	RED LED FLASH •••

Charging

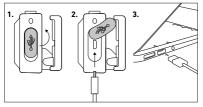

Charge Monocle with a Micro-USB cable (not included). To reduce impact on the environment and cut down on personal e-waste we did not include a cable. Need help getting one? Contact us and we will help.

1. Open the tab on the side.

- 2. Connect a micro USB cable.
- 3. Insert USB plug into powered USB port.

Charge time

2 hours from flat

Battery

600 mAh Lithium-ion battery

Designed in Sweden. Made in China. Bookman AB, Stockholm, Sweden bookmanvisibility.com