

## Keyline ZEN Remote Programming Instructions



### Step 1:

Press and hold the top (SW1) and bottom (SW2) buttons at the same time until the LED flashes (The LED is at the top of the remote). Release both buttons and the remote is now in programming mode.

### Step 2:

Press the SW1 (top) & SW2 (bottom) buttons in the sequence corresponding to your specific garage opener (see table below). For example: sequence #8 is 11222 so the corresponding operation is to press SW1 (top button) twice and SW2 (bottom button) three times.

### Step 3:

After pressing the sequence according to the code table, the LED will flash. Finally, within 5 seconds, press the button (either SW1 or SW2) you wish to be set to operate the garage door.

Sequence	1	2	3	4	5	6	7	8	9
Brand	Linear	Chamberlain	Chamberlain	Chamberlain	Genie/Overhead Door	Genie/Overhead Door	Chamberlain	Chamberlain	Chamberlain
Type/Button	Mega-code	Orange/Red	Purple	Green	Intellicode	Intellicode	Yellow	9 Position	9 Position (Canada)
Year	97-current	97-03	05-current	93-96	95-current	93-current	2011-current	90-92	83-89
Corresponding Code	11111	11112	11121	11122	11211	11212	11221	11222	12111

Sequence	10	11	12	13	14	15	16	17	
Brand	Linear Multicode	Chamberlain	Stanley/Multicode	Linear Moore-O-Matic	Chamberlain	Genie	Genie	Liftmaster (390 MHz)	
Type	10 position	8 position	10 position	8 position	7 position	12 position	9 position		
Year	76	83-89	76	76	83-89	85	85		
Corresponding Code	12112	12121	12122	12211	12212	12221	12222	21111	

### Step 4:

Follow the programming procedure required for your specific garage opener.