 


# Electric Pencil Sharpener

## Usage Instruction



### 1. How to insert batteries

- Use your fingers to slide the battery cover off
- Make sure to insert the batteries observing + and - correctly
- Batteries sold separately
- Replace the battery cover
- Use AA batteries, do not mix old and new batteries
- Only adults should replace worn batteries

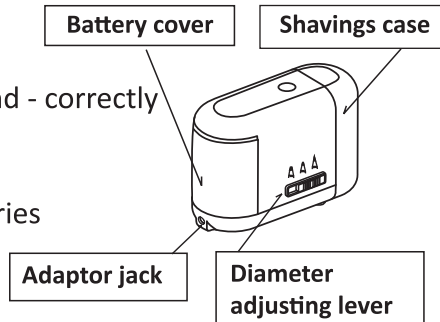

### 2. How to sharpen pencils

- By inserting a pencil in the sharpener, sharpening will start. Removing the pencil will stop the sharpening.
- If the shavings case is not correctly attached the sharpening will not start for safety reasons.
- Press lightly when inserting pencils. When sharpening is complete the sound of the motor will change and the blades will seem to spin freely.
- To avoid rapid discharge of batteries once the grinding noise is reduced, remove the pencil (if batteries are used).
- **Please see the instruction video on our website: [www.officegoods.com](http://www.officegoods.com)**

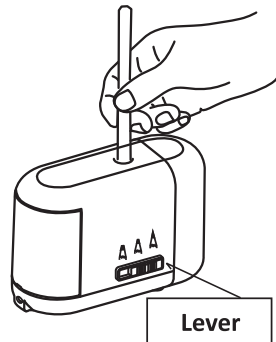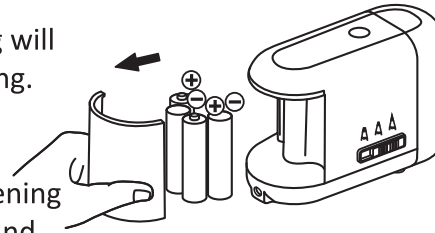


### 3. Adjusting the Pencil Point

- To achieve the desired point of dull, medium or sharp width use the diameter adjusting lever.


### 4. How to dispose of shavings

- Remove the shavings case from the device and dispose of the shavings.
- Over accumulation of shavings can cause damage to the device, so dispose of them regularly. As shavings can remain in the device even after being emptied, gently tap to release any leftover shavings.

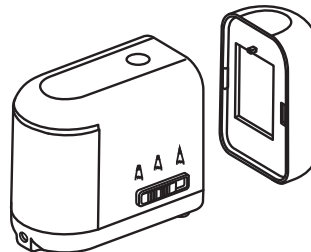

## Usage Warnings

- **Note:** The USB cord is not meant for a Laptop Computer. Before connecting the USB cord directly into a Desktop Computer please check with the manufacturer to ensure compatibility.
- Do not put your hands in any of the rotating parts.
- Do not use the device on its side or upside down.
- Do not bump the machine or drop it on a hard surface.

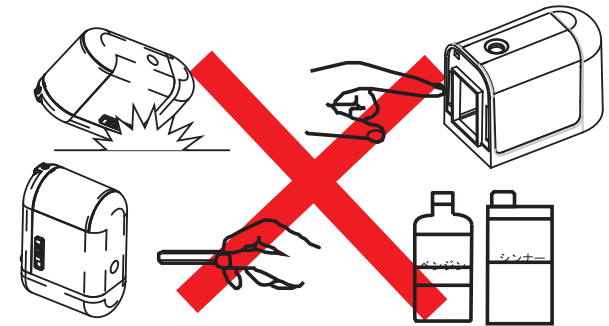

- To clean the device use a cloth to wipe it off as needed (do not use chemicals to clean the device).
- If you are not going to use the sharpener for a long time remove the batteries.
- Keep out of reach of children.
- Do not disassemble the device.
- Do not store or use the device in extremely hot, cold or dusty environments.

Please visit our website to see the instruction video:  
[www.officegoods.com](http://www.officegoods.com)

Please read the instructions thoroughly and  
use this device in the manner intended.

