



UNIVERSAL LED UNDER-BODY/DOME

Before you start, review directions completely. If your vehicle is not pre-wired for external lighting, you may need the following:

Inline Fuse Holder (SPXATC16 or similiar)

3 Amp Fuse

Switch

Relav

2 Strand Primary Wire

Wire Connectors / Solder

Wire Cover


Zip-Ties

MOUNTING THE LED PODS

The rubber mounting pads allow the lights to be mounted on a flat surface or a curved surface like a roll bar or tubalar frame. The lights can also be mounted flat, without the rubber mounting pad.

Once you have choosen a mounting location, decide how the cable will be routed. For example, when mounting on a roll bar, is the cable going to be routed inside the tube or on the outside. The rubber mounting pads allow you to route the cable outside, without drilling a hole for the cable (FIG B).

Using the template below, mark and drill the mounting holes. If you are running the cable through the mounting surface (FIG A & D), you will also need to drill a 1/4" hole for the cable. Use the center hole when mounting with the rubber mounting pads. Use the offset hole if mounting the light only, no mounting pad.

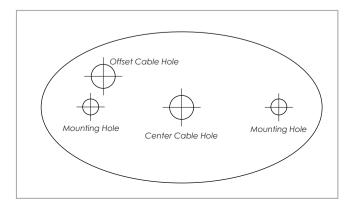

WHAT'S INCLUDED

2 x CREE LED Pods

2 x Rubber Mounting Pads

4 x Mounting Hardware

FIG A
Flat surface with mounting pad and cable going through mounting surface

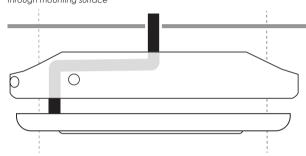


FIG B

Curved surface with mounting pad and cable routed out the mounting pad.

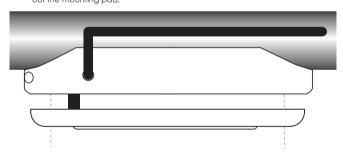
 


FIG C
When running the cable through the mounting pad holes,
you will need to cut a slit in the rubber

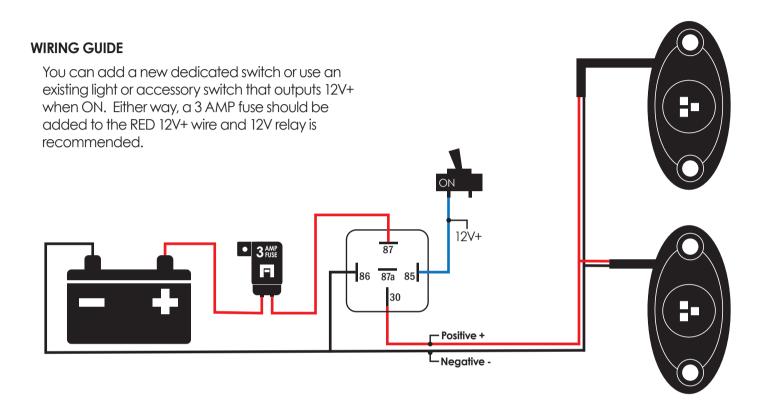


FIG D Flat surface without using the mounting pad. Cable will need to go through the mounting surface.





UNIVERSAL LED UNDER-BODY/DOME



LIMITED WARRANTY:

Stinger warrants this product to be free of defects in materials and workmanship for a period of one (1) years from the original date of purchase. This warranty is not transferable and applies only to the original purchaser from an authorized Stinger dealer in the United States of America only. Should service be necessary under this warranty for any reason due to manufacturing defect or malfunction, Stinger will (at its discretion), repair or replace the defective product with new or remanufactured product at no charge. Damage caused by the following is not covered under warranty: accident, misuse, abuse, product modification or neglect, failure to follow installation instructions, unauthorized repair attempts, misrepresentations by the seller. This warranty does not cover incidental or consequential damages and does not cover the cost of removing or reinstalling the unit(s). Cosmetic damage due to accident or normal wear and tear is not covered under warranty.

INTERNATIONAL WARRANTIES:

Products purchased outside the United States of America are covered only by that country's Authorized Stinger reseller and not by Stinger. Consumers needing service or warranty information for these products must contact that country's reseller for information.



Stinger is a Power Brand of AAMP Global 15500 Lightwave, Clearwater, Florida 33760 P: 888-228-5560 support@stingerelectronics.com www.stingerelectronics.com © 2019 AAMP Global