

## WARNING AND NOTICE

**FOR THE PROPER OPERATION, PLEASE READ THE STATEMENT BELOW CAREFULLY BEFORE USING THE APPLIANCE. MISUSE OF THE APPLIANCE MAY CAUSE THE ITEM TO MALFUNCTION, DEATH, OR INJURY.**

- After 1 month of use, unplug the fridge for 1 to 2 days to prevent overheating.
- Prevent the fans from being stuck or blocked. The fans being stuck will heat the engine and cause smoke and sparks. Towel, clothes, and the like should not be put near the item at all times.
- Please confirm the sockets of the cords are tight. A loose socket will result in the cords and sockets heating or malfunctioning and may possibly cause smoke and sparks.
- Please unplug fridge if not in use for a period of time.
- Keep the appliance away from flammable items and dampness to prevent sparks.
- Do not break up or refit the appliance.
- Do not rinse with water or expose to rain. Do not use in extreme heat or cold weather.
- Prevent the appliance from being upside down or dropped.
- Children should be supervised to ensure that they do not play or damage the appliance as it may cause harm/ injury.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use electrical appliances inside the storage compartments of the appliance, unless they are the type recommended by the manufacturer.

***This product has 1-year limited warranty\* following its delivery date.***


***(Date delivered: \_\_\_ / \_\_\_ / \_\_\_)***

*\*The 1-year limited warranty policy will cover any manufacturer defects that occur within the 1-year time period. The warranty does not cover damage caused by user error, water damage, accidental damage, damage caused by power failure, improper power supply, damage caused in transit, etc. The warranty does not cover shelves or accessories.*

*The 1-year limited warranty only covers 1x (one) replacement.*

# PEARL BOBA TEA MINI FRIDGE

*user manual*

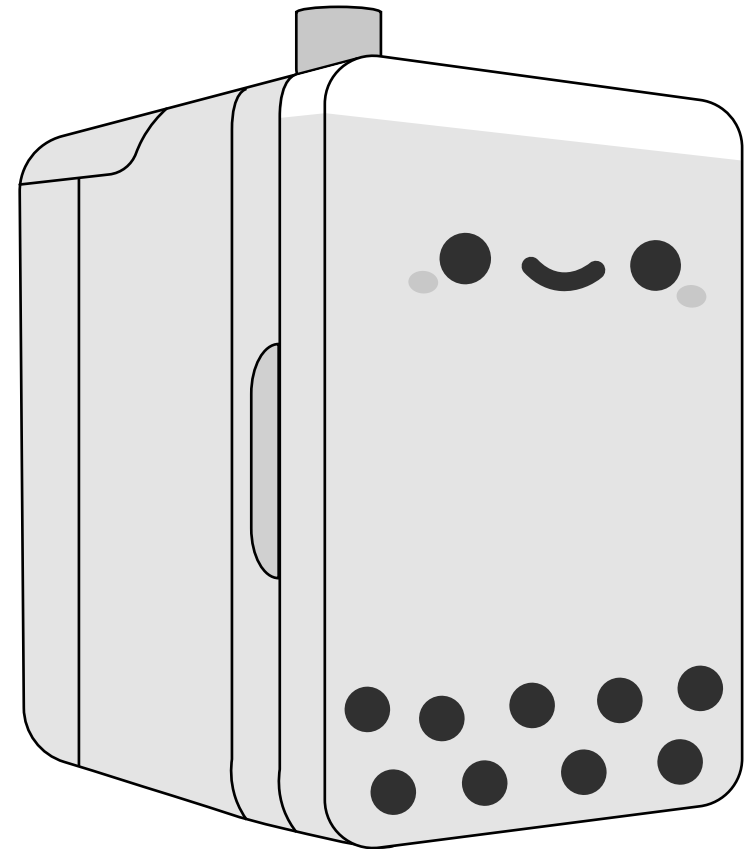

# Thank you for purchasing the SMOKO Pearl Boba Tea Mini Fridge!

Use the Pearl Boba Tea Mini Fridge to keep your favorite skincare products cold or use it to store your food/ beverages! It can hold up to 10 liters (up to 12 soda cans).

This mini fridge comes with removable shelves so you can customize it to your needs.

## Use the fridge for:

- Storing skincare products
- In the office
- Storing beverages
- Students' dorm or dining hall

Please read and follow all safety rules and instructions in this manual before operating.

## SPECIFICATIONS

- Dimensions: 9.6 x 9.8 x 13.7"
- Cool Temperature: 55°F or 13°C
- Interior Dim: 6 x 7.5 x 11.2"
- Power Consumption: 110-240v, 50W
- Weight: 6.4 LBS
- AC Cable included
- Length of Cable: 70.8"

## FAQ


### Why are there water droplets inside my fridge?

A bit of water accumulation is completely normal in thermoelectric units and can occur due to condensation dripping from stored products. To remove extra moisture, dry the inside with a soft cloth twice a week or place a desiccant pack inside the fridge to help minimize moisture.

### Why is my fridge not cold enough?

The temperature of the fridge is determined by the temperature surrounding the outside of the fridge (it cools at approximately 16-20 degrees lower than outside temperature).

Updated: 05/2023

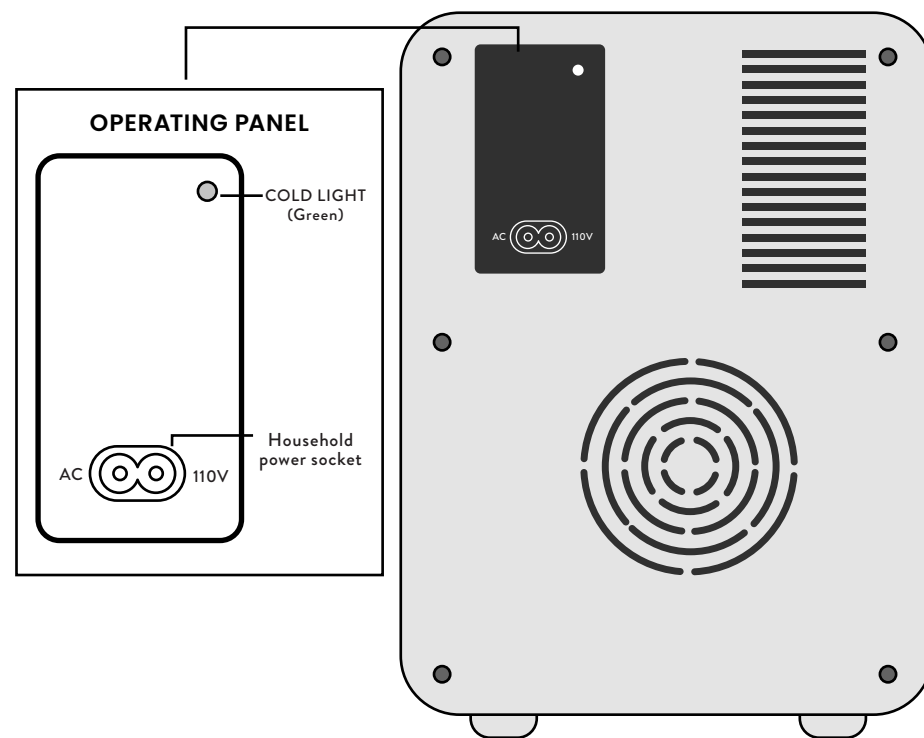

## HOW TO OPERATE THE FRIDGE

1. Connect the AC power cord (household power cord) with the socket of the product.
2. Insert the power socket into the concentric plug. **Highly recommended to use a GFCI outlet.**
3. The green light indicator will be on, indicating that the unit is in cooling mode.

*This fridge is for household use only.*

### AC POWER CORD Household Power Cord

