


# PEARL BOBA TEA

**DIFFUSER**

by SMOKO

*user manual*

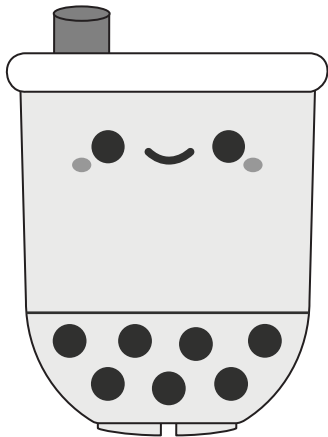

[smokonow.com](http://smokonow.com)

## Thank you for purchasing the SMOKO Pearl Boba Tea Diffuser!

Pearl Boba Tea Diffuser uses ultrasonic waves to vaporize water (and optional essential oils) to produce a cool, fragrant mist.

Please read and follow all safety rules and instructions in this manual before operating.


*Please note: The amount of mist produced will vary depending on the humidity, temperature, and air flow in the room.*

### PACKAGE INCLUDES

- 1 x Diffuser Unit
- 1 x 12V Adapter with Cable
- 1 x Manual

Print Date: 10/2020

# PARTS

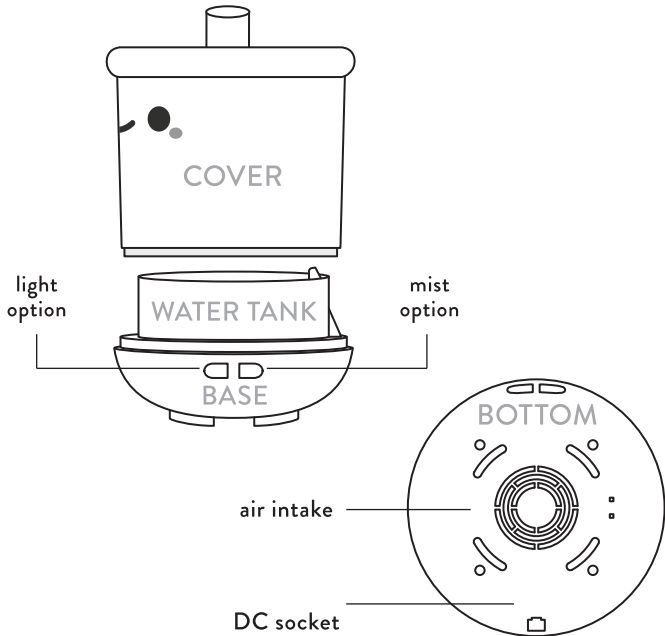

## HOW TO USE

- Place diffuser on a flat, stable surface.
- With diffuser in upright position, remove the upper cover.
- Fill the tank with water, do not exceed max line.
- Only use cold or room temperature water (do not use hot water).
- Optional: Add 2-3 drops of essential oil to water tank (about 0.1-0.15ml per 100ml water).
- Reattach the cover before use.
- Connect the AC Adapter to the DC socket at base of the diffuser (please only use the AC Adapter provided).
- Press Mist to turn on the diffuser for mist air (continue pressing Mist to select duration of mist before auto-shutoff).
- Keep water tank dry when not in use.

## MAINTENANCE

- Unplug the AC Adapter before cleaning.
- After 5-6 uses (or 3 days and more), empty out water tank.
- Wipe the tank with damp cloth.
- Clean each time before using a different essential oil.

## SPECIFICATION

- Dimensions: 4.4 x 5.55 in.
- Weight: 7.6 oz
- Power Input / Output: 12V/1A
- Length of Cord: 59 in.
- Electric Consumption: 12W
- Tank Capacity: 200 ml
- Materials: PP + ABS
- Method of Mist Production: Ultrasonic vibration

## WARNING

- This diffuser will not work without water.
- Do not press MIST if water tank is empty.
- Only use 100% natural essential oil. Impurities may cause the system to malfunction.
- Do not overfill water tank.
- Avoid spill into mechanical system by using a cup to fill water tank. Do not directly fill from faucet.
- If water leaks inside the mechanical system, please allow it to dry before using again.
- Do not touch the ultrasonic vibration plate.
- Do not move the product while it's in use.
- If smoke or burning smell is detected, unplug immediately.
- Always unplug before maintenance.
- This is not a toy, keep away from small children and pets.
- Keep this electronic equipment away from direct sunlight.

# WARRANTY

SMOKO INC. warrants the product for a period of one (1) year from the date of purchase.

## **PRODUCT WARRANTY**

Smoko Inc. will repair or replace, any defective product free of charge (except for shipping charges of the product). All items repaired or replaced thereunder will be subjected to the same limited warranty for a period of six (6) months from the day Smoko Inc. ships the repaired or replaced product.

## **WHAT IS NOT COVERED BY THIS WARRANTY?**

All above warranties are null and void if the Smoko product is not provided to Smoko Inc. for inspection upon Smoko's request at the sole expense of the purchaser, OR if Smoko Inc. determines that the product has been improperly installed, altered in any way, or tampered with. The Smoko Product Warranty does not protect against acts of God such as floods, earthquake, war, theft, vandalism, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances, non-authorized program, or system equipment modification or alteration.

## **HOW TO GET REPAIRED?**

Contact Smoko Inc. at [shop@smokonow.com](mailto:shop@smokonow.com) and provide the following:

1. Where you purchased the product
2. Date of purchase
3. Copy of original receipt

Smoko Inc. customer service will instruct you on proceeding with your claim.

**ENJOY!**

Questions or comments:  
[info@smokonow.com](mailto:info@smokonow.com)



**[smokonow.com](http://smokonow.com) • [@smokonow](https://twitter.com/smokonow) • [#smokonow](https://hashtage.com/smokonow)**