 




advanced electric steriliser and dryer

INSTRUCTIONS FOR USE

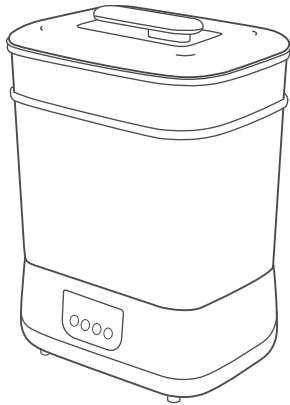

Please read and keep these instructions

423242
09140619_1



Mayborn (UK) Limited,
Balliol Business Park,
Newcastle upon Tyne,
NE12 8EW, UK

Copyright © Mayborn (UK) Limited 2019.

Made in China.

Model number: WX-965D. Voltage: AC220-240V~ 50-60Hz 600W



Any questions?
Visit our website
tommeetippee.com



IMPORTANT WARNINGS!

These instructions can also be found at www.tommeetippee.com

Keep this instruction leaflet for future reference as it includes important information.

This appliance is intended for household use only.

Do not use outdoors.

Before plugging in the Steriliser and Dryer for the first time ensure that the voltage is compatible with your electricity supply by checking the label on the base of the unit.

Ensure water has been added to the unit before switching the unit on.

Do not immerse in water, to protect against fire, electric shock and injury to persons. Do not immerse cord, plugs or other parts of the unit in water or other liquid.

Misuse of the product may result in the risk of fire, electric shock and/or personal injury.

This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

User maintenance other than cleaning and descaling is not required for this product. Cleaning and user maintenance shall not be made by children.

The heating element surface is subject to residual heat after use.



Do not touch hot surfaces use handles and knobs.

When in use the Steriliser and Dryer contains hot water and steam. Keep hands away from steam vents as it can cause burns and scalds. Use in a well ventilated area.

Do not operate any appliance with a damaged cord, plug or after the appliance malfunctions or has been damaged in any manner. If the supply cord is damaged it must be changed by a qualified person in order to avoid a hazard.

 
Always use on a flat heat resistant surface.

Do not move appliance when in use.

Do not let the cord hang over edge of kitchen work surface or touch hot surfaces.

Do not use any accessories other than those supplied with this appliance.

PARTS GUIDE

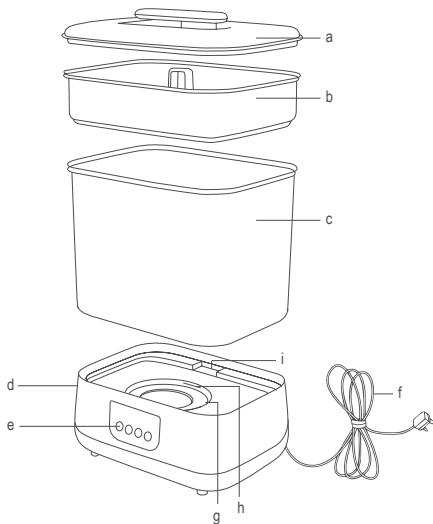

- a. Lid
- b. Upper rack
- c. Lower rack
- d. Steriliser base
- e. Control panel
- f. Lead with plug
- g. Stainless steel heater surface
- h. Max fill line
- i. Air vent

 
 
HOW TO REPLACE THE FILTER

It is recommended to change the filter every 6 months. The filter is found on the underside of the steriliser base (j).

To change the filter:

1. Unclip the filter panel door (k) and remove old filter.
2. Place the filter (l) into the steriliser base, making sure that the tab handle is still visible on top of the filter (m).
3. Place the filter panel door back onto the steriliser base (j).

- j. Steriliser base (underside)
- k. Filter panel door
- l. Filter
- m. Filter tab handle

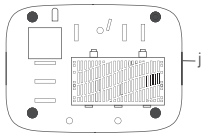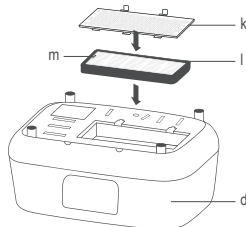

CONTROL PANEL



BEFORE FIRST USE

You must insert the filter provided into the underside of the steriliser base before you start using the steriliser and dryer.

 
USAGE

It is important that all bottles, teats and accessories are empty and that they are clean and fully rinsed in fresh water before placing in the appliance for sterilisation.

Use on level surface and be sure there is no debris under the unit and the rubber pads are touching the surface.

This steriliser is designed for use with Tommee Tippee bottles and feeding accessories (except bottle brush).


The steriliser will hold a maximum of 6 Tommee Tippee Closer to Nature bottles (maximum 4 Advanced Anti-colic bottles) or a combination of fewer bottles plus soothers and breast pump parts.

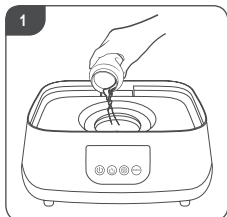


Remove the lid (a) and the racks (b), (c) from the steriliser base (d). Pour 120ml of water onto the stainless steel heater surface (do not go over the max fill line (h)). If using dry only function you do not need to add any water.



 
Insert lower rack (c), place clean bottles with their opening facing downward onto the lower posts. Place hoods onto the bottle bases.

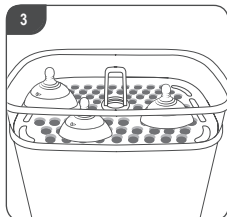

 Insert the upper rack (b) and place in the bottle accessories (eg. teat and screw ring).

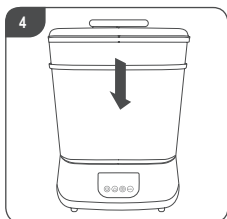

 Place the lid (a) on top. Please ensure that the lid fits securely onto the upper rack without any gaps.

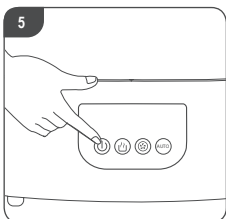

Plug the steriliser into the power outlet. Press the on/off button. The steriliser will emit a "beep" sound and the button will light up. Choose your desired function following the instructions on the next page.

CHOOSE YOUR FUNCTION

STERILISE AND DRY

1. Press the Automatic sterilise and dry button once. The appliance will beep once and the sterilisation cycle will start. The sterilising time is approximately 10 minutes.



2. When the sterilising cycle is complete, the drying cycle will follow automatically. The drying time is approximately 30 minutes.
3. When the drying cycle is complete, the appliance will beep 5 times and power off automatically. Please allow to cool for at least 5 minutes before opening the steriliser.

STERILISE ONLY

1. Press the sterilise button once. The appliance will beep once and the sterilisation cycle will start. The sterilising time is approximately 10 mins.



2. When sterilisation cycle is complete, the appliance will beep 5 times and switch off automatically. Please allow to cool for at least 5 minutes before opening the steriliser.

CAUTION!

If you need to drain water from the base, always pour sideways away from the air vent in the direction marked inside the base.

DRY ONLY

1. Press the dry button once. The appliance will beep once and the drying cycle will start.



2. The drying cycle is approximately 30 minutes.
3. When the drying cycle is completed, the appliance will beep 5 times and switch off automatically. Please allow to cool for at least 5 minutes before opening the steriliser.

Please note: The sterilisation and/or the drying cycle can be stopped any time by pressing the on/off button.

CLEANING

Unplug and allow to cool before cleaning. After each use pour away remaining water from the steriliser base by tipping the steriliser and dryer sideways over a sink, ensuring no water gets into the air vent (i), and wipe clean with a damp cloth only. The lid (a) and the two racks (b, c) can be cleaned in hot water. Do not clean with abrasive cleaners.

WARNING!

TO AVOID THE RISK OF ELECTRIC SHOCK, INJURY OR DAMAGE: ALWAYS UNPLUG YOUR PRODUCT BEFORE CLEANING. DO NOT IMMERSE THE BASE, THE SUPPLY CORD OR THE PLUG IN WATER OR OTHER LIQUIDS. DO NOT CLEAN BASE UNDER WATER TAP.

DO NOT use metal objects or scourers to clean your Steriliser and Dryer. DO NOT use bleach or sterilising fluid to clean it. DO NOT use abrasive or anti-bacterial materials. DO NOT scrub the heat plate.

CAUTION! UNDER NO CIRCUMSTANCES USE ABRASIVE, CORROSIVE OR SCRATCHING CLEANING AGENTS, AS THESE COULD DAMAGE YOUR STERILISER.

Please note: If there is insufficient water to complete the sterilisation phase effectively, the appliance will "beep" 5 times and the function light will flash for 2 hours. Do not use the bottles or accessories. Repeat usage instructions to ensure effective sterilisation.

DE-SCALING

The guide below shows what the frequency of de-scaling should be.

Hard water: 14 days

Medium: 21 days

Soft: 28 days

You can find out your water quality from your water provider.

Unplug the unit and allow to cool before descaling. After each use pour away remaining water from the unit base by tipping the unit sideways over a sink and wipe with a damp cloth only. We recommend that you descale your appliance according to the guidelines above to ensure that it continues to work efficiently. Living in a hard water area can produce limescale quicker than other areas so descaling is required sooner. Use a descaler that is suitable for use with stainless steel and use as per the manufacturer's guidelines. Or you can use white vinegar or a descaling sachet to descale your unit. Please use as per manufacturer's guidelines. Where no method is stated, 1:4 descaler to water ratio can be applied.

TROUBLE SHOOTING

This information can also be found at tommeetippee.com

CONDITION	POSSIBLE CAUSE	REMEDY
Machine will not start	Appliance is unplugged	Make sure the plug is securely inserted into the power outlet and power is turned on
	Appliance is not turned on	Press on/ off button before choosing function
Scaling on the stainless steel heater surface	Limescale	Descale Unit
White marks on bottles	Limescale	Descale Unit

INFORMATION ON THE DISPOSAL FOR WASTE ELECTRICAL & ELECTRONIC EQUIPMENT (WEEE)

This symbol on the products and accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal for treatment, recovery and recycling, please take these products to designated collection points where they will be accepted on a free of charge basis. In some countries you may be able to return your products to your local retailer upon the purchase of a new product.

Disposing of this product correctly will help you save valuable resources and prevent any possible effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest collection point for WEEE.

Penalties may be applicable for the incorrect disposal of this product in accordance with national legislation.

The product is fitted with a mains plug containing a fuse (10A). If it ever becomes necessary to replace the fuse, only use fuses that are marked AC250V, and rated at 10A. In the unlikely event that this plug is not suitable for the sockets in your home, it should be removed and a suitable plug fitted as follows:

The wires of the mains lead are coloured in accordance with the following code:

GREEN AND YELLOW – EARTH

BLUE – NEUTRAL

BROWN – LIVE

As these colours may not correspond with the coloured markings sometimes used to identify the terminals in the plug, connect as follows.

The wire coloured GREEN AND YELLOW must be connected to the terminal marked E or by the earth symbol or coloured GREEN or GREEN AND YELLOW. The wire coloured BLUE must be connected to the terminal marked N or coloured BLACK. The wire coloured BROWN must be connected to the terminal marked L or coloured RED.

 
If you are in any doubt about how to wire a plug or replace a fuse safely, consult a qualified electrician.





電子蒸氣消毒及烘乾機

產品使用說明

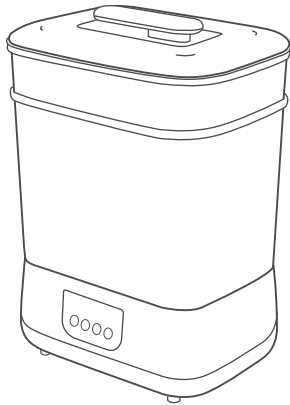

請仔細閱讀並保留此重要的使用說明

042324238



Mayborn (UK) Limited,
Balliol Business Park,
Newcastle upon Tyne,
NE12 8EW, UK

Copyright © Mayborn (UK) Limited 2019.
Made in China.

Model number: WX-965D. Voltage: AC220-240V~ 50-60Hz 600W



Any questions?
Visit our website
tommeetippee.com



重要警告!

你亦可於www.tommeetippee.com找到此說明書。

此說明書內有重要資訊，請小心保存，以作日後參考。

本產品只供家居使用，請勿在戶外使用。

將產品接上電源前，請檢查你家居的電壓是否與顯示在電子蒸氣消毒及烘乾機底部的電壓一致。

開始使用前，請確認已將清水倒入消毒器內。

請勿把電子蒸氣消毒及烘乾機浸於水中。為免造成火災、觸電及危害他人，請勿將電線、插頭及消毒及烘乾機浸於水或任何液體中。

不適當使用本產品，會產生火災、觸電及受傷等危險。

本產品不應給兒童使用。請確保此產品及電線遠離兒童。

生理、感官或精神有殘障人士，或缺乏經驗及知識者，都可操作此產品，但必須在監督及指導下明白如何安全使用產品，及了解有關風險。

請勿讓兒童把本產品當作玩具。

除清潔及除垢外，本產品不需其他特別的保養工序。

清潔及除垢工序不應由兒童進行。

使用時，本產品的表面會變熱。

請利用手柄，請勿觸摸灼熱的表面。

當消毒及烘乾機在運作時，會產生熱水及蒸氣。雙手應遠離排氣孔免被蒸氣燙傷。請在通風良好的地方使用本產品。

如發現產品的電線或插頭有損壞，或產品發生故障，應立即停止使用。電線如有損壞，應立即聯絡合資格的電器技師維修或更換，以免發生危險。

 
請在耐熱的平面上使用本產品。

請不要移動運作中的消毒及烘乾機。

請勿把電線掛於廚房的工作桌面邊緣或接觸高溫表面。

除了本產品提供的配件外，請勿使用其他配件。

組件指南

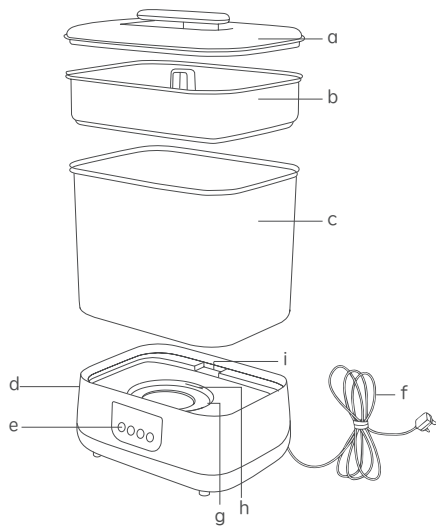



如何更換過濾網

我們建議每6個月更換一次過濾網。
過濾網位於消毒器底座的底部。

要更換過濾網：

1. 打開過濾網放置室門 (k) 並移走舊的過濾網。
2. 將新的過濾網 (l) 放入消毒器底座內，請確定過濾網上的小標籤 (m) 向上，可從頂部被看見。
3. 把過濾網放置室門重新組裝到消毒器底座上 (d)。

  - j. 消毒器底座 (底部)
k. 過濾網放置室門
l. 過濾網
m. 小標籤

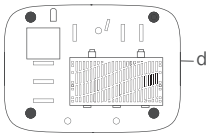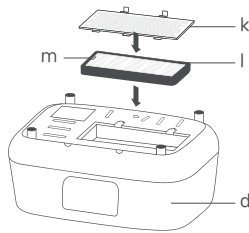

控制面板



首次使用前

在開始使用消毒及烘乾機之前，必須將包裝盒內提供的過濾網組裝到消毒器底座內。

 
使用說明

消毒前，請確保已清除所有在奶瓶、奶咀及餵食配件上的殘餘物，並徹底清潔乾淨。

請在平坦及穩固的平面上使用此產品，並確保消毒器底座下沒有碎屑，在底座下的橡膠墊要接觸到平面。

此消毒器專為Tommee Tippee奶瓶及餵食用具而設 (奶瓶刷除外)。


本產品最多可放6個Tommee Tippee Closer to Nature奶瓶及配件 (或最多4個Advanced Anti Colic防脹氣奶瓶及配件)，或放少量奶瓶、安撫奶嘴及吸奶器配件。

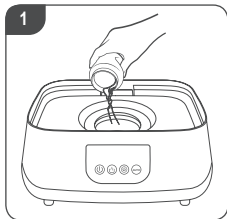


把主蓋 (a) 及所有配件架 (b, c) 從消毒器底座上取出。倒120毫升清水於不銹鋼發熱盤內 (請不要超過最高注水線 (h))。如你只啟動烘乾功能，則不用加水入消毒器底座內。



 
放下層配件架 (c)，將清潔好的奶瓶瓶頸向下，放於下層配件架槽位上。把奶瓶蓋放置在奶瓶的底部。

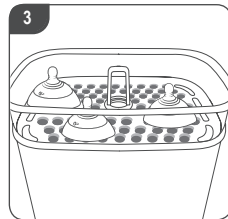

放上上層配件架 (b)，將其餘奶瓶配件 (如奶嘴、螺絲蓋) 放到上層配件架上。

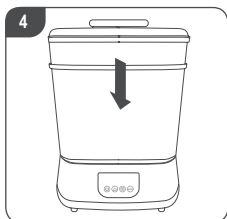 

蓋上主蓋 (a)。請確保主蓋牢固地蓋在上層配件架上，並沒有任何空隙。

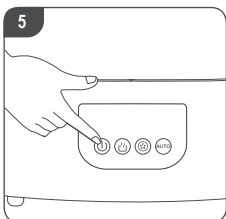 

接上電源。輕按開關按鈕，消毒器會發出“嗶”聲響，開關按鈕會亮起。按照下一頁的使用說明，以選擇您需要的功能。

選擇所需要的功能

自動消毒及烘乾

1. 輕按自動消毒及烘乾按鈕，機座會發出一聲“嗶”聲，然後消毒程序便會開始。消毒時間大約需時10分鐘。
2. 隨著消毒程序結束後，烘乾功能會自動開始。烘乾時間大約需時30分鐘。
3. 當烘乾過程完成後，機座會發出5聲“嗶”的聲響並會自動關機。請等待5分鐘讓消毒器內溫度冷卻才打開蓋子。

只進行消毒

1. 輕按消毒按鈕，機座會發出一聲“嗶”聲，然後消毒程序便會開始。消毒時間大約需時10分鐘。
2. 當消毒過程完成後，機座會發出5聲“嗶”的聲響並會自動關機。請等待5分鐘讓消毒器內溫度冷卻才打開蓋子。

警告!

如需要倒去消毒器底座內剩餘的水，請沿著消毒器底座內側的指示標記方向倒水，切勿將水倒入通風口。

只進行烘乾

1. 輕按烘乾按鈕，機座會發出一聲“嗶”聲，然後烘乾程序便會開始。
2. 烘乾時間大約需時30分鐘。
3. 當烘乾過程完成後，機座會發出5聲“嗶”的聲響並會自動關機。請等待5分鐘讓消毒器內溫度冷卻才打開蓋子。

請注意: 如需在消毒程序或烘乾程序中途暫停運作，可以輕按開關按鈕一下。

清潔說明

清洗前，請先拔除電源插頭並待機座冷卻。

每次使用後，請沿著消毒器底座內側的指示標記方向將剩餘的水倒去，並確保沒有水進入通風口 (i)，然後用乾淨的布輕輕抹乾。主蓋 (a) 及上下層配件架 (b, c) 可用熱水清洗。請勿用具有磨損性之清潔劑清洗機座及所有配件。

警告!

為避免觸電、火災或受傷等危險：進行清潔前，請先拔除電源插頭。

請勿將底座、電線或插頭浸於水或任何液體中。

切勿將消毒器底座直接放在水龍頭下清洗。

請勿使用金屬洗刷用品擦洗您的消毒及烘乾機。

請勿使用漂白劑或化學消毒劑/藥片清洗消毒及烘乾機。

請勿使用具磨損性或抗菌功能的清潔劑。

請勿擦洗發熱板。

警告! 在任何情況下，切勿用具有磨蝕性、腐蝕性或刮擦的清潔劑清潔消毒機，因為這可能會損壞您的消毒機。

請注意: 如果進行消毒過程時沒有注入足夠的水份，機座會發出5聲“嗶”聲，設定按鈕會閃亮2小時。此時，請不要使用消毒機內的奶瓶及配件，並依照<使用說明>重新設定，以確保消毒程序能有效地完成。烘乾時間是以烘乾260毫升奶瓶計算。如要烘乾較大容量的奶瓶，可能需要額外的烘乾時間。

除垢

請依照以下指示，定期為消毒器底座進行除垢工作。

硬水地區：每隔14日一次

中性水地區：每隔21日一次

軟水地區：每隔28日一次

請向您的食水供應商了解您所屬地區的水質。

進行除垢前，請先拔除電源插頭並待消毒器冷卻。每次使用後，請待消毒器冷卻後把剩餘的水倒去並用乾淨的布輕輕抹乾。我們建議根據以上指引，定期為消毒器進行除垢，以確保消毒器能有效地運作。如生活在一些硬水地區，水垢會更快積聚，可能需要更頻密的進行除垢工作。請購買適合不銹鋼使用的除垢劑並依照生產商的使用說明進行除垢。或可使用白醋或除垢粉為您的消毒器除垢。使用時，請依照生產商的說明使用。如沒有使用說明，請用1份除垢劑及4份清水的份量以進行除垢工序。

常見問題

你亦可於www.tommeeippee.com找到以下資料。

故障狀況	可能原因	解決方法
無法啟動機座	機座未有接駁電源	請確保插頭插入電源插座並已啟動電源。
	未有啟動機座	在選擇設定前，請先輕按開關按鈕以啟動機座。
發熱盤出現沉積物	有水垢	請為您的消毒器進行除垢工作
奶瓶出現白色粉末	有水垢	請為您的消毒器進行除垢工作

關於棄置電器及電子設備 (WEEE)

這個在產品及附帶文件上的符號代表舊的電子及電器產品不應跟其他一般生活垃圾混合。要妥善處理，回收和循環再造，請把此產品送到指定的收集站。有一些國家，當你購買新電器時，可以把舊電器退回零售商。

正確棄置此產品可幫助保護寶貴的資源及防止影響人類健康及環境。請聯絡當地的政府詢問關於就近的廢棄電器及電子設備 (WEEE) 的收集站。

在某些國家，如不正確棄置電器及電子產品有可能會被罰款。請聯絡當地政府，查詢有關詳情。

此產品的電源插頭配有保險絲 (10A)。如果必需更換保險絲，只可使用標明AC250V及10A的保險絲。如插頭不適合你的插座，請先移除及安裝合適的插頭如下：

接線的顏色有以下不同的代碼：

綠色及黃色 - 地線

藍色 - 水線

棕色 - 火線

由於接線顏色可能會與插頭上的顏色標示不一樣，因此請根據以下指示連接插頭。

綠色及黃色的電線必須連接插頭上標示為“E”/地球符號/綠色/綠色及黃色的位置。而藍色的電線必須連接插頭上標示為“N”/黑色的位置。棕色的電線必須連接插頭上標示為“L”/紅色的位置。

如果你對連接插頭或對更換保險絲有任何疑問，請諮詢合資格的電器技師。

