

ANDREW MARTIN

SHEILD DINING TABLE

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

IMPORTANT :These parts can be cumbersome and heavy to some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and insure the furniture is not damaged during the assembly Process.

PART LIST

- A. [1] TOP
- B. [1] WOOD LEG
- C. [1] METAL LEG

INSTRUCTIONS

1. Place the top (A) on the leg (B)/(C). Align and insert Allen bolt (1) together with lock washer (2) and flat washer (3) to each hole under top through the hole on the top panel of the leg. Tighten with Allen wrench (4).see **FIGURE 01**.(Do not tighten bolt).
2. Assembly is complete.

HARDWARE LIST





NO	DESCRIPTION	QTY
1	 ALLEN BOLT	10
2	 LOCK WASHER	10
3	 FLAT WASHER	10
4	 ALLEN WRENCH	1

FIGURE 01

