 


PIVOT PRO 320 MULTI-USE PERSONAL LIGHTING SYSTEM USER GUIDE

PARTS LIST AND IDENTIFICATION

Please verify the contents of your Pivot PRO 320 Multi-use Personal Lighting System:

 
- Pivot PRO 320 Headlamp
- Flat Base Magnet Mount
- Head Strap with Removable Strap Mount
- Flat Base Mount with 3M Foam Pad with Adhesive
- Curved base mount with 3M Foam Pad with Adhesive
- GO Action Camera Mount Adapter
- USB Charging Cable

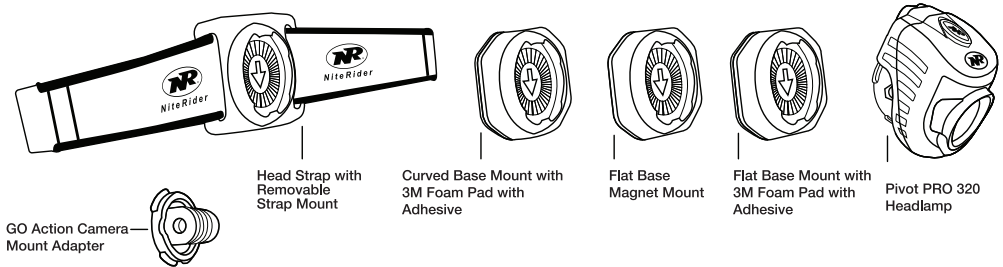

PIVOT PRO COMFORTFIT™ HEADBAND ADJUSTMENT

Adjust the head strap as needed for a comfortable fit on your head.

To increase tension, pull adjustment tabs apart. To loosen, slide adjustment tabs in.

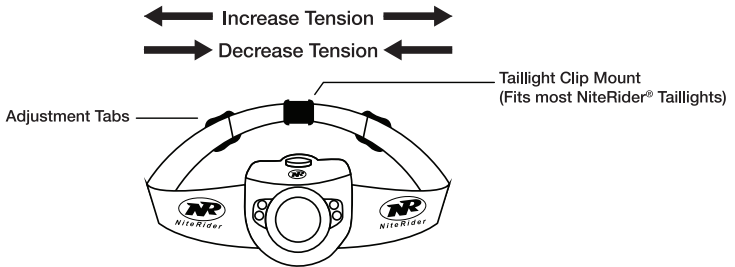


MOUNTING THE PIVOT PRO 320

The Pivot PRO 320 includes a mountable base with industrial-strength all weather adhesive that is compatible with a wide variety of curved and flat surfaces.

1. Prior to applying the mount, clean the surface to be mounted on. Most substrates are best prepared by cleaning with a 50-50 mixture of isopropyl rubbing alcohol (IPA) and water. Bond strength is dependent upon the amount of adhesive-to-surface contact developed.
2. Peel adhesive backing from mount then place onto clean surface pressing down with firm pressure. Firm application pressure develops better adhesive contact and helps improve bond strength.

PIVOT PRO 320 - BASE REMOVAL


To remove the Pivot PRO 320 from the base, rotate the headlamp 180° counterclockwise from the base. Reverse steps to reattach to base.

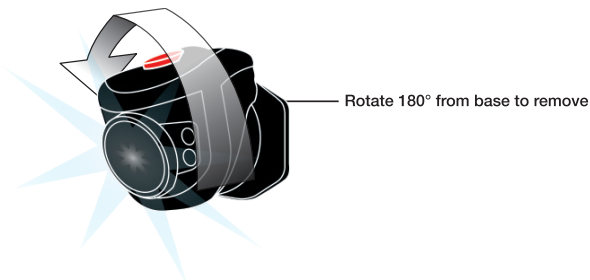






OPERATION

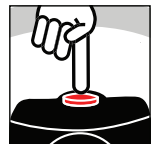Unplug light from charger before use

1. A single press of the power button will power ON the light in Red Night Vision mode.
Go through Red Night Vision light modes by pressing the power button once.
2. To access Steady White light modes, press and hold power button for 2 seconds until light changes from red to white.
3. To access Safety Flash modes, press and hold power button for 3 seconds until light changes from steady white to flashing white.
4. To power OFF, press and hold power button until light shuts OFF.



RUN TIMES*

9 MODES	RED	RED	WHITE	WHITE	WHITE	WHITE	FLASH	BEACON	S.O.S.
	Night Vision	Safety Flash	Diffused Mode	Low 12 Lumens	Medium 54 lumens	High 320 lumens			
	9:30h	50:00h	17:30h	32:00h	9:00h	2:00h	23:00h	77:30h	47:00h

*Run time specifications may vary

BATTERY LEVEL INDICATOR

With approximately 20% battery capacity remaining, the LED indicator (located in the power button) on the headlamp will turn from blue to red.

BATTERY CHARGING AND CARE

1. Plug the USB Charging Cable into the USB port located on the back of the light. Then plug the other end into a powered-on computer or directly to a wall outlet using the supplied AC adapter.
 2. The LED indicator in the power button will light up red while the battery is charging.
When the battery is fully charged, the LED will light up blue.
 3. Unplug the AC Adapter from the battery by grasping the connectors rather than the cable.
 4. Ensure USB port cover is fully closed and tightly sealed. It is good practice to store your battery away with a full charge.
- For extended storage periods, charge the battery every three months to maximize its lifespan.**

CHARGE TIME



2:30h*

*Charge time may vary

Charge Port



RESERVE MODE

Reserve mode will automatically shift your light to low beam when the battery is at 10% capacity. In reserve mode you will only be able to use low beam, flash modes. High beam and medium beam will be disabled.

PROTECTING YOUR INVESTMENT

Properly charge your battery to maximize its lifespan (see the "Battery Charging and Care" section for detailed information).
The Pivot PRO 320 will perform in wet weather conditions, but submerging it in water will damage the system. To prevent water damage, ensure USB port cover remains tightly sealed while operating your light.

SUPPORT

If you experience difficulties during product installation or operation, NiteRider® provides free telephone support on weekdays from 8:00 am to 4:30 pm (Pacific Time) at 800.466.8366, Ext 4. You may also e-mail us at help@niterider.com.

WARRANTY

NiteRider® stands behind its products with the following warranties:

- Lifetime warranty: Covers any defects in material and workmanship, mechanical components (housings, covers, mounts and fasteners) and LEDs
- 2-year warranty: Printed circuit boards, switches, and AC adapters
- 1-year Warranty: Rechargeable battery cells

To obtain warranty service have your original sales receipt.

Contact the NiteRider® Customer Service Department at 800.466.8366, Ext. 4 to obtain a Return Merchandise Authorization (RMA) number.

The RMA number must be prominently displayed on the outside of your package.

The product must be properly packaged to prevent damage in transit.

For International customers, please contact your local NiteRider® Distributor. Go to: niterider.com/pages/international-distributors

For complete warranty information, please visit our website at www.NiteRider.com



12255 Crosthwaite Circle, Suite A
Poway, CA 92064, USA
(800) 466-8366 | +1 (858) 268-9316
WWW.NITERIDER.COM

NiteRider