 




User Manual

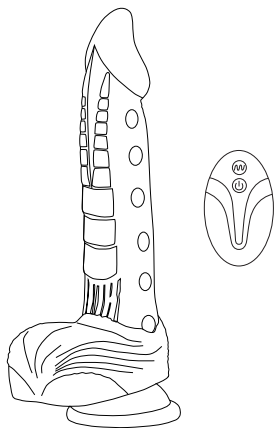


Alger

Please take a few minutes to read the instructions before using the product.
Please charge and clean the product before using it. It's recommended to use the original charging cable only.



• Product Specifications

Product Name	Alger
Product Materials	Liquid silicone
Battery	Li-Ion Rechargeable
Using Time	1 Hour
Charging Time	1.5 Hours
Waterproof	Splash-proof
Net Weight	428 g
Size	220*38 mm
Insertable Length	180 mm

 • Size

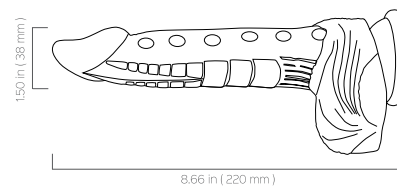

• Buttons Display

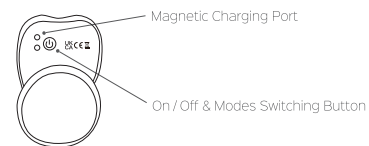  

• Instruction

Controlled with button on vibrator:

- Press and hold the button for 1.5s to turn on / off the product.
- After the product is turned on, press the button again to start and switch between 5 vibrating&thrusting patterns.
- After the product is turned off, press the button again to reset the thrusting part to initial position.

Remote control:

- After the product is turned on by the button on the vibrator, press the button on remote control to start and switch between 7 vibrating patterns. Press and hold the button for 1.5s to stop vibrating, press again to restart vibrating.

- After the product is turned on by the button on the vibrator, press the button on remote control to start and switch between 5 thrusting patterns. Press and hold the button for 1.5s to stop thrusting, press again to restart thrusting.

• Light indicator

power on		light on
working		light on continuously
power off		light off
charging		light flashes
fully charged		light on permanently

• Maintenance

- Wash it thoroughly with mild soap and clean water.
- Air dry or dry it with a clean towel.
- Store it in a cool, dry and dust-free place, avoid direct sunlight.

• Attention

- This product is for adult use only; keep out of reach of children.
- It's recommended to use with water-based lubricants.
- Please stop using immediately if you feel uncomfortable during use.