

GO GO Bird User Manual

1 Charge lithium battery of Go Go Bird

a. Turn off the switch at the bottom of Go Go Bird, pull out lithium battery from the tail of Go Go Bird, refer to figure 1.

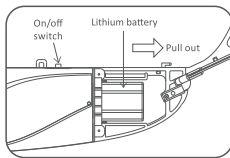 


Figure 1

b. Plug lithium battery directly into USB charger, charger can be connected to adaptor, computer etc., DC 5.0V power supply, refer to figure 2.

 


Figure 2

c. The green signal light of the charger is on, indicating that power is on; after inserting lithium battery, red signal light is on, indicating that the battery is charging; red signal light is off, indicating that the lithium battery is full.

d. After charging finished, unplug the charger from DC 5.0V power supply and extract the lithium battery promptly.

e. Plug the full lithium battery into the battery container, tail of Go Go Bird, pay attention to the insertion direction, refer to figure 3.

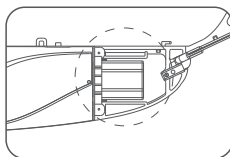 


Figure 3

2 Replace and input AAA batteries of remote control

a. Turn off the switch of the remote control, extract the battery cover, refer to figure 4.

b. Insert two 1.5V AAA batteries correctly based on polarity identification into battery compartment.

c. Reload battery cover, it is loaded correctly when you hear a slight click. Remote control will automatically turn off in ten minutes when not in use.

d. For AAA batteries that running out of power, please remove from battery cover.

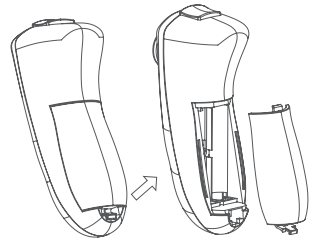 


Figure 4

3 Preparation for flying

Go Go bird already matched when leaving factory, if remote control can connect with Go Go Bird, please ignore this step. If not, please refer to below pairing steps.

a. Turn on the switch of Go Go Bird and place the remote control close to Go Go Bird.

b. Press the function button and turn around button (B) of the remote control at the same time (remote control should be off), then press the switch button of remote control, then the signal light of remote control will be on, refer to figure 5.

c. Pay attention to the signal light of Go Go Bird, if the signal light is flashing, indicating that the pairing matching is successful.

If fail to match, please repeat above steps.

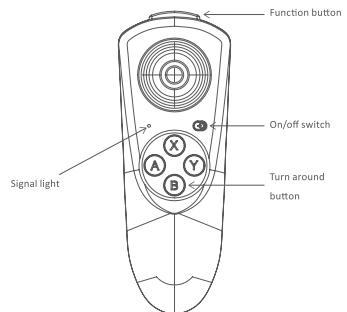 


Figure 5

4 Remote control operation

- Pull up the rocker (upwards), Go Go Bird will speed up; move down the rocker (downwards), Go Go Bird will slow down, refer to figure 6.
- Move the rocker to the left (left), Go Go Bird will turn left; move the rocker to the right (right), Go Go Bird will turn right.
- Press the button A, Go Go Bird will keep flying in circle counter clockwise; press button Y, Go Go Bird will keep flying in circle clockwise.
- Press button B, Go Go Bird will turn around. When Go Go Bird is flying, press button X, Go Go Bird will descend.
- The IR evading obstacle function, as default setting, will be on when Go Go Bird fly. You can turn on/off this IR evading obstacle function by pressing function button and turn around (B) button of remote control at the same time for better user experience.

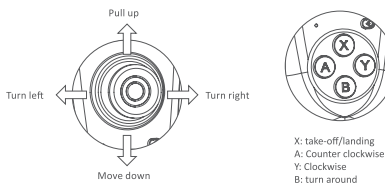 


Figure 6

5 How to fly Go Go Bird

The right way to hold Go Go Bird, refer to figure 7.

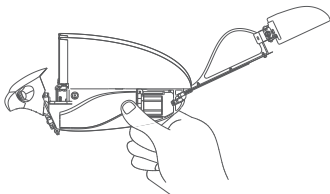 


Figure 7

How to take off:

Method 1. By somatosensory switch: Turn on the switch of Go Go Bird, hold Go Go Bird on horizontal level, sway up-and-down, wings start to flap then release, Go Go Bird will fly away.

Method 2. By remote control: Turn on the switch of Go Go Bird and remote control, hold Go Go Bird on horizontal level, press button X of remote control, wings start to flap then release, Go Go Bird will fly away.

- The default altitude setting is to fly straight, after Go Go Bird fly away, please use remote control rocker to monitor the direction.
- Go Go Bird is with altitude hold sensor, when you fly Go Go Bird, please hold it higher with your hand then release, Go Go Bird will be on auto fly mode. Then please use remote control to monitor.

6 Malfunction & solution

- No response when turn on the remote control

Solution: Double check whether AAA batteries install correctly according to the polarity identification, or replace with new batteries.

- No response or lack of power when turn on Go Go Bird

Solution: Make sure the lithium battery of Go Go Bird is fully charged.

- Remote control fail to connect with Go Go Bird

Solution: Turn off Go Go Bird and remote control, repeat the pairing steps.



7 Warnings

a. When you take out Go Go Bird from the box, try not to grab the wings and tails, keep Go Go Bird away from thermal source, sharp objects.

b. For multiple Go Go Bird playing, please pair one with one individually, do not turn on the switch of two Go Go Birds and pair at the same time.

c. Please keep Go Go Bird within your sight when Go Go Bird is flying. When Go Go Bird is on flying mode, keep Go Go Bird away from water, trees, high voltage wire etc..

d. Press on/off or button X in emergency, Go Go Bird will stop flying immediately and drop on the ground. Please check the wires, plug, shell and other parts regularly. If there is any damage please stop using until it is fixed completely.

e. Please use the lithium battery that comes with Go Go Bird only. Do not match with other lithium battery.

f. Please charge the lithium battery under supervision of adults, and remove the lithium battery from Go Go Bird first before charging.

g. Please install AAA batteries into remote control based on polarity identification. Please extract AAA batteries that running out of power from Go Go Bird. Do not short circuit the power supply terminal.

h. This product is not suitable for children under 3 years old.



REACH RoHS

MADE IN CHINA