




Kid' s Digital Camera Instruction Manual



www.thezoofamily.com
info@thezoofamily.com

Button Description

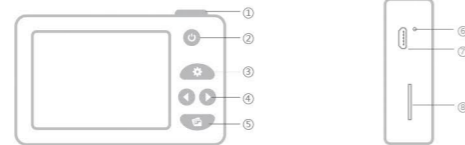


- ① Shutter Button: Short press to take picture, long press for 2 seconds for video recording.
- ② Power Button: Long press to turn ON/OFF, When camera is on short press of the button returns camera to viewfinder.
- ③ Settings Button: Short press to enter settings, long press to zoom in.
- ④ Left/Right Button: Short press can select modes or browse through pictures.
- ⑤ Album Button: Short press to enter album, long press to zoom out.
- ⑥ Reset button can be used if camera is not functioning normally or card cannot be read. Use a toothpick or needle and long press the button to reset.
- ⑦ Charging/Data: Suitable for use with 5V USB chargers. You can also transfer photos via Micro USB.
- ⑧ Comes with included 16GB and supports up to 32GB TF/microSD card slot.

Icon Description



Data Transfer

For data transfer, you can connect the camera directly to your Mac or PC. Otherwise you can remove the TF or SD card to be used with compatible readers. Card also supports USB OTG phone transfers with compatible readers as well.

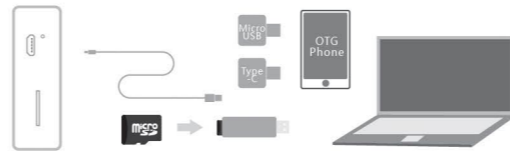

Product Advisory

- ① When product is out of battery, please use a 5V charger to top up battery.
- ② If your camera is not functioning properly, try restarting it via the reset button.
- ③ Do not tamper or dismantle device if you do not know what you are doing.
- ④ Do not physically hit the device or sit on it as this will damage the battery.
- ⑤ Device is not waterproof do not submerge or expose to water.

Fault Solution

| Fault | Fault Typ | Solution method |
|-------|------------------------|--|
| A | No Boot | Please try to charge |
| B | Memory Card error | Format the memory card, or replace the memory card |
| C | system halted, No Boot | Press the reset key Reboot system |

Your Digital Camera is warranted to be free of defects in material or workmanship for one year.

Warranty does not cover:

- ① Wear and Tear.
- ② Damages arising from misuse or use not in accordance with product instructions.
- ③ Warranty does not cover defective product as a result of any circumstances not involved in the manufacturing or faulty parts.

Specifications

Product name: Kid' s digital camera
 Product model: CDC-3
 Battery: 1100 mAh
 Screen size: 2.0inch IPS screen
 Charging time: 3 hours
 Maximum expansion: 32GB TF memory card
 Weight: 65g
 Input voltage: DC 5.0V
 Package includes: camera host X1, cable X1, cartoon sticker X1, instruction X1. Micro USB OTG adapter X1, Type C OTG adapter X1