


ASSEMBLY INSTRUCTIONS


PARTS LIST

KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION
1	5	Caster	8	1	Mechanism	15	1	Seat Post Cover
2	1	Base	9	6	Mechanism Screw	OPTIC	DNAL	(for chairs with arm only)
3	1	Seat Post	10	1	Backrest Bolt+ Washers	16	2	Arm Bracket
4	1	Backrest	11	1	Back Post Bellow	17	8	Arm Bracket Screw
5	1	Backrest Post	12	2	Back Post Bellow Screw	18	2	Armrest
6	1	Backrest Post Screw	13	1	M5 Size Allen Wrench	19 2		Arm Width Adjustment Knob + Washers
7	1	Seat	14	1	M6 Size Allen Wrench		2	

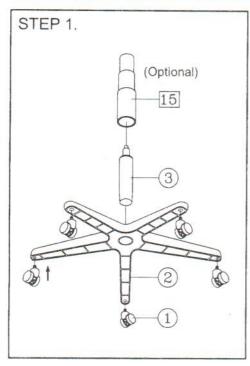


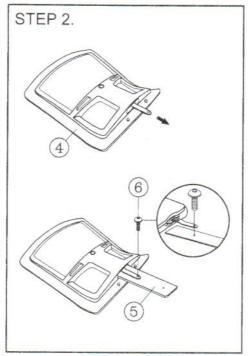

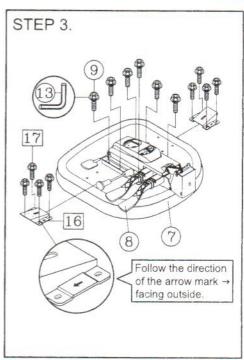

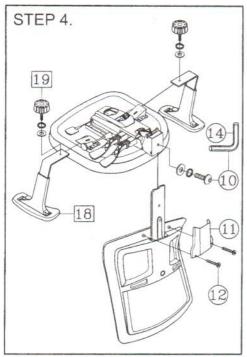



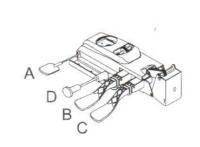

MECHANISM INSTRUCTIONS:

- A Pneumatic seat height adjustment
- B Seat angle adjustment:
 Seat angle adjusts independently with a single lever.
- C Backrest angle adjustment:

 Back angle adjusts independently with a single lever.
- D Sliding seat: It provides seat depth adjustment for different user leg lengths.

ATTENTION

- THIS ASSEMBLY INSTRUCTION IS ONLY FOR ASSEMBLING THE CHAIR. THE CHAIR DRAWING MAY BE DIFFERENT FROM CHAIR APPEARANCE.
- 2. SOME SCREWS MAY PREASSEMBLED , ASSEMBLERS CAN IGNORE THE STEP.
- REMOVE ALL ITEMS FROM THE CARTON. VERIFY ALL PIECES BEFORE ASSEMBLY.

PREVENTIVE MAINTENANCE AND WARNING!

- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- DISPOSE OF PACKAGING PROPERLY
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
- EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.