## **AQUAvalve**

Simple care guidelines

## Your SpringPot 12 System set-up guidelines





 


Ensure the silicone is sitting parallel on the hole below it. Hold at eye level to check the position is correct

## Ensuring that the AQUAvalve5 floods and drains correctly



Making sure your AQUAvalve5 floods and drains correctly is simply achieved and only takes a few seconds.



- \_\_\_\_\_
- **3** The silicone must create a tight seal when touching the hole.

4 If it looks like it is not sitting parallel on the hole below, simply lift the top float and apply pressure to one side of the silicone, drop the float and hold at eye level again. Repeat the procedure if necessary.

## Care and maintenance

1 At the end of your growing season, clean the AQUAvalve5 using warm soapy water. Using an old tooth brush will help.


> The AQUAvalve5 is easily disassembled. The top float will slide all the way across and the bottom float is unclipped from its pivoting position. The circular discs fitted to the top float can also be removed by using pliers to grip the raised point.

At this point is it advisable to remove the silicones to avoid them being lost.

2 It is also handy to have a paper clip or pipe cleaner to hand so that you can push it through the AQUAvalve5 nozzle, this will remove any lime scale build up that may have occurred during the growing season.

Blowing through the AQUAvalve5 nozzle will also help to remove any build up. Do not under any circumstances use a drill & drill bit to clear the AQUAvalve5 nozzle.

This will potentially damage the AQUAvalve5 beyond repair.

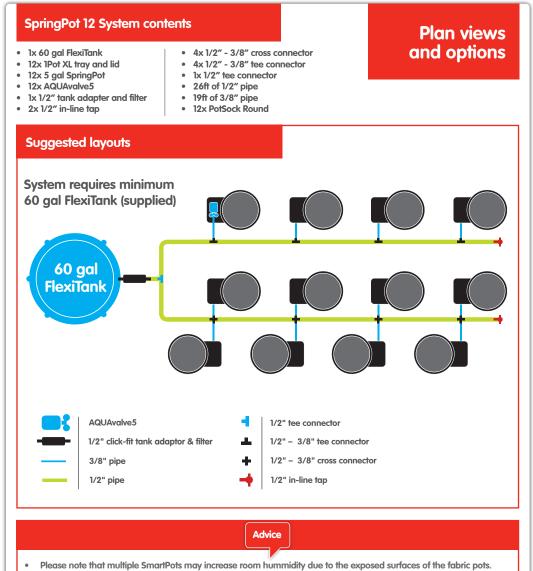

- Pot up your plants, water through, then allow your plants to establish in the pots for a period of 7 to 10 days before turning your system on. This will encourage a stronger and healthier root system.
- Always raise your reservoir to a minimum of 6" above the highest AQUAvalve5 and re-fill the reservoir when there is approximately a 1/3 of the solution left NEVER ALLOW THE RESERVOIR TO RUN EMPTY.
- With AQUAvalve5 systems mineral or organic fertilisers may be fed via the reservoir and pipework. Organic fertilisers will require a water pump in the reservoir running for 15 mins every 2 hrs and cleaning of the reservoir, pump, and filter each time the reservoir empties. Flush pipework with plain water every time the reservoir empties.
- Clean all substrate from the bottom and sides of the pots before placing in each tray. This will ensure your system is clean from the start.
- Always use free draining substrates, for example: soil/perlite, coco/perlite, soil/clay pebbles, coco/clay pebbles, rockwool/clay pebbles.

**SpringPot 12 dimensions** SpringPot 12 System setup instructions ····· 11" ----60 gal 31.9" 15.2" FlexiTanl 5 gal pot 4 σ Fill SpringPot with medium and pot Fit the PotSock Round up plants. over the base of Water through pot each SpringPot and allow to drain outside the tray. 3 4 Remove collar. Push 3/8" pipe through Connect AQUAvalve5 collar and attach to so 'half moon' is on T AQUAvalve5 nozzle. section in the tray. Rescrew collar - DON'T overturn ... when you feel it grip **STOP**. 5 6 Cut 3/8" / 1/2" pipe to Position trav so it is appropriate length level. 7 8 Place SpringPot in the trav, make sure it is CLEAN! Place lid over valve onto trav. According to the size of your system connect your 3/8" / 1/2" pipe to relevant fitting or reservoir... Using your front instruction sheet, repeat the module set up instructions for the number of trays. Allow your plants to establish for 7-10 days before turning system on Advice

If you require any guidance email - info@autopot-usa.com