QUICK START GUIDE

poooliprint. XL

TABLE OF CONTENTS

In the box - - - - - 1 My PoooliPrinter parts _ _ _ _ 2 How to use _ _ _ _ _ 3 Download the Poooli App ___ 4 Bluetooth connection _ _ _ _ 5 How to replace a paper roll _ _ _ _ 6 Paper roll size selection _ _ _ _ 7

 
IN THE BOX

PoooliPrinter XL

PoooliPrinter

White Roll x1

(Inside the Printer)



MY POOOLIPRINTER PARTS

- 1 Power Light
- 2 Power Button
- 3 Paper Output
- 4 Cover Opening Button
- 5 USB Connector

- 1 Print Head
- 2 Paper Roll Holder
- 3 Scroll Wheel
- 4 Cover Lock 5 Reset Button
- Green: Standby / Charging Completed Green Flash: Charging / Updating
- Red Flash: Out of paper roll / Cover Open / Low Battery

Hold power button for 3 seconds to turn ON/OFF

Recharging

Powering ON/OFF

PoooliPrinter XL.

Light Status

Fully recharge your device before the first time use.

It can be recharged from a USB charger.

It takes about 90 minutes to fully recharge.

HOW TO USE





DOWNLOAD THE POOOLI APP



BLUFTOOTH CONNECTION

- Open the App and click "CONNECT".
- Connect to the device by searching for Bluetooth devices and select "Poooli L3"



HOW TO REPLACE A PAPER ROLL

- Beware fingers pinching when opening cover as shown on Figure 1
- Press the cover opening button to open cover and
- Place the roll of paper coming out as shown on Figure 2
- Once the paper roll is properly installed you can close the cover back to its original shape.



Figure 1

PAPER ROLL SIZE SELECTION

To user paper rolls of different sizes move both paper rolls holders to their corresponding slots

