



In the box _ _ _ _ _ _ _ _ 1 My PoooliPrinter parts_____2 How to use_____ Download the Poooli A4 App or Drivers _____ 4 Connect your mobile device _____ 5 Connect your computer ____ 6 Thermal ribbon replacement ____ 7

€ TABLE OF CONTENTS ₽

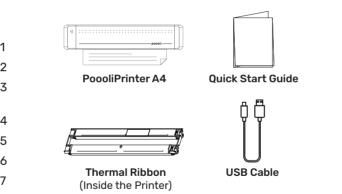

- IN THE BOX -

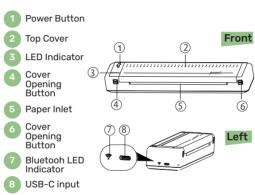

2

𝔄 MY POOOLIPRINTER PARTS 𝒫

- HOW TO USE -

Powering ON/OFF

Hold power button for 3 seconds to turn ON/OFF PoooliPrinter XL.

Light Status

White: Standby / Charging Completed
 Red: Cover open / Out of Ribbon
 Green: Charging

Loading Paper

Insert A4 paper sheet in the paper inlet. Printer will feed some of the sheet automatically.

Recharging

Fully recharge your device before the first time use. It can be recharged from a USB charger. It takes about 180 minutes to fully recharge.

3





4

-CONNECT YOUR MOBILE DEVICE

Open the App and click "CONNECT"


 Connect to the device by searching for Bluetooth devices and select "Poooli A4-XXXX"



5

𝔄 CONNECT YOUR COMPUTER 𝖗


Download the drivers for Windows or Mac
 Connect your A4 printer with Bluetooth or USB-C

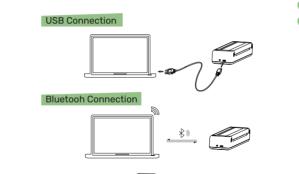

6

-THERMAL RIBBON REPLACEMENT

Press the cover opening buttons on both sides
Lift the printer cover upward
Align right and left wings of ribbon
Rotate ribbon rewind wheels to make ribbon

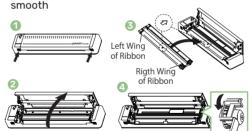

7



PLEASE TAG US ON SOCIAL MEDIA FOR YOUR CHANCE TO BE FEATURED!

www.poooliprint.com