

FIXTURE SCHEDULE:



LED 80W 100W 120W 150W INSTALLATION INSTRUCTIONS

Thank you for buying rise-lite lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments.

Call the Marketing Department at 86-755-89491179 or email: saels@rise-lite.com



MPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Rise-lite fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is

required for safety. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.

CAUTION

For proper weatherproof function all gaskets must be seated properly and all screws inserted and tightened fimly. Apply weatherproof silicone sealant around the edge of the Back Box and/or Junction Box. This is especially important with an uneven wall surface. Silicone all plugs and unused conduit entries.

Fax: 86-755-62614325 | Web: www.rise-lite.com |

SLIPFITTER MOUNTING


The slipfitter mounting on the pole

1. Slip the mounting over the Tenon and secure the fixture with the 2 $\ensuremath{\mathsf{Set}}$

- Screws on the side of the slipfi tter.
- 2. Remove 2 screws on side of Round Cover Plate.

3. Remove the Round Cover Plate and adjust the angle of the fixture.

- 4. Loosen the Locking Bolt and swivel fixture.
- 5. Tighten the Locking Bolt and re-attach Cover Plate.

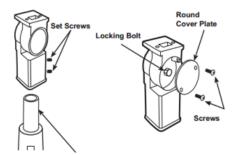

WIRING

Connect the black fixture lead to the (+) LINE supply lead. Connect the white fixture lead to the (-) COMMON supply lead. Connect the Ground wire from fixture to supply ground. All unused leads must be capped and insulated

(+) LINE <u>Д</u> BLACK (-) COMMON <u>Д</u> WHITE GROUND <u>Д</u> GROUND

-06-0-10319097700

MOUNTING ONE A FIXTURE DIRECTLY TO POLE


Fixed Arm mounting directly to 4" or larger square steel pole.

1.Open fixture door and remove ballast cover.

2.Insert Threaded Rods into the pole and thread into the Bolster Plate. Tighten securely.


3.Feed wires from fixture through Gasket, Arm and 2nd Gasket and into pole. Make connections and knot wires as a strain relief. Install pole cap. 4.Line up extrusion slots with the Threaded Rods and slide Arm and fixture on Threaded Rods.

5.Place flt washers, lock washers and nuts on the Threaded Rods inside the fixture and tighten securely

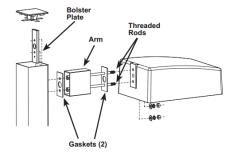

* Photocell optional.

* If Make sure the pohtocell operation voltage is fit the power supply at the installion place.

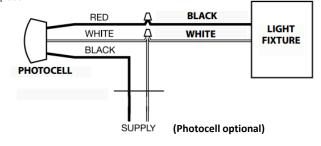

-E-mail: sales@ris