

 **MONSTER®**

**User
Manual**

GLO²

**Weather Resistant
Wireless Speaker**



**FOR QUESTIONS
OR TECHNICAL
SUPPORT**

Please Call:

1-800-976-0677

**Please do not return this
product to the store.**

TABLE OF CONTENTS

Warning & FCC Statement	3
Safety Instructions	4
New Features	5
Unpacking	6
Speaker Component	6
Getting Started	6
Charging Battery	6
3.5 MM Aux Input	7
Bluetooth Connection	7
NFC Connection	7
Monster Zone Control APP	7
Specifications	9
Limited Warranty	11

FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.



A lightning flash and arrowhead within an equilateral triangle denotes the presence of insulated "dangerous voltage" within the product's enclosure. The voltage may be of sufficient magnitude to constitute a risk of electric shock to persons who come into contact with it.



An exclamation point within an equilateral triangle denotes the presence of important operation & maintenance/service instructions.

WARNING

PREVENT FIRE AND SHOCK HAZARDS. DO NOT USE EXTENSION CORDS OR OUTLETS THAT EXPOSE PLUG BLADES. DO NOT EXPOSE CABLES AND PLUGS TO RAIN OR MOISTURE.

DO NOT ATTEMPT TO PERFORM ANY SERVICING THAT IS NOT INCLUDED IN THE OPERATING INSTRUCTIONS. DO NOT ATTEMPT TO REPLACE THE BATTERY, AS INCORRECT INSTALLATION CAN CAUSE FIRE OR EXPLOSION. FOR SERVICE, CONTACT QUALIFIED SERVICE PERSONNEL.

DO NOT REMOVE COVER OR BACK OF PRODUCT. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. ATTEMPTING TO MODIFY CONTROLS OR PERFORMANCE BEYOND MANUFACTURER SPECIFICATIONS MAY RESULT IN HAZARDOUS EXPOSURE TO RADIATION.

IMPORTANT SAFETY INSTRUCTIONS

1. **Read all instructions** and save them for personal reference in the future.
2. **Follow all directions** for operating the product.
3. **Heed all warnings** on the product and in the operation instructions.
4. **Clean with a dry cloth only.** Always unplug the product from any power source before cleaning.
5. **Do not use third-party attachments** or non-recommended accessories with this product.
6. **Do not place product on an unstable surface,** such as a cart, stand, tripod, table, etc. Unstable surfaces may cause the product to fall and cause serious injury to people and serious damage to the product. Follow all manufacturer instructions for mounting and accessories.
7. **Do not block or cover ventilation slots.** Openings in the product cabin ensure reliable operation and prevent overheating. Avoid placing on beds, sofas, and rugs, or mounting on racks or bookcases, unless proper ventilation is provided.
8. **Do not use plug incorrectly.** The product may come with a polarized, alternating-current line plug (one blade is wider/larger than the other). This is a safety feature: the plug will only go into outlet receptacles one way. Do not force the plug. If the plug does not fit, contact your electrician to replace the outlet.
9. **Prevent power cord hazards.** Route cords to avoid walking on them or pinching them, especially at plug ends and connection points to the product & power outlets.
10. **Unplug power cord when not in use.** The product should not be plugged into a power source when not in use for long periods of time.
11. **Do not use this product near bodies of water.** The product is not waterproof and cannot be fully submerged in water. Power cords and electric currents should never be exposed to water.
12. **Do not set up near heat sources.** Avoid radiators, stoves, heat registers, amplifiers, and other devices that produce heat. Avoid long exposure to sunlight and high temperatures.
13. **Refer all service to qualified personnel.** If the product becomes damaged during use or encounters a malfunction, contact qualified service personnel. Do not attempt to service yourself.
14. **To use wirelessly, disconnect AC plug completely.** The plug must be completely disconnected from the power outlet.



NEW FEATURES

IPX5 WATER RESISTANCE


 
As rated according to International Protection Marking (IP Code), the Monster GLO 2 is rated IPX5 for water resistance capable of withstanding exposure to water. This makes the Monster GLO 2 safe in light rain, splashing water, and even around the pool (but not IN the pool!).

LED LIGHT PANELS


 
The Monster GLO 2 speaker has two LED light panels facing opposite directions. Use the panels to light up the night, or add some color and ambience to festivities. Change colors, brightness, and light duration to suit your personal needs.

- Press the LIGHT button to cycle ON/OFF and LED brightness levels (25%, 50%, 75%, 100%)
- Press and hold the LIGHT button to turn off the LED panels
- Press the COLOR/TIMER button to cycle color modes (WHITE, GREEN, RED, DARK BLUE, YELLOW, LIGHT BLUE, PURPLE, and CHROMA)
- Press and hold the COLOR button to activate the light timer (2H, 4H, 6H, 8H)

EZ-PLAY WIRELESS CONNECTION (ADDITIONAL SPEAKERS SOLD SEPARATELY)

1. Press the  button to turn on the first speaker, the Bluetooth LED and EZ-Play's Tx White LED will slow flash. Press and hold the  key for 2 seconds and the White LED will begin to flash rapidly.



 
2. On additional EZPLAY speaker**, press the  key to turn on the second speaker, the Blue LED and EZ-Play's Tx White LED will flash slowly. Press and release the  button and the EZ-Play's RX (Amber LED) will begin to flash slowly.



3. Press and hold the  key for 2 seconds and the Amber LED will begin to flash rapidly.



4. Congratulations! You have successfully paired between the 2 speakers.

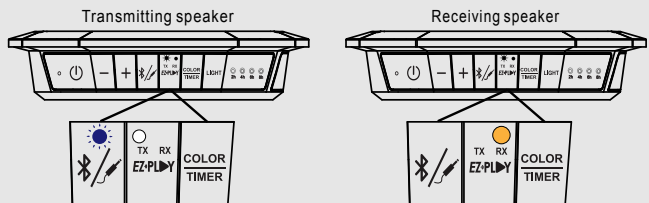

5. Repeat steps 1 - 3 to add additional speakers. You can connect up to 8 speakers total.

The White TX LED will solid on first speaker

The Amber RX LED will solid on second speaker

EZ-Play Function Note:

- When speakers successfully connect, the same audio will play through all the speakers.
- The Monster GLO 2 speakers only need to be synced once and will automatically connect to each other when both are turned on.
- When the speaker is used as a receiving unit the AUX and Bluetooth features will be disabled.

 
UNPACKING

This box includes the following items:

- Monster GLO 2 speaker
- AC Power Cable
- Audio Cable
- User Manual (incl. Limited Warranty Statement)
- Quick Start Guide
- Wall Mount

If any items are missing, contact our customer service team at 1.800.976.0677.


SPEAKER COMPONENTS

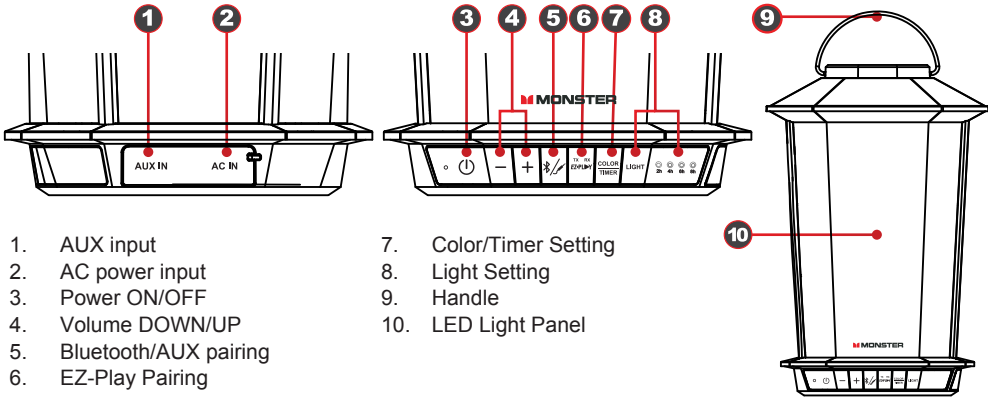

- | | |
|--------------------------|------------------------|
| 1. AUX input | 7. Color/Timer Setting |
| 2. AC power input | 8. Light Setting |
| 3. Power ON/OFF | 9. Handle |
| 4. Volume DOWN/UP | 10. LED Light Panel |
| 5. Bluetooth/AUX pairing | |
| 6. EZ-Play Pairing | |

GETTING STARTED

 
- Connect the AC cable to the speaker.
- Plug the AC cable into a wall outlet.
- Press the Power button to turn the speaker ON (RED LED will turn on, and voice confirmation).
- Speaker will enter Bluetooth pairing mode (BLUE LED will flash).
- If 3.5mm AUX cable is plugged in, speaker will automatically enter AUX mode. (GREEN LED will turn on)

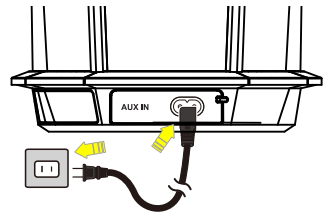

CHARGING BATTERY


BEFORE FIRST USE: Charge the unit for 6 hours.

 - While charging, the RED LED indicator will flash slowly.
- When the unit is fully charged, the RED LED indicator will turn ON.
- When the battery is low, the RED LED indicator will flash rapidly.

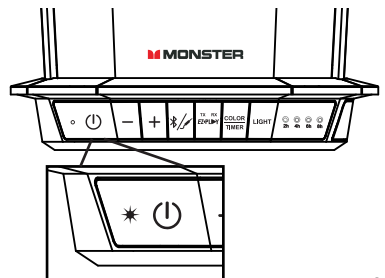


3.5MM AUX INPUT

 - Plug a 3.5mm cable into the AUX input. Speaker will automatically turn off Bluetooth function and switch to AUX.
- Connect any audio device to the 3.5mm audio jack to play audio through the speaker.
- Control volume on the speaker or use the connected device's playback functions.

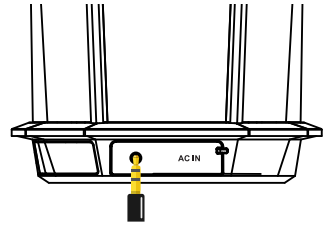


BLUETOOTH CONNECTION

 - Make sure Bluetooth function is enabled on your device.
- Place Bluetooth device and speaker within pairing distance (~3 ft.).
- Press and hold Bluetooth button for 3 seconds to enter pairing mode (BLUE LED will fast flash).
- Search for Bluetooth connections on your device. Select "Monster GLO 2".
- Speaker will confirm connection with audible sound (BLUE LED turns solid).

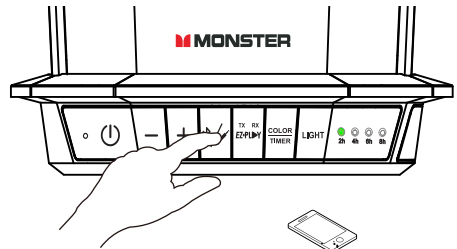

NFC CONNECTION (DEVICE MUST SUPPORT NFC FUNCTION)

 - Ensure Bluetooth function is enabled in your speaker.
- Turn on NFC on your NFC-compatible device.
- Tap your NFC-compatible device onto the speaker's NFC logo.
- When paired, BLUE LED will stop flashing and remain steady.

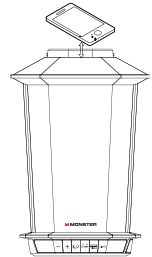


MONSTER ZONE CONTROL APP

The Monster Zone Control APP puts the power of EZ-Play technology in the palm of your hand by allowing you to sync up to 8 speakers together, control volume, select lighting, and utilize other features with your smartphone.

Connecting GLO 2 to Monster Zone Control APP

 - Open the Monster Zone Control APP on your smartphone.
- When prompted to control a Monster EZ-Play speaker, select "Yes".
- Make sure Bluetooth is enabled on your phone.
- Set the EZ-Play speaker to Bluetooth Pairing mode by pressing and holding the Bluetooth button [icon].
- The speaker will automatically connect with your smartphone. You are done!


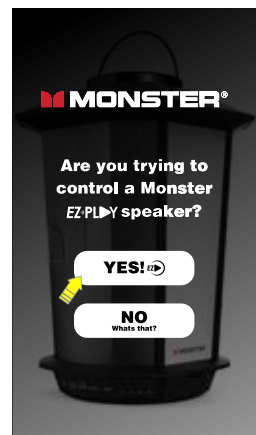


MONSTER ZONE CONTROL APP (CONTINUED)



Connecting, Adding and Controlling Multiple Speakers

Monster Zone Control allows you to control speakers individually, or by group.

  - Pressing and holding the (EZ-Play button) on a speaker turns it into the main transmitting (TX) speaker.
- On the APP, the (TX) speaker will be the green square below the “select” category.

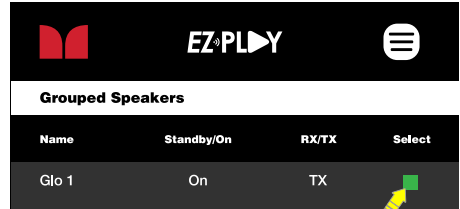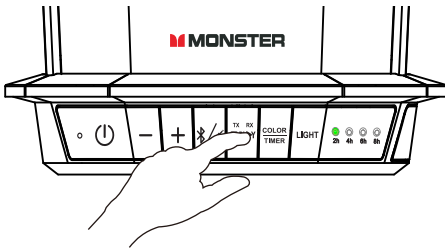

  - On a second speaker, pressing the EZ-Play button turns it into a receiving (RX) speaker.
- On the APP, the (RX) speaker will be the orange square below the “select” category

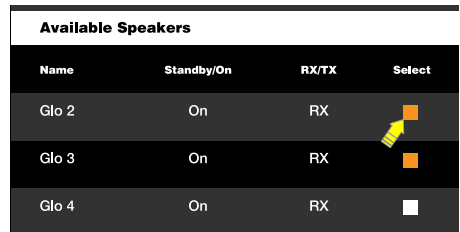
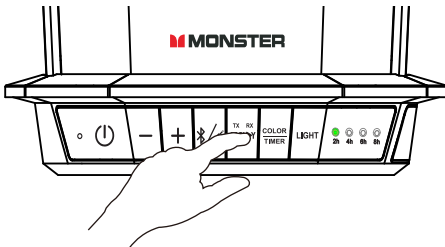


- Up to 7 speakers in RX mode can sync with a single TX-Mode Speaker.

Volume Control and Instant Battery Reading

Monster Zone Control allows you to control Speaker volume on each speaker or by group.

  - Once speakers are connected, selecting “Configure Group” on the APP will allow you to control the master volume for all connected speakers, or each speaker individually.
- On this screen, check your battery life for each individual speaker.

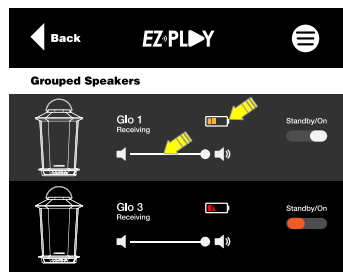
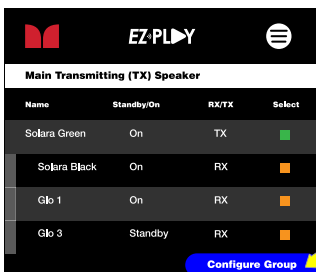


MONSTER ZONE CONTROL APP (CONTINUED)

LED Light Control and Timer

Monster Zone Control allows you to control LED lighting on all connected speakers.

  - Once speakers are connected, select “Configure Group” on the APP.
- An option for “Lighting” should appear at the bottom of the APP screen.
- Once “Lighting” is selected, you can control the brightness and color on each speaker to fit your mood, or rotate colors to create your own lightshow.
- When “Lighting” is selected, you can use Monster Zone Control’s light timer to time when the lights turn off. Select a 2, 4, 6, or 8 hour time limit for your speaker’s lights with this option.

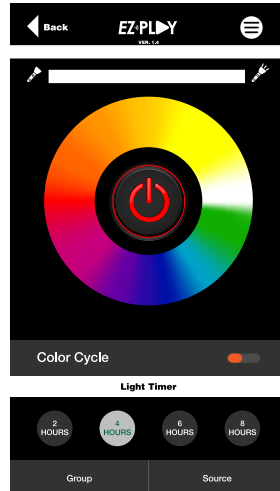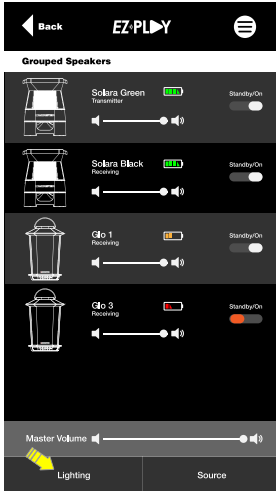

SPECIFICATIONS

General	
Input(s)	Bluetooth AUX NFC EZ-Play
Buttons	Power, EZ-Play, Bluetooth, Volume, Color/Timer, Light
LED Indicators	Power, Transmit, Receive, Bluetooth, Light, Timer
Battery	7800mAh (3 x 2600mAh)
Power Input	AC
Power Saving	Auto-sleep feature will activate after 15 minutes if there is no activity to the speaker.
Speaker Output	10W x 2
Driver Layout	3" Driver (x2), Passive Radiator (x2)
THD + Noise	<10%
Cabinet Material	Plastic
Dimensions (W x H x D)	12.09" x 8.11" x 8.11"
Weight	5.4 lbs.




SPECIFICATIONS (continued)

Key	
Power On / Off	Press to turn the speaker ON / Press and hold to turn speaker OFF
EZ-PLAY	<ol style="list-style-type: none"> 1. Press EZ-PLAY key to switch TX/RX mode 2. Press and hold for 3 seconds to enter TX pairing (or RX pairing while in RX mode)
Bluetooth	<ol style="list-style-type: none"> 1. Press and hold for 2 seconds to enter Bluetooth Pairing mode; 2. Press and hold for 8 seconds to clear BT Pairing information
Volume DOWN (-)	Press to decrease speaker volume
Volume UP (+)	Press to increase speaker volume
Light	<ol style="list-style-type: none"> 1. Press LIGHT key to adjust brightness: 100%, 75%, 50%, 25%, OFF 2. Press and hold LIGHT key for 3 seconds to turn light OFF 3. When light is OFF, press LIGHT key to turn light ON
Color/Timer	<ol style="list-style-type: none"> 1. Press COLOR/TIMER key to change color: Chroma, Red, Dark Blue, Light Blue, Amber, Green, White, Purple 2. Press and hold COLOR/TIMER key for 3 seconds to adjust light timer duration: 2 hours, 4 hours, 6 hours, 8 hours

Operating Temp

Operating Temperature Range	32F° - 104F°
Operating Humidity Range	40~90% RH
Storage Temperature Range	-13F° to 158F°

LED Status Indicators

RED LED 	On	Will stay on for 3s then turn off
	Off	In Standby mode
	Quick Flash	Low battery warning
	Solid (charging)	Fully charged
Blue Bluetooth LED 	Slow Flash (charging)	Battery is charging
	Solid	Connected to BT device
	Slow Flash	BT Waiting Mode (inactive)
White/Amber EZ-Play LED 	Fast Flash	BT Pairing Mode (active)
	Solid	Speakers connected
	Slow Flash	EZ-Play Waiting Mode (inactive)
	Fast Flash	EZ-Play Pairing Mode (active)

Connections

3.5mm AUX In	x 1
--------------	-----

Bluetooth

Bluetooth Version	3.0
Bluetooth Profile	A2DP, AVRCP
Bluetooth Range	10m (33ft.)

Limited Warranty

Model MNGLOW-S2

This Monster-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Russell Distribution Company, LLC against manufacturing defects in materials and workmanship for a limited warranty period of Ninety (90) Days for Labor and One (1) year for Parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in "as is" condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, or no fault found.

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used in the United States, and Puerto Rico, by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this Product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service:

Telephone: 800-976-0677

MONSTER®



Monster and the Monster logo are registered trademarks of Monster Inc. and its subsidiaries in the U.S. and other countries, used under license. Pure Monster Sound is a trademark of Monster, Inc. and its subsidiaries in the U.S. and other countries, used with permission.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Printed in China

Version: 1.0