 




MONSTER AII-IN-ONE 36" INDOOR OUTDOOR ATMOS SOUNDBAR

USER MANUAL

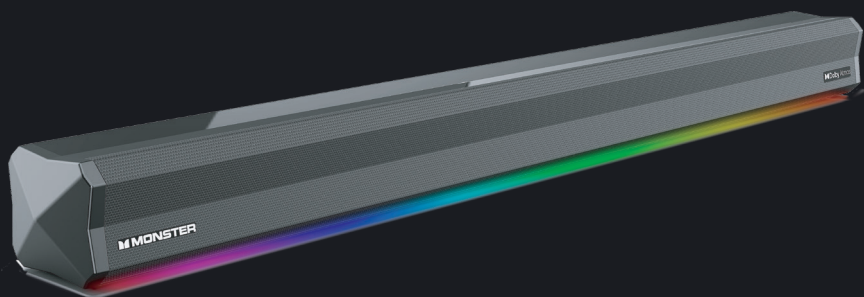

 **Dolby** ATMOS

MNSBA36G



Important Safety Instruction

Thank you for purchasing the MNSBA36G Soundbar. Please read this user manual carefully and keep for future reference.

Warning



Caution:

To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside.
Refer servicing to qualified personnel only



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice:

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for long time periods or a sudden high volume level.
2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if not using it only for a short while.
3. The appliance is not intended to be operated by means of an external timer or separate remote control system.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.



7. The apparatus must not be exposed to dripping or splashing liquid, no objects filled with liquids such as vases, should be placed on the apparatus.
8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.
9. Do not position this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong magnetic field.
11. Do not place the unit on an amplifier or receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.
14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.
16. The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

Important Safety Instructions

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
2. Do not use this apparatus near water.
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
6. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles or at the point where they exit from the apparatus.
7. Only use attachments/accessories specified by the manufacturer.
8. Unplug this apparatus during lightning storms or when unused for long periods of time.
9. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
10. The AC plug is used to disconnect the device, the disconnected device should remain readily operable. In order to disconnect the apparatus from the AC power completely, the AC plug must be removed from the AC outlet completely.

Preparation for Use

Unpacking and Set Up

- Remove the soundbar from the carton and remove all packing material from the soundbar. Save the packing material, if possible, in case the soundbar ever needs to be serviced or transported.
- The original carton and packing material is the only safe way to pack your soundbar to protect it from damage in transit.
- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
- Place your soundbar on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or

Protect Your Furniture

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement center everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the unit.

Important Notes:

- Safety and operating instruction manual should be retained for future reference.
- The apparatus should not be exposed to dripping, splashing or placed in a humid atmosphere such as a bathroom.
- Do not install the product in the following areas:
- Places exposed to direct sunlight or close to radiators.
- On top of other stereo equipment that radiate too much heat -Blocking ventilation or in a dusty area.
- Areas where there is constant vibration.
- Humid or moist places.
- Do not place near candles or other flames.
- Operate the product only as instructed in this manual.
- Before turning on the power for the first time, make sure the soundbar is plugged to power outlet.
- For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.
- Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).

Water Resistant IPX4

 
The soundbar provides the robust durability by IPX4 so that it can be used in outdoor environment (When installed and used as per the instructions in this User Manual).

The remote control of this product provides durability by IPX4.

Despite the IPX4 ratings, your soundbar and remote control is not impervious to water damage in any situation. To help prevent damage to your products, avoid the products being subjected to:

- Water projected by a source greater than 6.3 mm against enclosure from any direction or submersion in water.
- Water projected at greater than 30 kPs (4.4 psi) with a water volume greater than 12.5 litres /minute for more than 3 minutes and extreme weather conditions.

Product Diagram

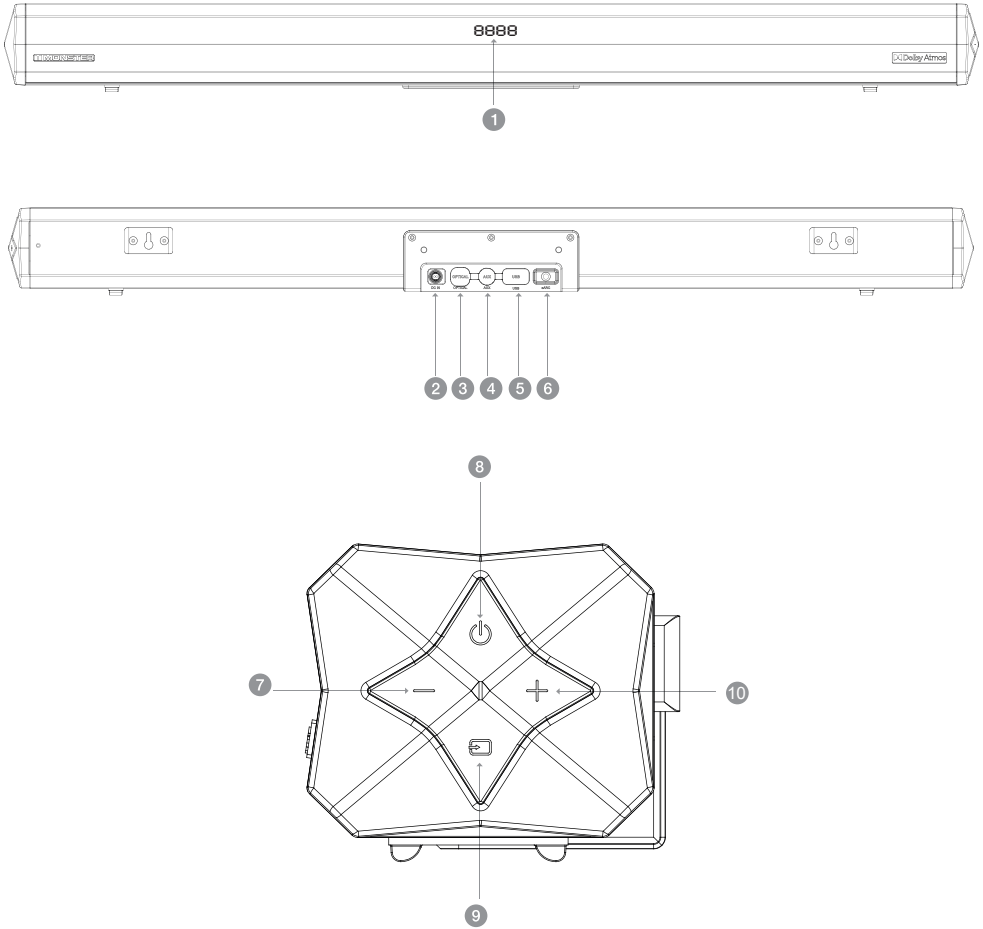

① LED DISPLAY

② DC IN

③ OPTICAL

④ AUX

⑤ USB

⑥ eARC

 
⑦ VOL-

⑧ Power/Standby

⑨ INPUT

⑩ VOL+

REMOTE CONTROL

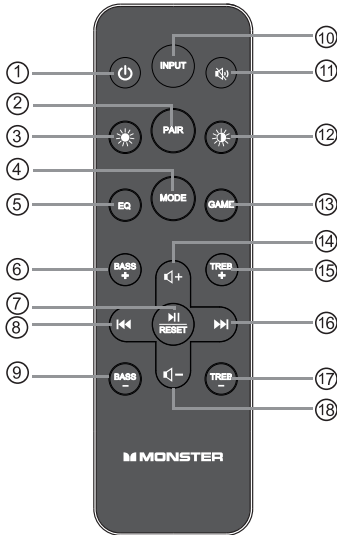

1. : Press the power button to turn on and turn off the unit.
2. PAIR: Press the "PAIR" button more than 2 seconds to connect or disconnect to the pairing device.
3. : Light Mode L1-L2-L3-...L10, default in Breath mode L2, long press 2S to enter into monochromatic mode L11, L12....L17.
4. MODE: Short press "MODE" button to switch MODE, scrolling display: INDOOR/OUTDOOR, default in INDOOR mode.
5. EQ: Short press "EQ" button to switch EQ MODE, scrolling display: MUSIC→MOVIE→NEWS ,default in Music mode
6. BASS+: Bass up, -5,-4,-3,-2,-1,0,1,2,3,4,5,default 0
7. : Short press Play/Pause key once to pause current music playback (under BT/USB mode).
Short press Play/Pause key once to resume music playback. (Under BT/USB mode)
Long press 5 seconds Reset key to restore the factory default setting.
8. : Short press PREV button skip to backward music (under BT/USB mode).
9. BASS-: Bass down, -5,-4,-3,-2,-1,0,1,2,3,4,5,default 0
10. INPUT: Short press "Input" button to switch between BT/USB/AUX /eARC/Optical.
11. : Mute the music,the display will flash.
12. : BRIGHTNESS LEVEL 100%-75%-50%-25%,OFF
13. GAME: When pressing the "GAME " button, the soundbar scrolling display show "GAMING", default in Dance mode L9; Whenever user change the different light mode, the soundbar will remember the light mode from last set.
14. : Press the volume+ button to increase the volume,volume level :0-32 , 0=Mute ,default 10.
15. TREB+: Treble up, -5,-4,-3,-2,-1,0,1,2,3,4,5,default 0
16. : Short press NEXT button skip to forward music (under BT/USB mode).
17. TREB-: Treble down, -5,-4,-3,-2,-1,0,1,2,3,4,5,default 0
18. : Press the volume- button to decrease the volume,volume level :0-32 , 0=Mute ,default 10.

 
 
★ Note:

- 1: Press the RESET button for 5 seconds to restore the unit to factory settings, including:
Volume is 10, treble and bass 0, the first time is default by Bluetooth MODE, EQ is default by music, MODE is default by indoor, and RGB light is default by mode 2 "Breath Mode".
- 2: USB with audio MP3 playback function.
- 3: The display and RGB light will be turned off with no operation for 15 seconds, but in GAME mode, only display is tuned off, RGB light is still on. The display and RGB light will wake up again with pressing any button on bar or remote control.
- 4: The first time soundbar is turned on by default Bluetooth mode, the next time turned on, remember the current mode state set by the remote control or soundbar button.
- 5: The default volume is 10, and the iPhone simultaneously dominates the volume synchronization.

Positioning the Soundbar

Place on a flat Surface



Place the soundbar horizontally on a flat surface such as a TV unit or shelves and align it centrally with the TV screen. Allow some space between the speaker and the wall. Don't place inside a cabinet or an a walled shelf. Follow this guidance for best sound output and good airflow around the soundbar.

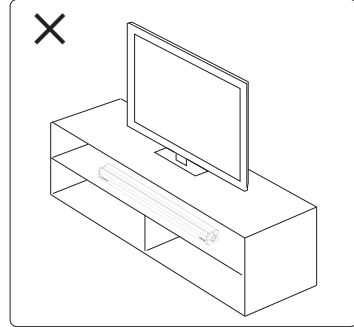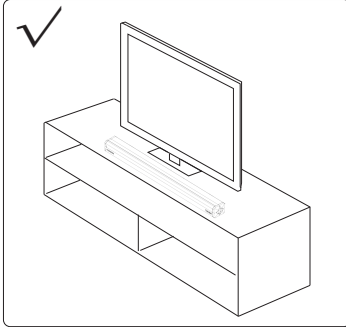

Mount on the wall





WARNING: If you don't feel confident to correctly and securely wall-mount the soundbar, Seek the assistance of an experienced person or professional.

  Install the speaker on a vertical, fast, reinforced area of wall. For plaster walls, it is recommended to screw into wall studs for greater security. For optimum performance, allow at least 25mm/1" distance between the soundbar and the TV.

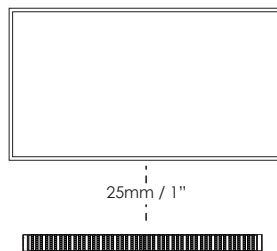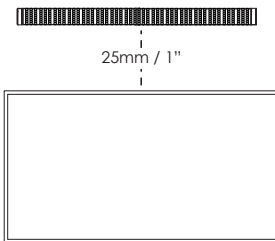

Follow below steps to mount the soundbar on the wall

    1. Make 2 holes on the wall with distance same as the wall bracket on the soundbar.
2. Put the plastic anchors onto the wall and secure the screws to the plastic clip, do not tighten the screws all the way make sure leave some space.
3. Attached the 2 EVA pads onto the wall mount bracket. This will make sure that there is enough room between the wall and the soundbar outlet, minimum 15mm.
4. Once the screws securely fastened, hang the soundbar over by inserting the screws onto the wall mount bracket.

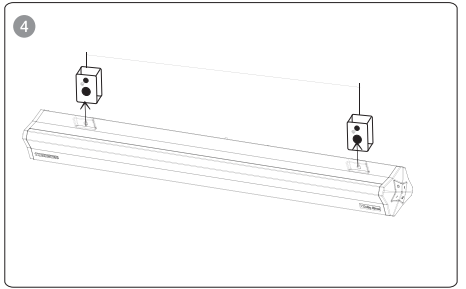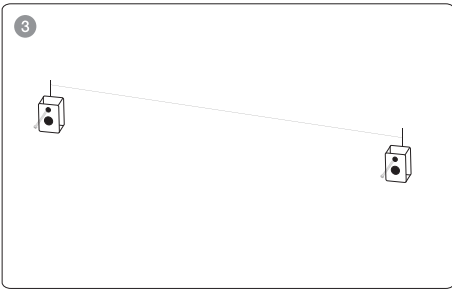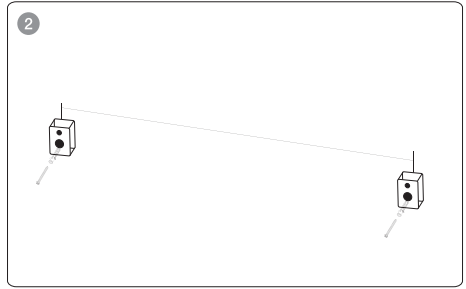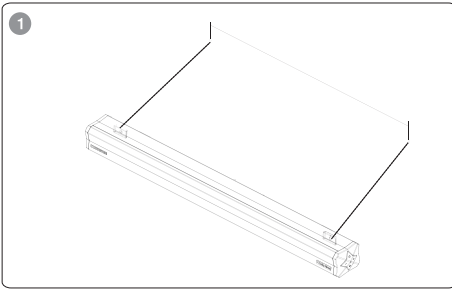

OPERATE INSTRUCTIONS

Setting the soundbar

1. Plug in the power adapter and the display will light up (Standby mode)
2. Switch on the soundbar by pressing "POWER" button on soundbar or on remote controller.
After switching on, the default input mode will appear on display.
3. Input modes can be changed by pressing the "INPUT" button on soundbar or on remote controller.
4. Below are input mode names appearing in the soundbar display:
BT -Bluetooth Pairing mode, AUX -AUX mode, OPT -Optical mode, ARC - HDMI ARC mode,
eARC - HDMI eARC mode, USB-USB mode,

★ *The port of HDMI IN(eARC) are support Video & Audio*

 
Audio: maximum supported audio content is Dolby Atmos, Dolby Digital, Dolby Digital Plus, Dolby TrueHD, Dolby Surround.

 
HDMI: HDMI version 2.1

★ *The screen will be turned off for around 15 seconds without any operation, when pressing the power buttons on the soundbar or on remote control or the using phone's volume increase or decrease, the display will be waken up again.*

Powering On/Off

5. Plug the power adapter of soundbar into a wall outlet, it will automatically enter standby mode.
6. Short-press the "POWER" button on soundbar or on remote controller to turn on the soundbar
7. To turn off, press and hold the "POWER" button for 2 seconds, then unplug from wall outlet.

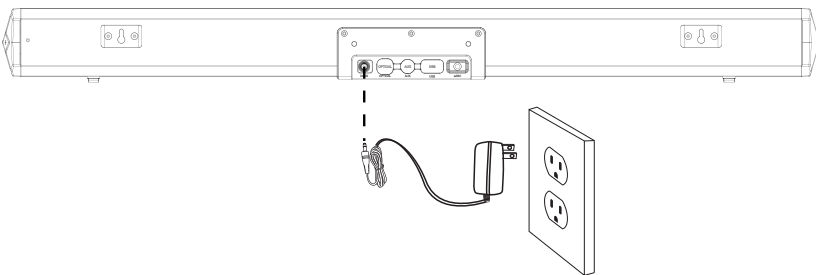

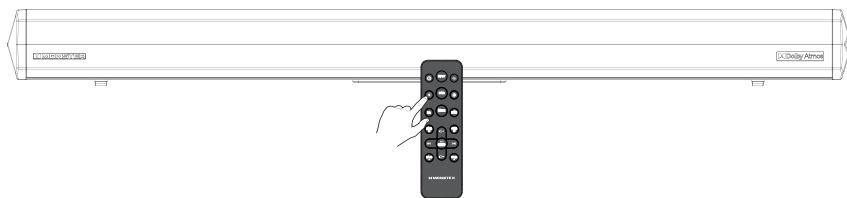

MODE L1: Constant lighting/Constant red on/Constant green on/Constant blue on/Constant white on/Constant yellow on/Constant purple on/Constant pink on/Constant orange on, 7 colors auto-loop (each color for 2 secs), APP named SPIN



MODE L2: Breathing light mode/Red breathing light/Green breathing light/Blue breathing light/White breathing light/Yellow breathing light/Purple breathing light/Pink breathing light/Orange breathing light, colors breathing mode auto-loop, APP named Breath



MODE L3: Colorful running mode/Red/Green/Blue/White/Yellow/Purple/Pink/Orange, Colorful running mode auto-loop,APP named SPWIRL



MODE L4: Dual-colored wave mode/Red/Green 2 colors in wave state scrolling from right to left auto-loop, APP named Wave.



MODE L5: Ripple wave mode/Red/Green/Blue/White/Yellow/Purple/Pink/Orange, 7 colors from the center to the two sides of the ripples auto-loop, APP named Mood.



MODE L6: Colorful flow mode/Red/Green/Blue/White/Yellow/Purple/Pink/Orange, 7 colors scrolling from right to left auto-loop, APP named Rainbow.



MODE L7: Colorful ripple mode /Red/Green/Blue/White/Yellow/Purple/Pink/Orange, 7 colors are covered in a monochrome state from the center to the two sides of the ripples auto-loop, APP named Spark.



MODE L8: Colorful flow wave mode /Red/Green/Blue/White/Yellow/Purple/Pink/Orange, 7 colors in a monochromatic coverage of the state rolling around the auto- loop, APP named Flash.



MODE L9: Spectrum light effect, middle fluctuation mode /Red/Green/Blue/White/Yellow/Purple/Pink /Orange, 7 colors from the middle to the left and right ends of the spectrum fluctuation automatically cycle play, APP named Dance.



MODE L10: Spectrum light effect, fluctuation at both ends mode /Red/Green/Blue/White/Yellow/Purple /Pink/Orange, 7 colors from the left and right ends to the middle with the spectrum fluctuation automatically cycle play, APP named Static.



MODE L11: Monochrome red steady on, APP named Red.



MODE L12: Monochrome green steady on, APP named Green.



MODE L13: Monochrome blue steady on, APP named Blue.



MODE L14: Monochrome purple steady on, APP named Purple.



X15

MODE L15: Monochrome amber steady on, APP named Amber.



X16

MODE L16: Monochrome light blue steady on, APP named Light Blue.



X17

MODE L17: Monochrome white steady on, APP named White.

★ Note:

Long press 2S “LIGHT” mode on the remote control, quickly enter monochrome mode and select L11, L12.... L17.

Playing Audio via BT Connection

1. Turn on the soundbar and then short-press the “INPUT” button on soundbar or remote controller to switch it to BT mode and LED display on the soundbar will flicker in the Bluetooth pairing mode.
2. Activate the pairing function on your phone or other compatible device and select “MONSTER SBA36G” by BT connection.
3. When successfully paired, you will hear a tone and LED display will turn on “BT” and stop flickering. Then music that you selected can be played on the soundbar.
4. The remote controller includes BT mode playback controls.

Notes:

- If your pairing device switched off or manual disconnected, the soundbar will automatically enter pairing mode.
- If the connected device is switched off or manually disconnected, the soundbar will automatically enter pairing mode.

Successfully connected device will be re-established once you re-enter wireless connection range.

To connect to other devices, repeat the above pairing steps.



Audio input(Aux)Connection

1. Firstly connect the soundbar to your PC, laptop, smart-phone, TV, or other audio devices by using an AUX cable provided. Make sure that these devices have both AUX IN and AUX OUT terminals.
2. Then press the INPUT button on remote control or soundbar to switch the soundbar to Aux mode, once the soundbar is connected in Aux mode, the screen will display “AUX”. And the music on your connected device will play. Playback can only be controlled on your connected device.

Note: For some computers, you may need to access the audio control panel to manually set the soundbar as shown steps on above.

Optical Mode

- Remove the cap of optical cable (keep the cap for the future use); check the direction of the plug. Connect the soundbar and TV with the optical cable.
- Use this mode to play music from a TV with optical digital output on the soundbar. In TV sound settings, select the soundbar optical connection (output for audio). When the optical cable is connected, the TV audio output is set to Dolby or Auto mode.
- The TV must have an optical digital output. Use the optical cable to make the connection as follows:
 1. Connect the optical cable to the optical digital output of your TV.
 2. Connect the optical cable to the optical digital input of your soundbar.
 3. Switch on the TV set and the soundbar. Set the connected TV to "Dolby or Auto mode".
 4. Start playing on the TV.
 5. Press "INPUT" button on the remote control or on the soundbar to select **OPT- OPTICAL** mode.
 6. Use the volume buttons to adjust the volume to your requirements.
 7. You can also change the audio settings by using the relevant buttons on the remote control.

Note:

1. When connecting a device such as a TV/Set-top box/ DVD/ game console with optical cable, set the audio output mode of the device to Dolby or Auto mode (digital optical output).
2. Do not bend the optical cable, otherwise the cable inside will be damaged.

Playing Audio via USB Port

The soundbar automatically switches to USB input mode with the LED display **USB** when a USB flash drive is inserted (this mode isn't selectable on the soundbar or remote control unless a USB flash drive is connected).

1. Ensure that your USB flash drive contains MP3 audio files (other file types not supported)
2. Connect the USB flash drive to the USB port on the soundbar (or your own USB extension cable connected to the USB port); music will automatically play
3. The remote control includes USB input mode playback controls

HDMI eARC Mode

Connect to HDMI IN eARC Socket

Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.

★ Option 1: e-ARC (enhanced Audio Return Channel)

Your Soundbar supports HDMI with enhanced Audio Return Channel(e-ARC). If your TV is HDMI e-ARC compliant, you can hear the TV audio through your soundbar by using a single HDMI cable.

1. Use a High Speed HDMI cable, connect HDMI IN eARC on the soundbar to HDMI (e-ARC) connector on your TV.
2. Then short-press **⏮** button on the soundbar or INPUT button on the remote controller to switch to HDMI IN eARC mode. After successfully connected, the LED display will show **eARC**. (If TV support HDMI ARC, LED display will show **ARC**)
3. Press the VOL +/- buttons to adjust the volume to your desired level.

★ Note:

- Your TV must support the HDMI-CEC and e-ARC function. HDMI-CEC and e-ARC must be set to be on.
- The setting method of HDMI-CEC and e-ARC may differ depending on the TV. For details about e-ARC function, please refer to your TV owner's manual.
- Only HDMI 1.4 compatible cables can support the e-ARC function.
- The enhance Audio Return Channel function enables an HDMI compatible TV to send the audio stream to **HDMI OUT** of the unit.

TROUBLESHOOTING

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
There is no sound output from soundbar.	Another input source is selected.	Select an appropriate input source.
	The mute function is activated.	Cancel the mute function.
	The volume of soundbar or TV/other device is adjusted too low.	Increase the volume level on soundbar or by remote control or on TV.
	The power cable of the unit is not connected properly.	Make sure that the power cable of the unit is connected to an AC wall outlet securely.
	Input jacks on a playback device are connected.	Connect the input jack on the soundbar and the output jack on the playback device.
	Signals that the soundbar cannot playback when being input.	When soundbar and TV or other devices are connected by an audio cable through TV HDMI ARC or HDMI eARC port output, Select the correct audio input and output. Make sure the digital audio output setting on the playback device to PCM format. Since the output format of our soundbar is PCM, if it is used, the decoding format of TV or other devices will be adjusted to PCM state.
The sound is echoed.	TV volume is not muted.	If you play audio from TV through the soundbar, make sure that the TV is muted.
The volume decreases when the unit is turned on.	The automatic volume adjustment function is activated. To prevent excessive loudness, the unit automatically controls its volume within a certain level when the unit is turned on.	Turn up the volume as required.
Noise is heard.	The soundbar is too close to another digital or high-frequency device.	Move those devices away from the soundbar.
The unit cannot be operated by using the remote control.	The unit is out of the operating range.	Use the remote control within the operating range.
	The batteries are weak.	Replace with new batteries.
	The remote control sensor of the soundbar is exposed to direct sunlight or strong lighting.	Adjust the lighting angle or reposition the soundbar. Make sure our product cannot be used in sunlight.
The TV cannot be operated by using the TV's remote control.	The unit is blocking the TV's remote control sensor.	Position the unit so that it does not obstruct the TV's remote control sensor.
A device cannot connect the soundbar or the unit cannot be connected to a Bluetooth device.	Bluetooth function of the device is not activated, not paired or connected correctly.	Restart the soundbar and try pairing again. You have not enabled the Bluetooth function of the device; see the user manual of the device on how to enable the function and correctly connected the device. The sound bar is already connected with another Bluetooth device. Disconnect the connected device, and then try again.
	Bluetooth is not selected as the input source.	Select Bluetooth as the input source.
	The unit is connected to a different Bluetooth device.	Un-pair the Bluetooth device that is currently connected and pair with the desired Bluetooth device.
	The unit is too far away from the Bluetooth device.	Move the Bluetooth device closer to this unit.
	A device emitting electromagnetic waves (such as a microwave oven, a wireless device and so on) may be placed nearby.	Do not use this unit near devices that emit electromagnetic waves.
	The Bluetooth device that you are using may not support the protocol.	Use a Bluetooth device that supports the protocol.
	The connection profile registered in the Bluetooth device may not be functioning correctly for some reason.	Delete the connection profile in the Bluetooth device and then connect the Bluetooth device to this unit.

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
Sound quality of audio play from a connected Bluetooth device is poor and connection is not stable.	The Bluetooth reception is poor.	Move the device closer to the soundbar, or remove any obstacle between the device and the soundbar.
No sound can be heard or sound breaks (Bluetooth mode)	The volume on the Bluetooth device may be too low.	Raise the volume on the Bluetooth device.
	Bluetooth is not selected as the input source.	Select the Bluetooth as the input source.
	Playback on the device has not been performed.	Perform playback on the device.
	The sound output on the Bluetooth device may not be set to this unit.	Select this unit as the output device on the Bluetooth device.
	The connection to the Bluetooth device was cut off.	Connect with the Bluetooth device one more time.
	The unit may be too far away from the Bluetooth device.	Move the Bluetooth device near this unit.
	A device emitting electromagnetic waves (such as a microwave oven, a wireless device and so on) may be placed nearby.	Do not use this unit near device that emit electromagnetic waves.
There is no sound from soundbar - HDMI IN(eARC) Mode	Incorrect HDMI cable is used causing no signal to be sent to soundbar. Incorrect input mode is selected.	1. Make sure that the user connected TV and sound bar by a 19-core HDMI cable. 2. The sound bar and TV are connected through TV HDMI eARC or HDMI ARC port output; make sure that the TV is HDMI eARC or HDMI ARC compliant. 3. Set the TV to HDMI ARC (CEC). Set the audio output mode of TV to PCM format. (Or refer to your TV user manual)
There is no sound from soundbar (OPTICAL Mode)	OPTICAL cable might be damaged and no signal is received by the soundbar due to a failed connection and incorrect operation mode selected.	1. Replace the OPTICAL cable with a new one to connect. 2. Set your TV audio output to PCM format. (Pls refer to your TV user manual)
There is no sound from soundbar (USB mode)	USB file type is not support & Soundbar doesn't switch to USB input mode automatically when USB is inserted.	Make sure that USB flash drive contains MP3 files because other file types are not supported. Switch the input mode once again, then playback again.

Dolby ATMOS®

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Dolby Vision, Dolby Atmos and the double -D symbol are trademarks of Dolby Laboratories.

★ What is DOLBY ATMOS®?

Dolby Atmos® transports you from the ordinary into the extraordinary with breathtaking, moving audio that fills your room and flows above and around you. Dolby Atmos gives you amazing experience you have never heard before by overhead sound, and all the richness, clarity, and power of Dolby sound.

★ Using DOLBY ATMOS®:

DOLBY ATMOS is only available in HDMI (e-ARC) mode. For the details of the connection, please refer to "HDMI Connection".

1. To use Dolby Atmos® in HDMI (e-ARC) mode, your TV has to support Dolby Atmos®.
2. Make sure that "No Encoding" is selected for bitstream in the digital audio output of the connected external device (e.g. Blu-ray DVD player, TV etc.).
3. While entering Dolby Atmos / Dolby Digital Plus format, the soundbar will show DOLBY ATMOS / DOLBY SURROUND.

★ Note:

- The full Dolby Atmos experience is only available when the Soundbar is connected to the source via a HDMI 2.0 cable.
- The Soundbar will still function when connected via other methods (such as a Digital Optical cable) but these are unable to support all of the Dolby features. Given this, our recommendation is to connect via HDMI, in order to ensure full Dolby support.

Package Contents



 
Soundbar X 1




Remote Control X 1



HDMI Cable 1m *1

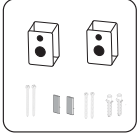


Wall Mounting Bracket Sets X 1

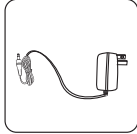 


Adapter 1.5m *1



 User Manual X 1

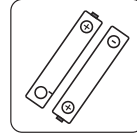

Remote control battery

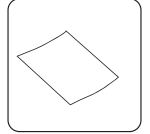 

QSG *1

Specifications

Model	MNSBA36G
Source	BT/AUX/eARC/OPT/USB
Drivers	2.17 x 3.35 * 4 (55 x 85mm * 4)
Max. Audio Power	300W
Frequency Response	70Hz-20KHz ±3dB
Signal-to-Noise Ratio	≥ 66dB
Bluetooth Operating Range	Version: 5.3
Dimensions (L x H x D)	35.43" x 2.95" x 3.5" (900 x 75 x 89 mm)

DISPUTES

Model: MNSBA36G

ALL DISPUTES ARISING IN ANY WAY FROM THIS LIMITED WARRANTY OR THE SALE, CONDITION OR PERFORMANCE OF THE PRODUCT SHALL BE RESOLVED EXCLUSIVELY THROUGH FINAL AND BINDING ARBITRATION, AND NOT BY A COURT OR JURY.

Any such dispute shall not be combined or consolidated with a dispute involving any other person's or entity's Product or claim, and specifically, without limitation of the foregoing, shall not under any circumstances proceed as part of a class action.

The arbitration shall be conducted before a single arbitrator, whose award may not exceed, in form or amount, the relief allowed by the applicable law. The arbitration shall be conducted by the American Arbitration Association (AAA) pursuant to its Consumer Arbitration Rules (AAA Rules). The Federal Arbitration Act governs this provision. The arbitrator shall decide all issues of interpretation and application of this arbitration provision and the Limited Warranty.

For any arbitration in which your total damage claims, exclusive of attorney fees and expert witness fees, are \$5,000.00 or less ("Small Claim"), the arbitrator may, if you prevail, award your reasonable attorney fees, expert witness fees and costs as part of any award, but may not grant its attorney fees, expert witness fees or costs unless it is determined that the claim was brought in bad faith. In a Small Claim case, you shall be required to pay no more than half of the total administrative, facility and arbitrator fees, or \$50.00 of such fees, whichever is less, and Russell Distribution Company, LLC shall pay the remainder of such fees. Administrative, facility and arbitrator fees for arbitrations in which your total damage claims, exclusive of attorney fees and expert witness fees, exceed \$5,000.00 ("Large Claim") shall be determined according to AAA Rules. In a Large Claim case, the arbitrator may grant to the prevailing party, or apportion among the parties, reasonable attorney fees, expert witness fees and costs. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction.

This arbitration provision also applies to claims by you, the purchaser of the Product, and all those in privity with you, including your family members, beneficiaries and assigns, against Russell Distribution Company, LLC's parent(s), subsidiaries and affiliates, any person or entity that licensed, supplied, sold or distributed the Product, and each of their officers, employees, representatives, licensors/licensees, agents, beneficiaries, predecessors in interest, successors, and/or assigns.

You may opt out of this dispute resolution procedure by providing notice to Russell Distribution Company, LLC no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product. To opt out, you must send notice by e-mail to Russell Distribution Company, LLC at support@mymonsteraudio.com, with the subject line: "Arbitration Opt Out." You must include in the opt out e-mail (a) your name and address; (b) the date on which the Product was purchased; (c) the Product model name or model number; and (d) the IMEI or MEID or Serial Number if applicable, if you have it. Alternatively, you may opt out by calling 1-800-976-0677 no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product and providing the same information. These are the only two forms of notice that will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the benefits of the Limited Warranty.

**To obtain warranty service,
please contact technical support with questions**

Email: support@mymonsteraudio.com

Do not return this product to the store. Visit: MyMonsterAudio.com

Limited Warranty

Model: MNSBA36G

This Monster-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Russell Distribution Company, LLC against manufacturing defects in materials and workmanship for a limited warranty period of Ninety (90) Days for Labor and One (1) year for Parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in "as is" condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, or no fault found.

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used in the United States, and Puerto Rico, by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this Product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

For Customer Service, please visit our website: mymonsteraudio.com



Distributed by Russell Distribution Company, LLC
7801 Hayvenhurst Avenue
Los Angeles, CA 91406

www.mymonsteraudio.com

Monster and the Monster logo are registered trademark of Monster, Inc. and its subsidiaries in the U.S. and other countries, used under license.

The Bluetooth® word mark and logos are registered trademark owned by Bluetooth SIG, Inc.
Other trademarks and trade names are those of their respective owners.

Model: MNSBA36G

Printed in China

Version: 1.1