

ROCKER SPORT 270

PORTABLE INDOOR/OUTDOOR WIRELESS SPEAKER

QUICK START GUIDE


IMPORTANT: Before first use, charge for ~7 hours.

Power/Charging

- Flip the switch UP to turn ON the speaker.
- Flip the switch DOWN to turn OFF the speaker.



- Connect the POWER INPUT port to an external power source using the included power cord.

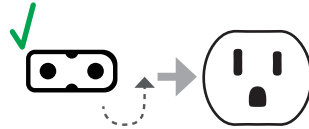

DO NOT use the speaker's AC Outlet port
– it will not charge or power the speaker.



Bluetooth Pairing

- 1 Place your mobile device within 1 meter of the speaker.
Make sure Bluetooth is enabled on your mobile device.



- 2 Press the BLUETOOTH button to set the speaker to Bluetooth mode.

(Press)



- 3 Select "MONSTER RKR 270 SPORT" on your mobile device to pair with the speaker.



True Wireless System (TWS)


- 1 Place two Rocker 270 Sport speakers within 3 meter of each other.



- 2 Connect your music device to one of the speakers via BLUETOOTH.
Leave the second speaker in BLUETOOTH mode without connecting to a device.



- 3 Press and hold the TWS pairing button to Transfer speaker for 3 s to activate TWS pairing.

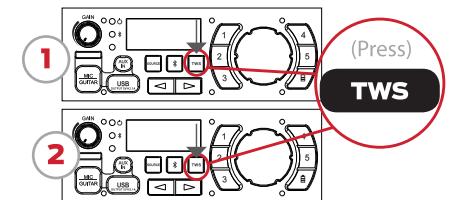

~9 meters max connection range after paired. Moving devices outside this range may cause disruption or signal loss.