

#### **BLUETOOTH® PAIR AUDIO DEVICE:**

Set unit source to Bluetooth®.

Long press **BT Button** for 2 seconds to enter into pairing status. (See **CONTROLS**)

Select "MONSTER X6" from your Bluetooth® enabled audio device.

The unit voice prompt will say, "Connected," when successfully paired.

The blue Bluetooth® indicator light remain on.

Use Play Button to play or pause,

# TWS (True Wireless System) DUAL PAIRING:

(Both unit A and B need to be in close proximity to each other)

Long press the **TWS Button** to enter into **pairing status**. The Bluetooth® indicator LED will alternate flashing blue and red.

Press and hold the TWS Button of unit A to enter **TWS searching mode** while unit B is set to Bluetooth® pairing mode.

The unit A (TX) Bluetooth® indicator LED will light up purple when connected, while the indicator LED for unit B (RX) will be solid red. The unit voice prompt will say, "**Synchronized**."

DISCONNECT: Short press the TWS button.

### **Quick Start Guide**

For complete operational guidelines, please refer to your user manual.



## **ALL-IN-ONE** PA SPEAKER

Model: MNX6





### **LIGHTING**

Short press the LIGHTING button to cycle through the 15 available light modes. The LED display will indicate mode number: "LO1, LO2, LO3... OFF."

Light modes included: DANCE -> SPIN -> SWIRL -> DYNAMIC-> FOLLOW-> SPARK -> SUNSET -> MOOD-> PACE->RED->GREEN-> BLUE-> AMBER->PURPLE->TEAL-> OFF

NOTE: Only the following modes work with the FM Radio audio sources: RED->GREEN-> BLUE->AMBER->PURPLE->TEAL-> OFF

DANCE LIGHT MODES: High frequencies will register on the top light bar, low frequencies on the four side light bars and mid range on the light ring around the sub woofer.

· LIGHTS OFF: Long press the LIGHTING button.

