
MONSTER® ROCKIN' RAMBLER

PORTABLE INDOOR /OUTDOOR WIRELESS SPEAKER

Quick Start Guide

For complete operational guidelines, please refer to your user manual.

Connect the DC Power Cable

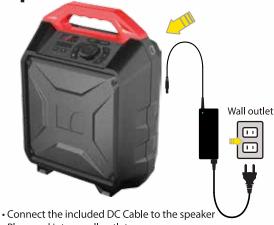

- Plug cord into a wall outlet.
- Charge battery for approximately 6 hours in power off mode before you start using the unit for the first time

Charging the Speaker

- By connecting the DC power, the battery will begin to charge.
- If Red LED indicator is on, this means that battery is charging.
- If Red LED indicator is off, this means the battery is completely charged
- The power indicator on the front panel will flash during charging





4 Manual Bluetooth Pairing

- Place the speaker and your Bluetooth device so they are no more than 3 feet apart.
- Press the source button until "BT" Mode is displayed on screen.
- Press and hold button on Speaker for 2 seconds to enter into Bluetooth pairing mode. BT Blue LED will flash.
- Make sure Bluetooth function on your Mobile device is ON.
- Set your Bluetooth device to search for Bluetooth devices. You will recognize the unit by its Bluetooth name Monster Rambler
- Bluetooth LED turns solid once a Bluetooth device has been paired, and a confirmation message is heard.



Bluetooth Blue LED Indicator (Flashing to Steady On)



Pairing Using NFC

- Turn on NFC function on your Bluetooth enabled device.
- · Place your Bluetooth device on the silkscreen "NFC" on the left side of Monster Rambler handle.
- Confirm Bluetooth connection on your Bluetooth device. Note: Blue LED indicator will be solid.
- Once paired you can play audio from your Bluetooth device and audio can be heard from the unit.

FM / USB Charging on the Rambler



A. Listening to FM radio

- Press the "Source" button to select FM source, the radio station frequency is displayed on screen.
- Press and hold (◀ or ▶) to search a station with strong reception automatically.

B. Store your favorite five radio stations manually

- Tune to a radio station.
- Press and hold a number key (1-5) to enter programming mode: the corresponding number blinks on the screen: and the station to save the corresponding number.
- Repeat above steps above to store additional stations.

C. Select a preset radio station

- Press "Source" button to select FM source.
- Press number 1-5 key to select one of the preset stations.





D. USB Charging mobile device

- The Monster Rockin' Rambler has a built in USB battery bank. In order to use this feature you must use your mobile device's USB cable (iPhone, iPad, or Android) and connect it to the USB port on the Rockin' Rambler.