ROCKIN' ROLLER MIM Quick Start Guide PORTABLE INDOOR /OUTDOOR WIRELESS SPEAKER

For complete operational guidelines, please refer to your user manual.

Connect the AC Power



- Connect the included AC Cable to the speaker
- Plug cord into a wall outlet.
- Charge battery for approximately 6 hours in power off mode before you start using the unit for the first time

Charging Unit

- By connecting the AC power, the battery will begin to charge.
- If Red LED indicator is flashing, this means that battery levels are low and need charging.
- If Red LED indicator is on, this means the battery level is full
- Charge battery for approximately 6 hours in power off mode before you start using the unit for the first time

FM / USB Charging on the Rockin' Roller Mini



A. Listening to FM radio

- Press the "Source" button to select FM source, the radio station frequency is displayed on screen.
- Press and hold (◀ or ▶) to search a station with strong reception automatically.

B. Store your favorite four radio stations manually

- Tune to a radio station.
- Press and hold a number key (1-4) to enter programming mode; the correcsponding number blinks on the screen; and the station to save the corresponding number.
- Repeat above step 1-2 to store more favorite station.

C. Select a favorite radio station

- Press "Source" button to select FM source.
- Press number 1-4 key to select one of your favorite radio station to listen.
- To save as a preset press and hold the number until a confirmation is displayed on the screen.



D. USB Charging mobile device

- The Monster Rockin' Roller Mini has a built in USB battery bank. In order to use this feature you must use your mobile device's USB cable (iPhone, iPad, or Android) and connect it to the USB port on the Rockin' Roller Mini.

4 Manual Bluetooth Pairing

- Place the speaker and your Bluetooth device so they are no more than 3 feet apart.
- Press the source button until "BT" Mode is displayed on screen.
- Press and hold

 button on Speaker for 2 seconds to enter into Bluetooth pairing mode. BT Blue LED will flash.
- Make sure Bluetooth function on your Bluetooth device is ON.
- Set your Bluetooth device to search for Bluetooth devices. You will recognize the unit by its Bluetooth name Mini Rockin Roller
- Bluetooth LED turns solid once a Bluetooth device has been paired.



Bluetooth Blue LED Indicator (Flashing to Steady On)

Pairing Using NFC

• Turn on NFC function on your Bluetooth enabled device.

MONSTER

NFC Pairing

Bluetooth Pairing

- Place your Bluetooth device on the silkscreen "NFC" on the top surface of the Monster Rockin' Roller Mini
- Confirm Bluetooth connection on your Bluetooth device. Note: Blue LED indicator will be solid.
- Once paired you can play audio from your Bluetooth device and audio can be heard from the unit.