

MONSTER®

ROCKER SPORT

PORTABLE INDOOR/OUTDOOR WIRELESS SPEAKER

270

USER MANUAL



MODEL: MNRKR270-SPORT

THANK YOU FOR CHOOSING MONSTER

Congratulations on your Rocker 270 Sport indoor/outdoor wireless speaker. Please take your time to explore all of the features and utilities we have built into this product.

We put all of our products through rigorous testing and quality control. We take great pride in presenting this product to you now. For your peace of mind, we offer a one-year limited warranty against manufacturing defects and workmanship. Please refer to the warranty section of the user manual for more details.

For more information on all of our products, please visit: MyMonsterAudio.com.

FOLLOW US:



@MyMonsterAudio



@MyMonsterAudio



/MyMonsterAudio

PACKAGE CONTENTS

Included with your Rocker 270 Sport purchase:



Rocker 270 Sport



AC Power Cable
(Length: 6')




User Manual &
Quick Start Guide

TABLE OF CONTENTS

PRODUCT CONTROLS	1	FEATURES	
POWER & BATTERY		▪ Standby Mode	5
▪ Power/Charging	2		
▪ USB Power Banks	2	TROUBLESHOOTING	7
AUDIO		LIMITED WARRANTY	8
▪ AUX-IN (3.5 mm)	2	SPECIFICATIONS	9
▪ Bluetooth Pairing	3	IMPORTANT SAFETY INSTRUCTIONS	10
▪ 1/4" Guitar/Mic Inputs & Gain	3	FCC WARNING STATEMENT	11
▪ FM Radio	3		
▪ True Wireless System (TWS)	4		
▪ Equalizer Presets (Bluetooth/AUX-IN ONLY)	5		
▪ Saving Radio Stations (FM)	5		

PRODUCT CONTROLS

 Control Panel

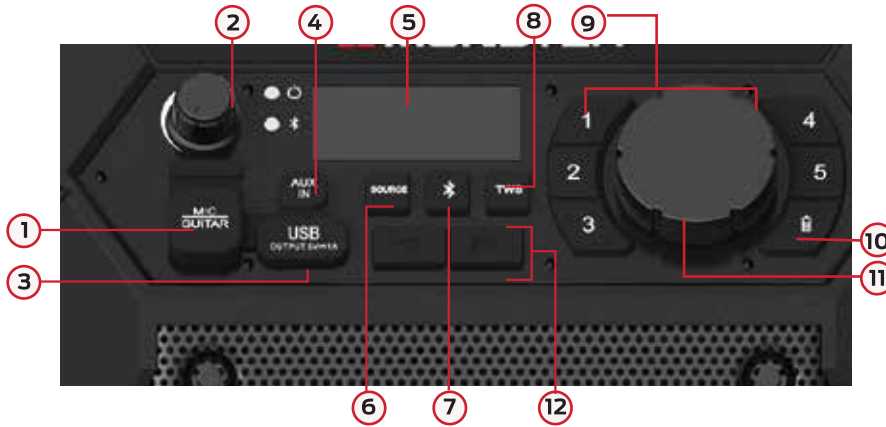

Control Panel

1. MIC/GUITAR 1/4" Input
2. GAIN Knob
3. USB Power Bank
4. AUX IN
5. LED Display
6. SOURCE Button
7. BLUETOOTH Button
8. TWS Button
9. NUMBER Buttons
10. BATTERY LEVEL Button
11. VOLUME Knob
12. ARROW Buttons

 
LED Display

13. LED Display
14. BATTERY Indicator
15. AUX Indicator
16. FM Display
17. Bluetooth Indicator

Back Panel

18. POWER ON/OFF Switch
19. INPUT POWER Port

LED Display

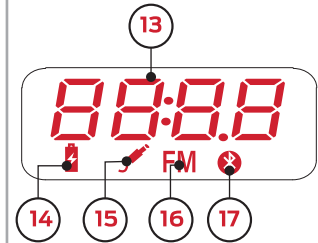

Back Panel

 


POWER & BATTERY

IMPORTANT: Before first use, charge for ~7 hours.

Power/Charging

- Connect the INPUT POWER port to an external power source using the included power cord.

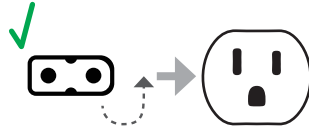

Full Charge – achieved in 7 hours while powered OFF
– achieved in 15 hours while powered ON.

 


- If the unit was fully charged, it is better to charge for the unit after 3 month if not use, and don't exceed 6 months.
- Need to charge for the unit after use, don't exceed 15 days if the unit no power.

- Flip the switch UP to turn ON the speaker.

("HI" will appear on the LED display. The speaker will connect to the last selected source.)

- Flip the switch DOWN to turn OFF the speaker.

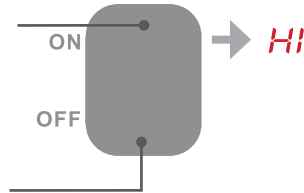

USB Power Banks

- Connect device to the speaker via the 5V1A USB port to charge device from the speaker's internal battery.

(USB cable not included.)

 


USB port is for charging ONLY
– they will not make audio connections.

AUDIO

AUX-IN (3.5mm)

- Connect a music device to the AUX IN port with a standard 3.5 mm jack. The speaker will automatically change to AUX mode.

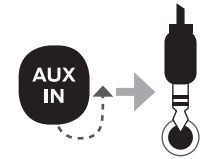

Speaker will make audible and visual LED display confirmation.

AUX

"AUX IN"

Bluetooth Pairing

- 1 Place your mobile device within 3 feet of the speaker.



Make sure **Bluetooth** is enabled on your mobile device.



- 2 Press the **BLUETOOTH** button to set the speaker to Bluetooth mode.

(Press)



The speaker will automatically enter pairing mode.

The speaker will make audible and visual **LED** confirmation. **Bluetooth** icon will flash in pairing mode.



If the **Bluetooth** icon is **NOT** flashing, press and hold the **BLUETOOTH** button to manually enter pairing mode.

- 3 Select "**MONSTER RKR 270 SPORT**" on your mobile device to pair with the speaker.



The speaker will make audible confirmation and the **Bluetooth** icon will stop flashing.



~30 feet max connection range after paired.

Moving devices outside this range may cause disruption or signal loss.

 
1/4" Guitar/Mic Inputs & Gain/Echo Controls

- Connect an instrument, microphone, or other device to the **MIC/GUITAR** port(s) with a standard 1/4 inch jack.



The device(s) will automatically transmit audio playback through the speaker in the current mode.

- Turn **GAIN** control knobs clockwise to increase their effect, and counter-clockwise to decrease their effect.

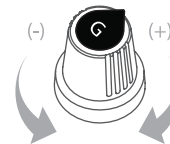

Each 1/4 inch port has its own **GAIN** knobs that can be adjusted independently.



Devices plugged into the 1/4 inch ports will transmit audio playback in all modes/sources.

FM Radio

- 1 Press the **SOURCE** button to change the speaker to **FM RADIO**.

(Press)



Speaker will make audible and visual **LED** display confirmations.

106.9 FM
"Radio"

- 2 Press the **ARROW** buttons to change radio frequency. Press and hold the **ARROW** buttons to scan for a station.

(Press or Hold)



True Wireless System (TWS)

Wirelessly connect two **ROCKER 270 SPORT** speakers together.

 
- 1 Place two Rocker 270 Sport speakers within 10 feet of each other.




- 2 Connect your music device to one of the speakers via **BLUETOOTH**.



Leave the second speaker in **BLUETOOTH** mode without connecting to a device.

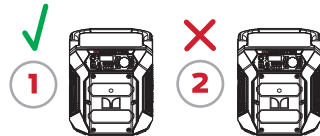

 - 3 Press and hold the TWS pairing button for 3 s to activate TWS pairing.

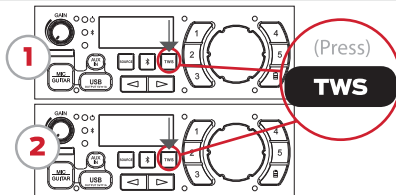

To disconnect a speaker, press the TWS button.

(Press)



~30 feet max connection range after paired.

Moving devices outside this range may cause disruption or signal loss.

Equalizer Presets (Bluetooth/AUX-IN ONLY)

- Press a NUMBER BUTTON (1-5) to change the speaker's equalizer settings.

Setting will show on the speaker's LED display.

E-1

BUTTON	SETTING	LED
1	FLAT	E-1
2	JAZZ	E-2
3	DEFAULT	E-3
4	GUITAR	E-4
5	VOCAL	E-5

Saving Radio Stations (FM)

- Save the current radio station by pressing and holding one of the NUMBER BUTTONS (1-5).

106.9 MHz

(Hold)

1

The LED display will confirm the saved station (P-1, P-2, etc.)

P 1

Press the NUMBER KEY while in radio mode to go to the corresponding SAVED station.

(Press)

1

FEATURES

Standby Mode

- Press and hold the VOLUME knob for ~3 seconds to put the speaker in standby mode.

(Press & Hold ~3 seconds)



 
LED indicators will shut off. Power LED will turn on.

OFF



- Press any button or turn the VOLUME knob to wake the speaker up from standby.

(Turn)



The speaker will automatically enter standby mode after ~15 minutes of inactivity or lack of connection. Standby mode can be manually enabled in any mode.



MONSTER

GAIN

MIC
GUITAR

AUX
IN

USB
Output 10W 12V

SOURCE

TWS

1

2

3

4

5

TROUBLESHOOTING

Speaker is not powering on	<ul style="list-style-type: none">▪ Verify that the POWER switch is fully turned to the ON position. (see pg. 2)▪ Ensure the speaker is not in STANDBY MODE.▪ Make sure AC POWER cord is fully inserted into the unit. (see pg. 2)
Buttons are not responding	<ul style="list-style-type: none">▪ Reset the speaker by turning the power OFF, and then back ON. (see pg. 2)▪ Unplug the AC POWER cord, then plug it back in. (see pg. 2)
No music is playing	<ul style="list-style-type: none">▪ Make sure the speaker is set to the same source as your audio device. If you are playing audio via AUX cable, make sure the speaker is in AUX IN mode, etc. (see pg. 3-5)▪ Make sure the VOLUME is high enough on your audio device as well as the speaker.
Bluetooth audio quality is poor	<ul style="list-style-type: none">▪ Move your music device closer to the speaker.▪ Remove objects that may be interfering with the wireless connection.
Bluetooth device is not pairing	<ul style="list-style-type: none">▪ Verify that the speaker and your device have BLUETOOTH mode active. (see pg. 3)▪ Make sure the speaker and/or your device is not already paired with another device.▪ Check that the speaker is in pairing mode. (see pg. 3)▪ Turn the speaker OFF, and then back ON. Press and hold the BLUETOOTH button to manually enter pairing mode. (see pg. 3)
Contact our support team for additional services	<p>Call: 1-800-976-0677</p> <p>Email: support@mymonsteraudio.com</p> <p>Hours of Operation: Monday - Friday: 7:00 am - 5:00 pm (PST) Saturday - Sunday: CLOSED</p>

LIMITED WARRANTY

Model: MNRKR270-SPORT

This Monster-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Russell Distribution Company, LLC against manufacturing defects in materials and workmanship for a limited warranty period of Ninety (90) Days for Labor and One (1) year for Parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in as is condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, or no fault found.

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used in the United States, and Puerto Rico, by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement noncommercial use of this Product, and shall not apply to the following, including,

but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service, please contact technical support with questions

Phone: 1-800-976-0677 • **Email:** support@mymonsteraudio.com

DO NOT return this product to the store. Visit: MyMonsterAudio.com

SPECIFICATIONS

General	
Bluetooth Version	5.0
Power Input	AC 100-240V
Speaker Drivers	5" driver x1 + 2" Tweeter x3 + Tube
THD + Noise	<10%
Cabinet Material	Plastic
Battery Capacity	11.1V2200mAh
USB Bank Output	5V1A
Dimensions (W x H x D)	10" x 6.5" x 11.4"
Weight	9.92 lbs

Operating Temperature	
Operating Temperature Range	32F° - 104F°
Operating Humidity Range	40~90% RH
Storage Temperature Range	-13F° to 158F°

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions – All the safety and operating instructions should be read before this product is operated.
 - 2) Keep these instructions – The safety and operating instructions should be retained for future reference.
 - 3) Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
 - 4) Follow all instructions – All operating and use instructions should be followed.
 - 5) This apparatus can be used in wet location conditions after disconnected the AC Mains supply and closing the water proof cap for the AC inlet. It must not be used in wet location conditions when charging. Do not use this apparatus near water- The appliance should not be used near water or moisture – for example, in wet basement or near a swimming pool.
 - 6) Clean only with dry cloth.
 - 7) Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
 - 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 - 9) Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 - 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - 11) Only use attachments/accessories specified by the manufacturer.
 - 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
 - 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
 - 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 - 15) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
 - 16) Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
 - 17) No naked flame sources, such as lighted candles, should be placed on the apparatus.
 - 18) Attention should be drawn to the environmental aspects of battery disposal.
 - 19) The use of apparatus in moderate climate.
 - 20) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection.



Protective earthing terminal. The apparatus should be connected to a mains socket outlet with protective earthing connection.

FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment receiver.
- Consult the dealer or an experienced radio/TV technician for help.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.



RF exposure statement

This equipment meets the exemption from the routine evaluation limits in section 2.5 of RSS-102. It should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

IC WARNING

This device contains licence-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

 <p>A lightning flash and arrowhead within an equilateral triangle is intended to alert the user to the presence of insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>An exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	---	--

WARNING

Prevent fire and shock hazards. Do not use extension cords or outlets that expose plug blades. Do not expose cables and plugs to rain or moisture.

Do not attempt to perform any servicing that is not included in the operating instructions. Do not attempt to replace the battery, as incorrect installation can cause fire or explosion. For service, contact qualified service personnel.

Do not remove cover or back of product. There are no user-serviceable parts inside. Attempting to modify controls or performance beyond manufacturer specifications may result in hazardous exposure to radiation.



MUSIC WITHOUT LIMITS

Monster and the Monster logo are registered trademarks of Monster Inc., and its subsidiaries in the U.S. and other countries, used under license. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries. NWS, NOAA, and the NOAA Radio logo are registered trademarks of the National Weather Service in the United States and used with kind permission.

MONSTER® 1-800-976-0677 ▪ support@mymonsteraudio.com ▪ MyMonsterAudio.com