


**\*PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE ATTEMPTING TO ASSEMBLE YOUR NEW Hanging Bird Feeder**

OWNERS MANUAL

## CONTENTS:



## Diagram 1a:

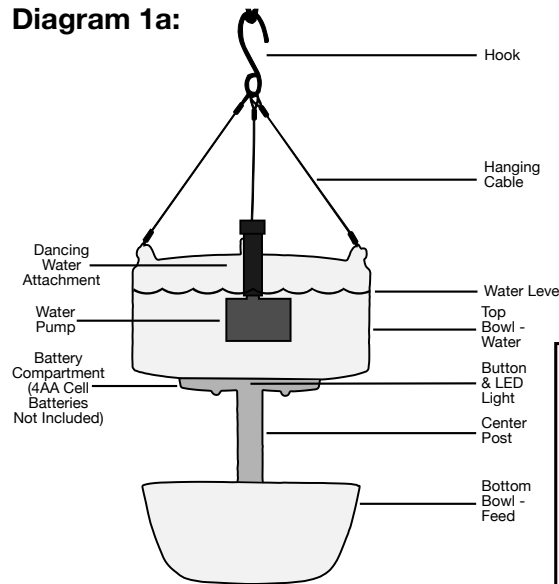

## 1. INSTALLING BATTERIES:

- (1) Squeeze tabs, (2) lift off battery cover (Figure 3a).
- Place the Batteries in the Battery Compartment (Figure 4a, 4b, 4c, 4d and 4e).
- Insert 2 batteries with the (+) side facing up in Battery Compartment and 2 batteries with the (-) facing up in Battery Compartment (Figure 4e).
- Reinstall the Battery Covers by aligning the tabs with the rectangular openings on the battery covers and pushing down until you hear a click and battery tabs lock into place (Figure 3b).

## CHANGING BATTERIES:

- When changing batteries you may find it easier to remove water and bird seed that is in the Hanging Bird Feeder and unscrew/disassemble the Bottom Bowl from the rest of the Hanging Bird Feeder and lay on its side for easy access to the battery compartments (Figure 2a). **During the battery changing process, it is important to ensure Battery Compartment remains completely dry. It is important that no water enters the Battery Compartment.**
- See Installing Batteries Section above on how to reinstall batteries and reassemble.

## 2. Assembly

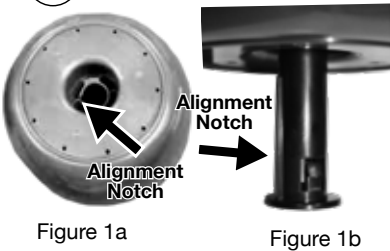


Figure 1a

Figure 1b



Figure 1c

Figure 1d

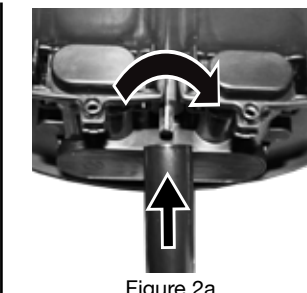


Figure 2a

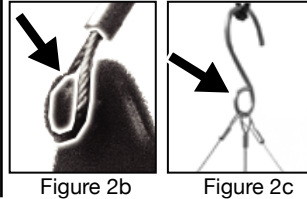


Figure 2b

Figure 2c

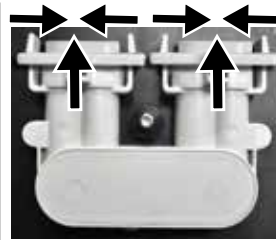


Figure 3a

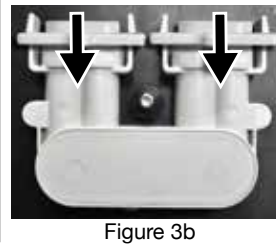


Figure 3b

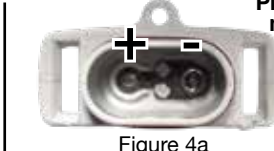


Figure 4a

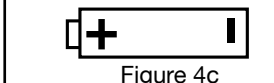


Figure 4c



Figure 4d



Figure 4b

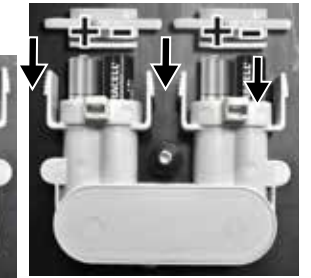


Figure 4e

Please note, images of parts are not to scale with one another.

- Take the Center Post and slide it into the bottom of the Bottom Bowl aligning the notch in the Bottom Bowl and the notch in the Center Post. Push in until the center post snaps into place. (Figure 1a, 1b, 1c and 1d).
- Screw the center post into the screw in the center of the bottom of the Top Bowl (Figure 2a).
- Attach the 3 cables to the 3 attachment spots on the Top Bowl (Figure 2b). Take the other end of the 3 cables and slide them onto the small end of the hook (Figure 2c). You may need to close the small end of the hook to prevent the cables from coming loose in the future.
- Choose a Dancing Water Attachment and place it on the water outlet on the top side of the water pump (Diagram 1a).
- Fill the Top Bowl with water, the water level should cover the top of the Water Pump (Diagram 1a). Fill Bottom Bowl with bird seed.
- Hang the Hanging Bird Feeder in your favorite location, turn on and enjoy!

## Need Help?

Call us for assistance at:  
1+ (619) 449-2392  
or you can email us at:  
customer@berninifountains.com  
Our Customer Care Department is available:  
Monday - Friday 8:30am to 4:00pm PST  
11:30am - 7:00pm EST

## 3. OPERATING YOUR HANGING BIRD FEEDER'S WATER FOUNTAIN:

**Turning the Water Fountain on:** The Water Fountain is programmed to run for one hour daily, then turn off automatically. The Water Fountain will again automatically turn on each day for 1 hour.

Press the button once to turn the Water Pump on; the LED light will flash to indicate the Water Pump has been turned on (Figure 5a and 5b). The Water Fountain will automatically turn off after one hour daily. The Water Fountain will then turn on again at the same time each day daily, simply press the button and enjoy.

**Turning the Water Fountain off:** To stop the Water Fountain, manually press and hold the button for over 2 seconds (Figure 5a and 5b).

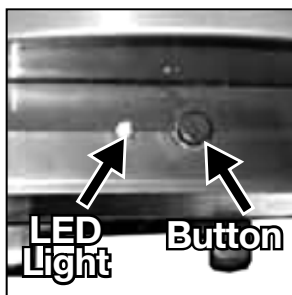


Figure 5a

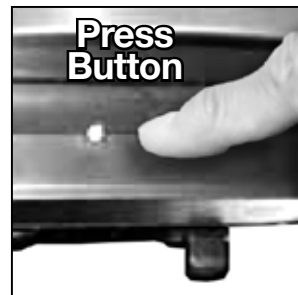


Figure 5b



Figure 6a



Figure 6b

### 4. Troubleshooting

### Troubleshooting Guide

#### PRIMING THE WATER PUMP

If you find the Water Pump is running, but water is not flowing from your Hanging Bird Feeder, you can try priming the Water Pump:  
Turn off Fountain, grab both sides of the Hanging Bird Feeder and quickly shake your Hanging Bird Feeder for ten seconds. This is to dislodge any air bubbles that may be caught in your Water Pump. Press the button to turn your Hanging Bird Feeder on. Water should be flowing from your Hanging Bird Feeder. If water is not flowing, press and hold button for over 2 seconds again to turn your Hanging Bird Feeder off, and repeat the step above.

| PROBLEM                  | SOLUTION                                                                                                              |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------|
| <b>Water Not Flowing</b> | Indicator light not turning on: Check batteries are installed correctly: See Installing Batteries Section.            |
|                          | Indicator light not turning on: Check that batteries are new and in good condition: See Installing Batteries Section. |
|                          | Pump is, on but no water flow: Check water level.                                                                     |
|                          | Pump is, on but no water flow: Check pump is free of debris or obstructions. See Care and Maintenance Section.        |
| <b>Low Water Flow</b>    | Indicator light on: Check that batteries are new and in good condition: See Installing Batteries Section.             |
|                          | Pump is, on but low water flow: Check pump is free of debris or obstructions. See Care and Maintenance Section.       |
|                          | Pump is, on but low water flow: Check water level. Air in pump: See Priming the Water Pump Section.                   |
| <b>Loud Sound</b>        | Loud sound and weak flow: Air in pump: See Priming the Water Pump Section.                                            |
|                          | Loud sound and weak flow: Check pump is free of debris or obstructions. See Care and Maintenance Section.             |
| <b>Suddenly Stops</b>    | Pump suddenly stops: Check pump is free of debris or obstructions. See Care and Maintenance Section.                  |

### 5. Care and Maintenance

#### CLEANING THE WATER PUMP'S PARTS

The impeller inside of the Water Pump is what pushes water up through your Hanging Bird Feeder, allowing you to enjoy the soothing sounds and wonderful sights of your Hanging Bird Feeder. After long periods of usage, this part will need to be cleaned to make sure your Hanging Bird Feeder runs optimally.

**Step 1:** Remove the pump cover panel off the Water Pump by grabbing the sides of the cover and pulling it up off the unit. The Pump Filter is under this cover, rinse off all debris.

**Step 2:** The Water Pump is secured with suction cups and lifts up easily. Remove the pump cover. This fits tightly, but will come off.

**Step 3:** Remove the impeller chamber cover. This is tightly fitted but will come off.

**Step 4:** Remove the impeller from its chamber.


**Step 5:** Rinse the impeller until all debris has been removed.

#### CLEANING YOUR FOUNTAIN


In order to keep your Hanging Bird Feeder in tip-top shape and for a prolonged life, it is best if your Hanging Bird Feeder Top Bowl and Lower Bowl be cleaned periodically. To clean your Hanging Bird Feeder, drain all water and bird seed, then disassemble. Use a mild soap and a soft cloth to clean the parts of your Hanging Bird Feeder.

#### COLD STORAGE


Turn power off, clean and dry the Hanging Bird Feeder of all water and bird seed. Remove the batteries for long-term storage and bring it indoors. (Now is a great time to clean the pump to remove any debris that may have accumulated throughout the year).

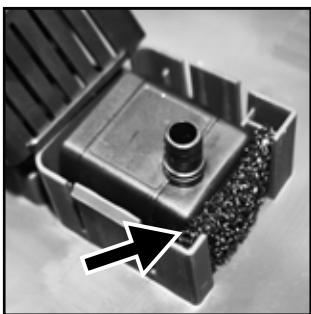


Step 1

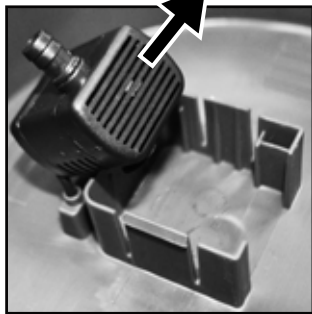

Step 2

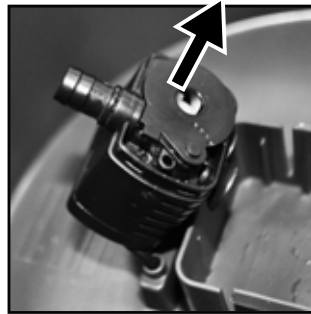

Step 3

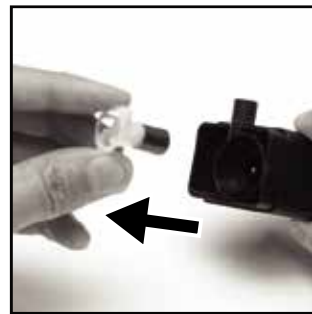

Step 4



Step 5

#### IMPORTANT BATTERY SAFETY INSTRUCTIONS:

**PROPOSITION 65 WARNING:** This product can expose you to chemicals including lead and lead compounds which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**WARNING:** When using electric devices, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

**WARNING:** 1. Do not incinerate the battery even if it is severely damaged or is completely worn out. The battery can explode in a fire. Check with municipal codes in your area for possible special disposal Instructions.

2. If liquid leaks from the battery cell, discontinue use immediately and dispose of properly.

3. Use only 4-1.5V AA cell batteries.

4. Do not attempt to disassemble, remodel or destroy the batteries, as it may cause battery leakage, fire, or bursting; and could also create sulfuric acid spills from the battery resulting in possible burns to person and damage to the immediate environment.

5. Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center.

#### LIMITED ONE YEAR WARRANTY

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This product has a one year limited warranty on all materials and workmanship. Bernini® warrants the original purchaser of this product that the product will be free from manufacturing defects in workmanship and material for a period of one (1) year from the date of original purchase. If within one (1) year this product fails due to defect in material or workmanship, Bernini® will repair, replace or supply any defective part at their option. The purchaser must contact Bernini® and provide a description of the defective part, including digital pictures if requested, with this original purchase documentation as validation of warranty coverage. This warranty does not cover or apply to: (a) damage to the product due to misuse, mishandling, and abuse, (b) products not used in accordance with instructions, (c) product not assembled or installed according to instructions, and (d) normal wear and tear. Call us for assistance at 1+ (619) 449-2392 or you can email or mail us at: 9545 Pathway Street, Santee, CA 92071, [customer@berninifountains.com](mailto:customer@berninifountains.com). Our Customer Care Department is available: Monday - Friday 8:30am to 4:00pm PST / 11:30am - 7:00pm EST

#### Please read first before returning:

Please call us for assistance at 1+ (619) 449-2392 or email us at [customer@berninifountains.com](mailto:customer@berninifountains.com). Our Customer Care Department is available: Monday - Friday 8:30am to 4:00pm PST, 11:30am to 7:00pm EST. If you have any questions regarding assembly, parts, or operation, please visit our website at [www.berninifountains.com](http://www.berninifountains.com). You will find instructional videos on how to assemble and operate your fountain, and keeps you up to date on our newest products. You can also email us with any questions you have. This product comes with a one year limited warranty against materials and workmanship.