BERNINIS



FLORENCE

Owner's Manual

PLEASE READ FIRST BEFORE RETURNING

Please call us for assistance at 1+ (619) 449-2392 or email us at customercare@berninifountains.com

Our Customer Care Department is available:

Monday - Friday 8:30am to 4:00pm PST, 11:30am to 7:00pm EST

If you have any questions regarding assembly, parts or operation, please visit our website at www.berninifountains.com. At berninifountains.com you will find instructional videos on how to assemble and operate your fountain and it will keep you up to date on our newest products. You can also email us with any questions you have.

This product comes with a one year limited warranty against materials and workmanship.

Please review the list of accessories included with your Bernini™ Fountain on the next page. Please note, images of parts are not to scale with one another.

About Florence:

As the capitol of Tuscany, Florence is the symbol of the Italian Renaissance. The art and architecture from this region is admired worldwide. We hope you enjoy the elegant silhouette of the Florence Fountain as it echoes the artistic past and centuries of timeless beauty from this land.

CONTENTS

1	Step 1: Base and Large Bowl
2	Bowl Locking System
4	Step 2: Middle and Top Tier Installation
8	Step 3: Battery Installation
10	Inserting Battery Compartment Door
10	Removing The Battery Compartment Door
11	Corded Operation Mode
12	Step 4: Setting Up Your Fountain
13	Fill Your Fountain
13	Operating Your Fountain
16	Step 5: Installation Instructions for Decor Tops
17	Dancing Water Feature Installation
17	Dancing Water Feature and Spray Pattern
18	Planter/Bird Feeder/Vanishing Edge Bowl Installation
18	Vanishing Edge Bowl Installation
18	Bird Feeder Installation
19	Planter Installation
20	Finial Top Installation
22	Troubleshooting and Maintenance
22	Cleaning Your Fountain
22	Cold Storage
22	Water Pump Impeller
23	Priming the Water Pump
23	Water Pump Connection
24	Weighing Down Your Fountain
24	Using Leveling Shims
25	Recharging Your Battery
26	Troubleshooting Guide

Parts for your Bernini Fountain:









Large Bowl



Fountain Tier with Water Pump



Rechargeable Battery



Battery Compartment Door



Fountain Topper/ Finial



3-In-1 Planter/Bird Feeder/Vanishing Edge Bowl



Extension Cable

Parts for your Bernini[™] Fountain:





Extension Tube



Dancing Water Attachment



Foam Ring



Foam Ring Center Plug



Rubber Plug



Leveling Shim



Connection Port



Battery Charger



Bird Seed Bowl




Step 1:

 
Base & Large Bowl


You will need:



Bowl Locking System

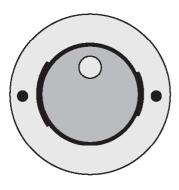



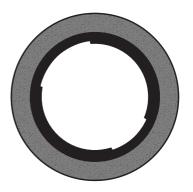

Top of base

Note: You will notice that there are two different sized tabs on the bottom of the Large Bowl and there are two corresponding grooves in the top of the Base. These tabs fit together and lock when turned clockwise.



Step1: Make sure to place the Base of your Fountain on a flat, firm surface.



Step 2: Apply downward pressure by stepping on the edge of the Base to prevent it from turning.

Align and connect the Large Bowl to the Base.



Step 3: Turn the Large Bowl a quarter turn clockwise to lock it into place.



At this point, your fountain should look like the image below. Go to the next page for the next step to setup your new Bernini TM Fountain.





Step 2:

Middle & Top Tier Installation

You will need:











For the next step, you will be installing the fountain tier onto the large bowl. Rest the Fountain Tier on the side of the large bowl.



Step 1: Feed the Water Pump cord down the pipe. The cord will be connected to the Connection Port at a later step.



Step 3: Firmly press the plug into the pipe in the middle of the Large Bowl.

If you are having trouble pressing the plug into the pipe, you can rub a small amount of soapy water on the plug to help it slide into place.




Step 4: To ensure that you have a good seal, make sure the plug fits snugly as pictured above.



NOTE: If the cables slip out of the rubber stopper, you can press the cables into the slot in the side of the rubber stopper. Maneuver the cord to fit snugly inside the hole that is located in the center of the rubber stopper.

If your Fountain came with the Water Pump disconnected from the tube inside of the Fountain Tier, refer to the "Water Pump Connection" section of this manual for instructions on how to connect the Water Pump to the Fountain Tier.



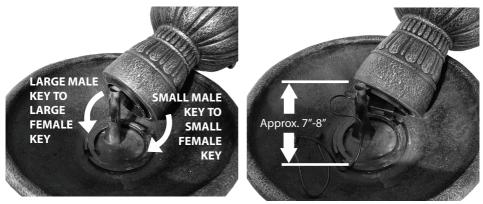

Step 5: Just like the large bowl and base, the fountain bowl uses a key system that will lock it to the middle of the large bowl.

Be sure to leave approximately 7 to 8 inches (18 to 20cm) of slack in the cords coming from the water pump so the pump will sit on the bottom of the large bowl when the fountain bowl is assembled.



Step 6: Connect the Fountain Tier to the Large Bowl and turn the Fountain Tier about a quarter turn clockwise to lock it into place. To keep the base from turning, rest your foot on the base to assist in locking the fountain tier in place.



At this point, your Fountain should look like the image on the left. Go to the next page for the next step to setup your new Bernini™ Fountain.






Step 3:

Battery Installation

You will need:

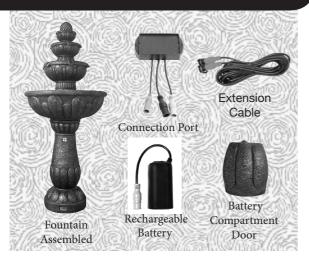



Connecting The Battery



Step 1: In the open battery compartment, you will see three cords hanging down that you must connect to the connection port.

If you do not see the three cables inside the battery compartment, reach up into the base and gently pull them down until they are hanging inside the battery compartment.



Step 2: Using the cords from inside the base and the cord from the battery, connect the color coded cords to their corresponding receptacles on the connection port.

Use the image below for more help on connecting the battery.




Step 3: Place your connection port inside the designated angled area located at the back of your fountain base. (See illustration on below)




Step 4: Place the battery inside of the compartment in front of the connection port. (See illustration)

DO NOT PLACE BATTERY UPSIDE DOWN INSIDE OF BATTERY COMPARTMENT.

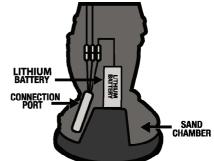

NOTE: USE CAUTION WHENEVER REACHING INSIDE THE BATTERY INSIDE THE COMPARTMENT, DUE TO THE MANUFACTURING PROCESS THERE MIGHT BE ROUGH EDGES.

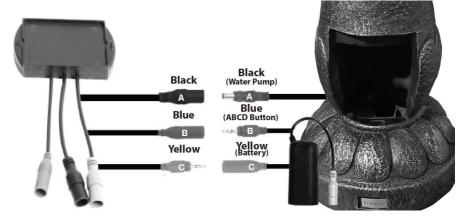

Inserting the Battery Compartment Door

After you have connected the cables inside your fountain to the rechargeable battery, you should then place the battery compartment door on the base of the fountain.



Step 1: Start by lining up the notch on the bottom of the battery compartment door with the notch in the bottom of the battery opening.



Step 2: Push the battery compartment door in toward the base. You will know it is in position when the magnet locks the door in place.



Once the door is in place, you may notice a small notch in the bottom left corner of the battery compartment door. This notch is for an optional accessory not available on this unit.

Removing the Battery Compartment Door



Step 1: Carefully disconnect the battery compartment door from the base by gently pulling outward from the top.



Step 2: Then, pull the battery compartment door up and out to remove from the base.



DO NOT OVEREXTEND THE BATTERY COMPARTMENT DOOR BY PULLING DOWN!

This may cause damage to your new Belmont Garden™ Fountain.-





At this point, your fountain should look like the image on the left. Go to the next page for the next step to setup your new BerniniTM Fountain.






Corded Operation Mode

Connecting The Extension Cable (When not using the rechargeable battery)


NOTE: While using your fountain in Corded Operation Mode all controls work the same as while using with the Battery.

This fountain has 2 different modes of operation. This section covers the second mode of operation, Corded Operation. Corded Operation allows you to run the Fountain 24 hours a day 7 days a week without the rechargeable battery.


You will be disconnecting the Lithium Battery from the Control Panel and connecting the Extension Cable to the control panel using the same receptacle that the Lithium Battery was connected to (arrows).

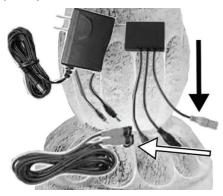

Step 1: Pull out the Lithium Battery from inside the base and unplug the yellow receptacle (black arrow) from the Control Panel. Put the battery in a safe location following all of the safety precautions in the battery Cold Storage section.

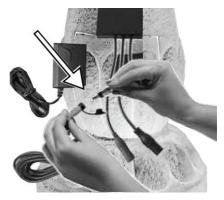

Step 2: Plug one end of the Extension Cable (they are interchangeable), to the Yellow receptacle (white arrow) on the Control Panel.

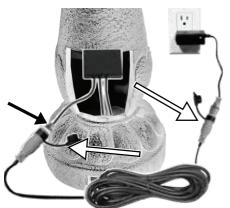

Step 3: Connect the other end of the Extension Cable to the receptacle on the Battery Charger (white arrow).

Step 4: Place the Connection port into the Base. Place your Battery Compartment Door onto the base.

There is a notch in the lower left corner of the Battery Compartment Door. This notch is for the Extension Cable. Make sure that the Extension Cable runs through this notch to the Battery Charger and is not pinched.

Plug the Battery Charger into a power outlet. Now you can run the fountain 24 hours a day 7 days a week.



Step 4:

Setting Up Your Fountain

You will need:



Water To Fill Your Fountain

Fountain Assembled



Fill Your Fountain

Fill the Fountain Tier until water pours over the spouts. Then fill the Large Bowl until the water is about 1 inch (2.5 centimeters) from the top of the bowl.


After you have filled your Fountain, grab both sides of the Large Bowl and quickly shake your Fountain for ten seconds. This is to dislodge any air bubbles that may be caught in your Water Pump. Press the C button once to turn your Fountain on. Water should be flowing from the top of your fountain. If water is not flowing, press the C button once more to turn your Fountain off, and repeat the step above.

IF YOUR FOUNTAIN IS MAKING A LOUD NOISE, DON'T PANIC!

This just means that there are air bubbles stuck in the Water Pump. Your pump will not be harmed and you can easily fix this issue. You can try priming the Fountain again by repeating the steps above however, if the problem still persists, refer to the "Priming The Water Pump" section of this manual for instructions on how to prime the Water Pump.

Operating Your Fountain

The on-board control panel is located towards the top of the base, just below the Large Bowl. See the diagram below to see how the all-new on-board controls work for your Bernini™ Fountain.

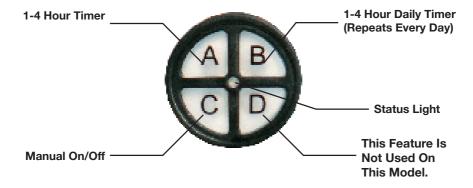

BUTTON	DESCRIPTION
	Runs the fountain for 1-4 hours with automatic shut off.
A (1-4 Hour Timer)	One hour operation: press the A button once for your fountain to turn on with an automatic shut-off after one hour of operation. Two hour operation: press the A button twice and your fountain will automatically shut-off after two hours of operation.



BUTTON	DESCRIPTION
	 Three hour operation: press the A button three times and your fountain will automatically shut-off after three hours of operation. Four hour operation: press the A button four times and your fountain will automatically shut-off after four hours of operation.
1. A (1-4 Hour Timer)-continued	How To Use This Function: 4. Press the A button one, two, three or four times to turn your fountain on for the desired automatic run time.
	5. The Status Light will blink once for each hour you have selected to confirm your fountain's 1-4 Hour Timer, up to four hours.
	6. At the end of the desired interval, your fountain will automatically turn off.
	This function is the same as the 1-4 Hour Timer (button A) except with the added feature of automatically turning your fountain on at the same time the next day for the interval you selected.
	7. One hour operation: press the B button once for your fountain to turn on with an automatic shut-off after one hour of operation. This will repeat daily at the same time each day.
	8. Two hour operation: press the B button twice and your fountain will automatically shut-off after two hours of operation and repeat daily at the same time.
B (1-4 Hour Daily Timer)	9. Three hour operation: press the B button three times and your fountain will automatically shut-off after three hours of operation and repeat daily at the same time.
	10. Four hour operation: press the B button four times and your fountain will automatically shut-off after four hours of operation and repeat daily at the same time.
	How To Use This Function:
	11. Select the amount of time you would like the fountain to run by pressing the B button one, two, three or four times.12. Your fountain will then run for the selected amount of time and at the end of the selected duration it will automatically turn off. Then your fountain will automatically turn on at the same time the next day for the run time duration you selected.



BUTTON	DESCRIPTION
B (1-4 Hour Daily Timer)- continued	Example: If you turn on your fountain, choose a two hour run time by pressing the B button twice at 5pm, your fountain will turn off at 7pm and turn on again the next day at 5pm and run for two hours automatically.
C (Manual On/Off)	Turns the fountain on and off without any timer. Can be used when extended run times are desired. Will also limit the battery life as the battery was designed to run in four hour increments. Note: Fountain will run until the battery loses its charge.
D	This feature is not used on this model.
Status Light	Status light will blink for the number hours you have selected when using the timer functions (buttons A and B).



You can now try your Bernini™ Fountain to see if everything is working correctly! Turn your Fountain on and if you see water flowing from the outlet in the middle of the Fountain Tier, go to the next page and select one of the many decorative options for your fountain. If water is not flowing, refer to the "Priming The Water Pump" section of this manual for instructions on how to prime the Water Pump.



Step 5:

Installation Instructions for **Decor Tops**

You will need:



Foam Ring Center Plug



Foam Ring



Rubber Plug



Extension Tube



Planter/Bird Feeder/Vanishing Edge Bowl



Dancing Water Attachment



Bird Seed Bowl



Finial Top



Dancing Water Feature Installation



Step 1: Find the Dancing Water attachment.




Step 2: Start by attaching the Dancing Water attachment to the outlet in the middle of the fountain bowl.



Step 3: Enjoy the relaxing and calming sound of your new Bernini TM Fountain.

Dancing Water Feature and Spray Pattern

Dancing Water
Attachment

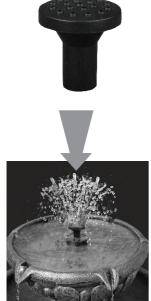





At this point, your Fountain should look like the image above.




Planter/Bird Feeder/Vanishing Edge Bowl Installation

Vanishing Edge Bowl Installation

To prepare as the Vanishing Edge Bowl start by installing the Foam Ring and Rubber Plug into the bottom.





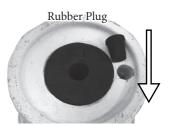





Note: If bowl is not filling with water ensure foam ring is properly seated.

 
Step 1: Install the Foam Ring and Rubber Plug into the bottom tight and snug.

Step 2: Place Planter Finial on Fountain. Make sure it's level.

Step 3: Once bowl is in place, push down on the foam ring from inside of the bowl to ensure a seal between the foam ring and the fountain.

Bird Feeder Installation

To prepare as the Bird Feeder, turn over and remove the small rubber plug if already installed from the bottom of bowl.



Step 1: Turn over and if already installed pull out both the Rubber Plug and the Foam Ring.



Step 2: Turn over and place back onto the fountain.



Step 3: Place the Bird Feeder into the Bowl.



Step 4: Fill with bird seed.



Planter Installation

To prepare as the Bowl as a Self-Watering Planter ensure that the smaller rubber plug is NOT installed. The small hole is where the planter gets water.



Step 1: Lift the Bird Feeder bowl out of the Planter Finial. Remove the Bird seed from the Bird Feeder bowl.




Step 2: Turn Planter Finial over. (Bottom side up.)



Step 3: If already installed, remove Rubber Plug from Planter Finial.



Step 4: Turn Planter Finial over. (Top side up.)

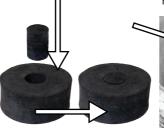

Step 5: Insert Foam Center Plug into the Foam Ring. This foam plug prevents over watering of planter.



Step 6: Insert Foam Ring into the large opening in the center of the planter. Ensure the top flat edge of Foam Ring (arrow) is flush with the top of the large opening in the center of the planter. This foam plug prevents over watering of planter.



Step 7: Fill Planter with your favorite soil.



Step 8: Plant your choice of plants. Lightly press soil around the center. Do not press too firmly otherwise the Foam Ring will descend down on top of the fountain pump outlet which will prevent water flow.




At this point, your Fountain should look like the image on the right. You are now finished installing the Planter/Bird Feeder/Vanishing Edge Bowl. Turn on your Fountain and enjoy!





Finial Top Installation

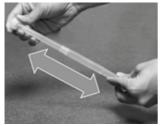

To install the Finial you will need to use the clear extension tube included with your Bernini™ Fountain.

Before installing the extension tube, pull the two ends of the extension tube apart until it is almost fully extended.



Step 1: Remove the silicone cap from the top of the extension tube.



Step 2: Attach the extension tube to the water outlet in the middle of the Fountain Tier. NOTE: Extension must be included.



Step 3: Put the Finial over the top of the extension tube. Be careful to keep the tube centered in the hole at the top of the Finial.



Step 4: Just like the large bowl and fountain tier, the Finial locks into place using a key system in the middle of the fountain tier. (See illustration to the right) Align the bottom of the finial to the top of the fountain tier and twist the Flowerbud Finial a quarter turn clockwise to lock it into place.



Bottom of Finial



Top of Fountain Tier

Note: You will notice that there are two different sized tabs on the bottom of the Finial and there are two corresponding grooves in the top of the Fountain Tier. These tabs fit together and lock when turned clockwise

Finial Top Installation



Step 5: Replace the silicone cap on to the extension tube.



Step 6: Press the extension tube down until it is level with the Finial Top.





At this point, your fountain should look like the image on the left. You are now finished installing the Finial Top. Turn on your fountain and enjoy!

Troubleshooting and Maintenance

Cleaning Your Fountain

In order to keep your Fountain in tip-top shape and for a prolonged life, it is best if your Fountain and the bowl or water container that the Fountain is placed in are cleaned periodically. To clean your fountain, drain of all water and disassemble. Use a mild soap and a soft cloth to clean the parts of your Fountain. **DO NOT SCRUB YOUR FOUNTAIN, AS THIS COULD CAUSE DAMAGE TO THE FINISH OF YOUR BERNINI™ FOUNTAIN.**

Cold Storage

Turn power off, remove from container, clean and dry the Fountain of all water. Remove the batteries for long term storage and bring it indoors. (Now is a great time to clean the pump to remove any debris that may have accumulated throughout the year).

Cleaning the Water Pump's Parts

After about six weeks of usage, you may want to clean the water pump's impeller to keep your Bernini™ Fountain in tip-top shape. You will need to drain your fountain of all water prior to cleaning the water pumps' parts.

Water Pump Impeller

The impeller inside of the water pump is what pushes water up through your fountain, allowing you to enjoy the soothing sounds and wonderful sights of your Bernini™ Fountain. After long periods of usage, this part will need to be cleaned to make sure your fountain runs optimally.



Begin by disconnecting the pump from the water tube.

Step 1: Remove the front of the water pump by grabbing the sides of the front panel and pull it off the unit



Step 2: Remove the impeller chamber cover. This is tightly fitted on to the impeller chamber, but will come off



Step 3: Remove the impeller from its chamber.



Step 4: Rinse the impeller until all debris has been removed. Then replace the impeller in the impeller chamber, put the impeller chamber back on and then replace the pump's front panel.

Priming The Water Pump

If you find the Water Pump is running, but water is not flowing from your Fountain, you can try priming the Water Pump:

Turn off Fountain, grab both sides of the Fountain and quickly shake your Fountain for ten seconds. This is to dislodge any air bubbles that may be caught in your Water Pump. Press the button to turn your Fountain on.

Water should be flowing from the top of your Fountain. If water is not flowing, press and hold button for over 2 seconds again to turn your Fountain off, and repeat the step above.





Step 1: Submerge the Water Pump into the water inside the Large Bowl and lightly shake the pump underwater to release air bubbles inside the vents on the Water Pump.



Step 2: Turn the Fountain on and you should see water flowing from the pump. Let the pump run for about ten seconds and then turn your Fountain off



Step 3: Reconnect the Water Pump to the feeder tube inside the fountain bowl and reattach the Fountain Tier to the Large Bowl.

Water Pump Connection

If your Bernini™ Fountain did not come with the Water Pump already connected to the tube inside of the Fountain Bowl or if the Water Pump gets disconnected from the Fountain Tier, use these instructions to reconnect your Water Pump.



Before beginning, remove any finials that may be installed in the fountain bowl.

Step 1: Unlock the Fountain Tier by turning it a quarter turn counter clockwise.



Step 2: Rest the Fountain Tier on its side in the large bowl.



Step 3: Connect the male outlet on the top of the water pump to the tube inside of the Fountain Tier. Make sure this connection is snue.

Then reassemble the Fountain Tier with the instructions found in the Assembly Section of this manual.



Weighing Down Your Fountain

Do you happen to live in an area with strong winds? You can secure your fountain from possibly falling by using the weighted chamber inside the base.

Note: Do not put sand on top of battery or connection port. Remove battery and connection port prior to adding sand.

Simply add several scoops of sand to the chamber in the bottom of the base. Even with sand added to the Base, the Battery can safely sit atop the platform in the middle of the Base's chamber.



Using Leveling Shims

If you are having trouble getting water to flow evenly off of the spouts on your Bernini™ Fountain, you may need to level the surface that your Fountain was placed on. With the included leveling shims, you do not need to move your Fountain, just follow the instructions below to get even water flow.



Place the shim underneath the base on the opposite side that is not flowing as strongly as the other sides.



Once the fountain is flowing equally on all sides, then grasp the shim and break it on the crease closest to the end of the base.



Once the shim is broken, it will be hidden but will level your fountain



Recharging Your Battery

After about 40 hours of spectacular run time, it may be time to charge the battery for your Bernini™ Fountain. Once plugged into the outlet, the light will glow a solid red until charged. Then it will turn green.



Begin by disconnecting the battery from the Connection Port and remove from the base of your fountain.

Step 1: Plug the battery the battery is charging, the charger into an electrical wall light on the charger will be solid red.



Step 2: Take the Yellow cord that is connected to your battery and plug it into battery charger cord. While the battery is charging, the light on the charger will be solid red.



Step 3: Charge the battery for9 hours. When the battery is charging the charger light will be solid red and will turn green when fully charged.

IMPORTANT

DO NOT CHARGE ON COUNTER TOPS, CARPETS OR OTHER FINISHED SURFACES. IT IS RECOMMENDED THAT THE BATTERY BE PLACED ON A CONCRETE SURFACE WHILE CHARGING.

Troubleshooting Guide

PROBLEM	SOLUTION
Fountain is not working	Charge battery for recommended time (Refer to Recharging your Battery) battery has been charged and still will not hold a charge it may need to be replaced.
	Check that battery is fully charged: See charging battery section.
Lights or Pump not working	Make sure battery has been charged. Check that the connection port cables are secure.
	Prime Pump as instructed. (Refer to priming the water pump)
Water Net Flouring	Add Water
Water Not Flowing	Check to see that pump tubes are connected
	Check to see that the pump and pump tubes are clear of debris.
Laurel Donner	Prime Pump as instructed. (Refer to priming the water pump).
Loud Pump	Check water level. Ensure pump free of debris.
A/B/C/D Switch	Make sure battery has been charged.
not working	Check that the connection port cables are secure. If secure disconnect battery and reconnect.
Fauntain Cattings	Make sure battery has been charged.
Fountain Settings not working	Check that the connection port cables are secure. If secure disconnect battery and reconnect To clear settings.



Troubleshooting Guide

PROBLEM	SOLUTION
	Check battery is installed correctly: See installing battery section.
	Check that battery is fully charged: See charging battery section.
Water Nat Florida	Pump is on but no water flow: Check water level.
Water Not Flowing	Pump is on but no water flow: Check pump is free of debris, kinks or obstructions. See Troubleshooting section.
	Pump is on but no water flow: Check water tube is connected properly. See Base and Fountain Ball Installation Section 1.
	Check that battery is fully charged: See charging battery section.
Low Water Flow	Pump is on but low water flow: Check pump is free of debris, kinks or obstructions. See Troubleshooting section.
	Pump has low water flow: Check water level.
	Pump is on but low water flow: pump is cavitating. See Priming The Water Pump Section.
	Loud sound and weak flow: Air in pump: See Priming The Water Pump Section.
Loud Sound	Loud sound and weak flow: Check pump is free of debris, kinks or obstructions. See Trouble-shooting section.
Suddenly Stops	Pump suddenly stops: Check pump is free of debris, kinks or obstructions. See Troubleshooting section.

LIMITED ONE YEAR WARRANTY

This product has a one year limited warranty on all materials and workmanship. Bernini™ warrants the original purchaser of this product that the product will be free from manufacturing defects in workmanship and material for a period of one (1) year from the date of original purchase. If within one (1) year this product fails due to defect in material or workmanship, Bernini™ will repair, replace or supply any defective part at their option. The purchaser must contact Bernini™ and provide a description of the defective part, including digital pictures if requested, with this original purchase documentation as validation of warranty coverage.

This warranty does not cover or apply to: (a) damage to the product due to misuse, mishandling, and abuse, (b) products not used in accordance with instructions, (c) product not assembled or installed according to instructions, and (d) normal wear and tear.

Call us for assistance at 1+ (619) 449-2392 or you can email us at: customercare@berninifountains.com Our Customer Care Department is available: Monday - Friday 8:30am to 4:00pm PST / 11:30am - 7:00pm EST



IMPORTANT BATTERY SAFETY INSTRUCTIONS

DANGER: Do not store battery in an airtight container as it may cause an explosion.

PROPOSITION 65 WARNING: This product can expose you to chemicals including lead and lead compounds which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

WARNING: When using electric devices, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

WARNING:

- Do not incinerate the battery even if it is severely damaged or is completely worn out. The battery can explode in a fire. Check with municipal codes in your area for possible special disposal instructions.
- 2. If liquid leaks from the battery cell, discontinue use immediately and dispose of properly.
- 3. Do not charge battery in rain or in wet location.
- 4. Never attempt to open the battery for any reason. If the plastic housing of the battery breaks or cracks, immediately discontinue use and do not recharge. If the battery appears to be dusty or dirty, wipe it off with a soft cloth.
- 5. Use only the included battery.
- 6. Do not attempt to disassemble, remodel or destroy the battery, as it may cause battery leakage, fire, or bursting; and could also create sulfuric acid spills from the battery resulting in possible burns to person and damage to the immediate environment.
- Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets or keys. The battery or conductor may overheat and cause burns.
- 8. Charge battery using the specified charger and under the charging conditions as specified. Charging the battery under any other conditions may cause the battery to overheat, emit hydrogen gas, leak, ignite or burst.
- 9. When this product is not used for 30 days or more, remove the battery from the fountain, charge it fully and store in a place where humidity is low. Do not store the battery under direct sunlight or in high temperatures. Unsatisfactory storage conditions may cause deterioration in battery performance, and may shorten the service life.
- 10. When charging the battery always do so in a well ventilated area and where you can observe the charging process.
- 11. Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center.
- 12. Battery life expectancy is approximately 2 years.
- 13. Battery Type is: Lithium, 7.4V, 18650, 4000mAh.
- 14. DO NOT CHARGE ON COUNTER TOPS, CARPETS OR OTHER FINISHED SURFACES. IT IS RECOMMENDED THAT THE BATTERY BE PLACED ON A CONCRETE OR SAFE SURFACE WHILE CHARGING.



Santee, California 92071 World Wide Patents Pending

Email: customercare@berninifountains.com

On the web: www.berninifountains.com Facebook & Pinterest: Bernini Fountain Company

Instagram:@berninifountains Twitter: @yrdllc

© Yeiser Research & Development, LLC; 2021. All rights reserved.