


***PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE ATTEMPTING TO ASSEMBLE YOUR NEW FOUNTAIN**

OWNERS MANUAL

CONTENTS:



Diagram 1a:

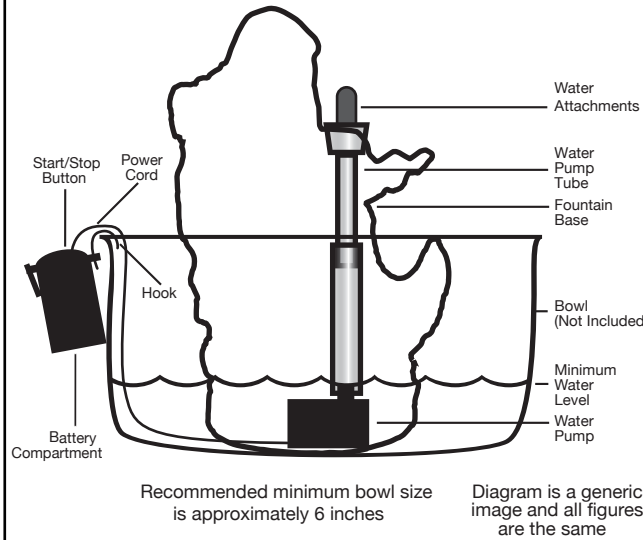

STEP







1. Lift Battery Compartment pushing up on battery compartment clip. (Figure 1a)
2. Release clip to reveal battery compartment and pull out battery holder. (Figure 1b)
3. Insert 4 1.5v AA Cell Batteries (not included) Insert 2 with the (+) side facing up in the Battery Compartment and 2 AA Batteries with the (-) facing up in the Battery Compartment (Figure 2a and 2b)
4. To close Battery Compartment reinsert Battery Holder, and clip Compartment back by lifting clip and snapping clip back into place. (Figure 3a)

CHANGING BATTERIES:

1. Lift battery and pump away from water
2. Ensure Battery Compartment and Water Pump are completely dry before opening Battery Compartment. It is important that no water enters the Battery Compartment. Properly shutdown the pump by pressing the main button located on top of the Battery Compartment.
3. See Installing Batteries Section above on how to reinstall batteries and reassemble.

STEP 2

Assembly

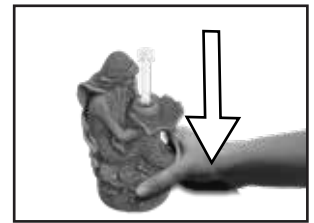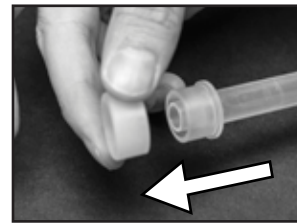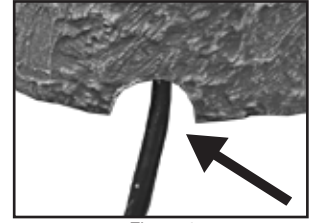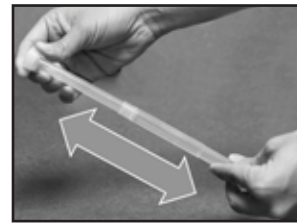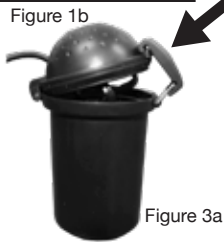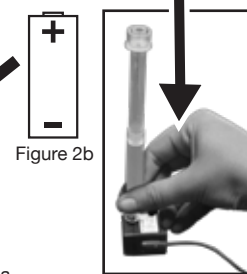

Need Help?
Call us for assistance at:
+1 (619) 449-2392
or you can email us at:
customercare@berninifountains.com
For video tutorials visit:
berninifountains.com/support
Our Customer Care Department is available:
Monday - Friday 8:30am to 4:00pm PST
11:30am - 7:00pm EST

1. Take the Battery Compartment and Water Pump, connect the Water Pump into the Clear Extension tube. (Figure 4) Before Installing the Extension tube, slide the two ends of the Extension tube apart to about 9 inches (22.8cm) (Figure 5)
2. Remove Silicone Cap from the top of the Extension Tube. (Figure 7a)
3. Insert your Mini Figure Fountain over the top of the Extension Tube. (Figure 7b)
4. Place fountain on a level surface then place silicone cap onto the extension tube, press down until it is level. (Figure 7c)
5. Press the extension tube down until it is level with the opening of the oyster shell. (Figure 7d)

Operation

STEP 3

To set the timer with no daily repeat for 1 hour, short press the button located on the battery compartment. To set the timer for up to 2 hours, short press the button twice. (Figure 8a)




To set the daily timer function, hold down the button until you see the indicator light blink. (Indicator light will blink until pump has stopped.) Within 3 seconds short press the button to set for 1 hour. For 2 hours short press the button two times. (Figure 8a)

To shutdown press button until the pump is turned off. To change any function shutdown pump first. (Figure 8a)

DANCING WATER ATTACHMENT (OPTIONAL): When Fountain is not running attach the Dancing Water Attachment the outlet in the middle of the fountain (Figure 8b, 8c and 8d). To prevent overspray, use a larger bowl.

Hook and Indent:

Located at the bottom of your Mini Figure Fountain is a notch for your water pump cable, ensure cord is laying in the notch to prevent mini figure is not tilted. (Figure 6) Accessory Hook is used as desired to hang Battery Compartment.

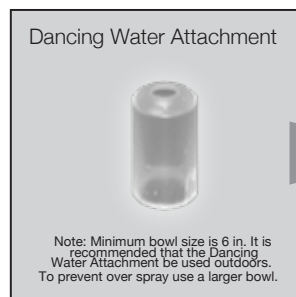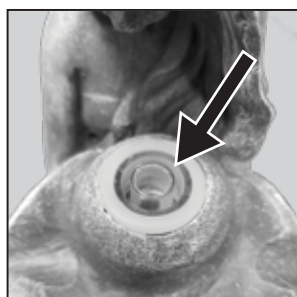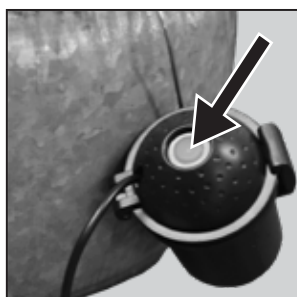

STEP 4 Troubleshooting

PRIMING THE WATER PUMP

If you find the Water Pump is running, but water is not flowing from your Fountain, you can try priming the Water Pump:
Turn off Fountain, grab both sides of the Fountain and quickly shake your Fountain for ten seconds. This is to dislodge any air bubbles that may be caught in your Water Pump. Press the button to turn your Fountain on. Water should be flowing from the top of your Fountain. If water is not flowing, press and hold button for over 2 seconds again to turn your Fountain off, and repeat the step above.

WATER PUMP CONNECTION

If your Fountain Water Pump becomes disconnected from the Water Tube inside of the Fountain or if the Water Tube gets disconnected from the Battery Compartment, go to the Assembly Section to reconnect the Water Pump.

Troubleshooting Guide

PROBLEM	SOLUTION
Water Not Flowing	Indicator light not turning on: Check batteries are installed correctly: See Installing Batteries Section.
	Indicator light not turning on: Check that batteries are new and good condition: See Installing Batteries Section.
	Pump is on but no water flow: Check water level.
	Pump is on but no water flow: Check pump is free of debris, kinks or obstructions. See Care And Maintenance Section.
	Pump is on but no water flow: Check tube is connected properly. See Assembly Section.
Low Water Flow	Indicator light on: Check that batteries are new and good condition: See Installing Batteries Section.
	Pump is on but low water flow: Check pump is free of debris, kinks or obstructions. See Care And Maintenance Section.
	Pump is on but low water flow: Check water level. Air in pump: See Priming The Water Pump Section.
Loud Sound	Loud sound and weak flow: Air in pump: See Priming The Water Pump Section.
	Loud sound and weak flow: Check pump is free of debris, kinks or obstructions. See Care And Maintenance Section.
Suddenly Stops	Pump suddenly stops: Check pump is free of debris, kinks or obstructions. See Care And Maintenance Section.

STEP 5 Care and Maintenance

CLEANING YOUR FOUNTAIN

In order to keep your Fountain in tip-top shape and for a prolonged life, it is best if your Fountain and the bowl or water container that the Fountain is placed in are cleaned periodically. To clean your fountain, drain of all water and disassemble. Use a mild soap and a soft cloth to clean the parts of your Fountain.

COLD STORAGE

Turn power off, remove from container, clean and dry the Fountain of all water. Remove the batteries for long term storage and bring it indoors. (Now is a great time to clean the pump to remove any debris that may have accumulated throughout the year).

CLEANING THE WATER PUMP'S PARTS

The impeller inside of the Water Pump is what pushes water up through your Fountain, allowing you to enjoy the soothing sounds and wonderful sights of your Fountain. After long periods of usage, this part will need to be cleaned to make sure your Fountain runs optimally.


Step 1: Remove the front panel of the Water Pump by grabbing the sides of the front panel and pulling it off the unit.

Step 2: Remove the impeller chamber cover. This is tightly fitted but will come off.

Step 3: Remove the impeller from its chamber.

Step 4: Rinse the impeller until all debris has been removed.

Step 5: Re assemble in reverse order.

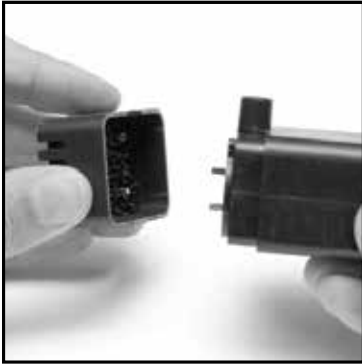

Step 1



Step 2



Step 3



Step 4

IMPORTANT BATTERY SAFETY INSTRUCTIONS:

WARNING: When using electric devices, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

- WARNING:** 1. Do not incinerate the battery even if it is severely damaged or is completely worn out. The battery can explode in a fire. Check with municipal codes in your area for possible special disposal instructions.
- 2. If liquid leaks from the battery cell, discontinue use immediately and dispose of properly.
- 3. Use only 4-1.5V AA Cell Batteries.
- 4. Do not attempt to disassemble, remodel or destroy the batteries, as it may cause battery leakage, fire, or bursting; and could result in possible burns to person and damage to the immediate environment.
- 5. Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center.
- 6. Do Not Mix Old And New Batteries.
- 7. Do Not Mix Alkaline, Standard (Carbon - Zinc), Or Rechargeable (Nickel - Cadmium) Batteries.

LIMITED ONE YEAR WARRANTY

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This product has a one year limited warranty on all materials and workmanship. Bernini® warrants the original purchaser of this product that the product will be free from manufacturing defects in workmanship and material for a period of one (1) year from the date of original purchase. If within one (1) year this product fails due to defect in material or workmanship, Bernini® will repair, replace or supply any defective part at their discretion. The purchaser must contact Bernini® and provide a description of the defective part, including digital pictures if requested, with this original purchase documentation as validation of warranty coverage. This warranty does not cover or apply to: (a) damage to the product due to misuse, mishandling, and abuse, (b) products not used in accordance with instructions, (c) product not assembled or installed according to instructions, and (d) normal wear and tear. Call us for assistance at +1 (619) 449-2392 or you can email or mail us at: 9545 Pathway Street, Santee, CA 92071, customercare@berninifountains.com, Our Customer Care Department is available: Monday - Friday 8:30am to 4:00pm PST / 11:30am - 7:00pm EST

Please read first before returning:

Please call us for assistance at 1-619-449-2392 or email us at customercare@berninifountains.com. Our Customer Care Department is available: Monday - Friday 8:30am to 4:00pm PST, 11:30am to 7:00pm EST. If you have any questions regarding assembly, parts, or operation, please visit our website at www.berninifountains.com. You will find instructional videos on how to assemble and operate your fountain, and keeps you up to date on our newest products. You can also email us with any questions you have. This product comes with a one year limited warranty against materials and workmanship.