
Fountain Tower

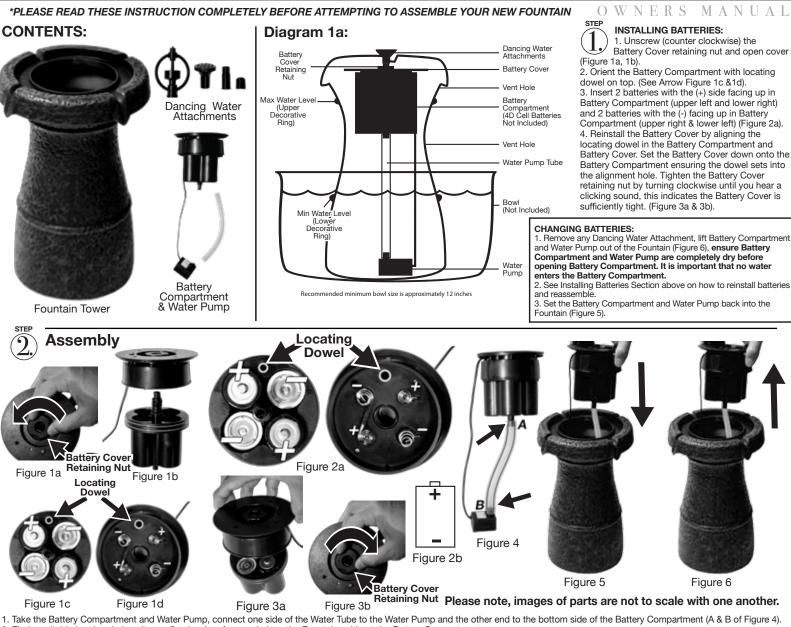

2. Find a suitable bowl and place it on a flat, level surface and place the Fountain, without the Battery Compartment and Water Pump, into the center of the bowl.

Lower the Battery Compartment and Water Pump into the Fountain and make sure it sits level on Fountain (Figure 5).
Fill bowl with water, water level should be between the upper and lower Decorative Rings on the outside of the Fountain, this will ensure water covers the Water Pump (Diagram 1a).

STEP OPERATING YOUR FOUNTAIN TOWER:

) Turn Fountain on and set timer: When the Fountain is off, set the run time from 1 hour to 4 hours by slowly pressing the button 1 to 4 times

(Figure 7a and 7b). 3 seconds after pressing the button, the LED light will repeatedly flash the number of times the button was pressed (Figure 7a).

This indicates the number of hours the Fountain will run every day. The Fountain will turn on at the same time, for the selected number of hours, daily thereafter.


Stop Fountain for one day: To stop the Fountain manually for one day, hold the button for over 2 seconds (Figure 7a and 7b). The Fountain will turn off for one day, but will still turn on at the same time, for the same number of hours selected, daily thereafter.

Reset/Change the timer: To change the run time, stop the Fountain if its running by holding the button for over 2 seconds (Figure 7a and 7b). The Fountain will stop. Once the Fountain is off, you can press the button again to set the duration (see Step 1).

Fully shut off and clear timer: To fully turn off the Fountain so that it will not turn on automatically the next day, press hold the button for over 2 seconds to turn it off (Figure 7a and 7b). When the Fountain is NOT operating, simply press hold the button again for over 2 seconds, the LED will come on for 3 seconds steady to confirm daily program is off.

DANCING WATER ATTACHMENTS: (OPTIONAL):

When Fountain is not running, select one of the Dancing Water Attachments and attach to the outlet in the middle of the Fountain Tower (Figure 8a, 8b and 8c).

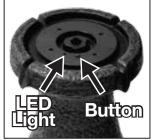


.)



Dancing Water Attachments



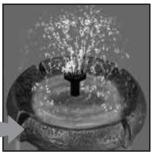

Need Help?

Call us for assistance at: +1 (619) 449-2392

or you can email us at: customercare@berninifountains.com Our Customer Care Department is available: Monday - Friday 8:30am to 4:00pm PST 11:30am - 7:00pm EST

Figure 7a

Figure 7b

Figure 8a

Figure 8b

Figure 8c

<u>e r n</u> i n i

Fountain Tower™ OWNERS MANUAL

Troubleshooting Guide

Pump is on but no water flow: Check tube is connected properly. See Assembly Section.

Loud sound and weak flow: Air in pump: See Priming The Water Pump Section.

Indicator light not turning on: Check batteries are installed correctly: See Installing Batteries Section.

Indicator light on: Check that batteries are new and good condition: See Installing Batteries Section.

Pump is on but low water flow: Check water level. Air in pump: See Priming The Water Pump Section.

Indicator light not turning on: Check that batteries are new and good condition: See Installing Batteries Section.

Pump is on but no water flow: Check pump is free of debris, kinks or obstructions. See Care And Maintenance Section.

Pump is on but low water flow: Check pump is free of debris, kinks or obstructions. See Care And Maintenance Section.

Loud sound and weak flow: Check pump is free of debris, kinks or obstructions. See Care And Maintenance Section.

Pump suddenly stops: Check pump is free of debris, kinks or obstructions. See Care And Maintenance Section.

Troubleshooting 4

PRIMING THE WATER PUMP

If you find the Water Pump is running, but water is not flowing from your Fountain, you can try priming the Water Pump:

Turn off Fountain, grab both sides of the Fountain and quickly shake your Fountain for ten seconds. This is to dislodge any air bubbles that may be caught in your Water Pump. Press the button to turn your Fountain on. Water should be flowing from the top of your Fountain. If water is not flowing, press and hold button for over 2 seconds again to turn your Fountain off, and repeat the step above.

WATER PUMP CONNECTION

STEP

If your Fountain Water Pump becomes disconnected from the Water Tube inside of the Fountain or if the Water Tube gets disconnected from the Battery Compartment, go to the Assembly Section to reconnect the Water Pump.

5 **Care and Maintenance**

CLEANING YOUR FOUNTAIN

In order to keep your Fountain in tip-top shape and for a prolonged life, it is best if your Fountain and the bowl or water container that the Fountain is placed in are cleaned periodically. To clean your fountain, drain of all water and disassemble. Use a mild soap and a soft cloth to clean the parts of your Fountain. COLD STORAGE

SOLUTION

Pump is on but no water flow: Check water level.

Turn power off, remove from container, clean and dry the Fountain of all water. Remove the batteries for long term storage and bring it indoors. (Now is a great time to clean the pump to remove any debris that may have accumulated throughout the year).

CLEANING THE WATER PUMP'S PARTS

The impeller inside of the Water Pump is what pushes water up through your Fountain, allowing you to enjoy the soothing sounds and wonderful sights of your Fountain. After long periods of usage, this part will need to be cleaned to make sure your Fountain runs optimally.

Step 1: Remove the impeller chamber cover. This is tightly fitted but will come off. Step 3: Remove the impeller from its chamber.

PROBLEM

Water Not Flowing


Low Water Flow

Loud Sound

Suddenly Stops

Step 4: Rinse the impeller until all debris has been removed.

Step 5: Re assemble in reverse order

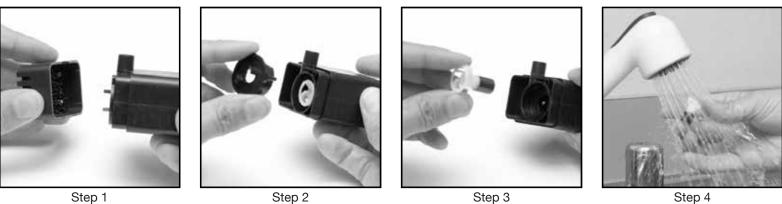

Step 1

Step 3

IMPORTANT BATTERY SAFETY INSTRUCTIONS:

PROPOSITION 65 WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

WARNING: When using electric devices, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

WARNING: 1. Do not incinerate the battery even if it is severely damaged or is completely worn out. The battery can explode in a fire. Check with municipal codes in your area for possible special disposal instructions

2. If liquid leaks from the battery cell, discontinue use immediately and dispose of properly.

3. Use only 4-1.5V D Cell Batteries.

4. Do not attempt to disassemble, remodel or destroy the batteries, as it may cause battery leakage, fire, or bursting; and could also create sulfuric acid spills from the battery resulting in possible burns to person and damage to the immediate environment.

5. Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center.

LIMITED ONE YEAR WARRANTY

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This product has a one year limited warranty on all materials and workmanship. Bernini® warrants the original purchaser of this product that the product will be free from manufacturing defects in workmanship and material for a period of one (1) year from the date of original purchase. If within one (1) year this product fails due to defect in material or workmanship, Bernini® will repair, replace or supply any defective part at their option. The purchaser must contact Bernini® and provide a description of the defective part, including digital pictures if requested, with this original purchase documentation as validation of warranty coverage. This warranty does not cover or apply to: (a) damage to the product due to misuse, mishandling, and abuse, (b) products not used in accordance with instructions, (c) product not assembled or installed according to instructions, and (d) normal wear and tear. Call us for assistance at +1 (619) 449-2392 or you can email or mail us at: 9545 Pathway Street, Santee, CA 92071, customercare@berninifountains.com, Our Customer Care Department is available: Monday - Friday 8:30am to 4:00pm PST / 11:30am - 7:00pm EST

Please read first before returning:

Please call us for assistance at 1-619-449-2392 or email us at customercare@berninifountains.com. Our Customer Care Department is available: Monday - Friday 8:30am to 4:00pm PST, 11:30am to 7:00pm EST. If you have any questions regarding assembly, parts, or operation, please visit our website at www.berninifountains.com. You will find instructional videos on how to assemble and operate your fountain, and keeps you up to date on our newest products. You can also email us with any questions you have. This product comes with a one year limited warranty against materials and workmanship.

> Santee. California 92071 | World Wide Patents Pending | Email: customercare@berninifountains.com | On the web: www.berninifountains.com Facebook & Pinterest: Bernini Fountain Company | Instagram: @berninifountains Twitter: @yrdllc

© Yeiser Research & Development, LLC: 2018, All rights reserved.

Made in China | Designed in the USA