


Rechargeable Battery

Rechargeable Garden Fountain

Instructions

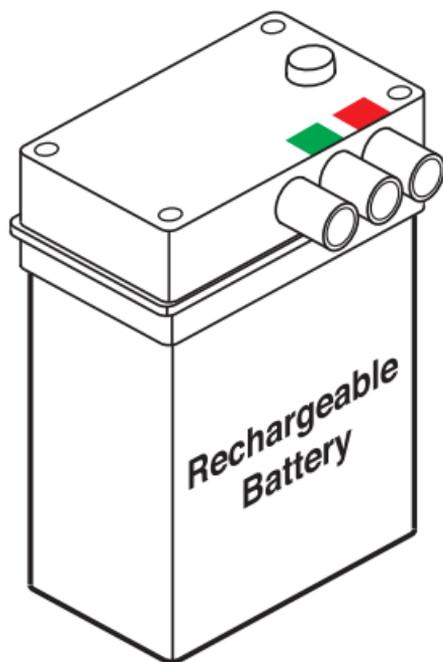

IMPORTANT BATTERY SAFETY INSTRUCTIONS, READ FIRST

DANGER: Do not store battery in an airtight container, as it may cause an explosion.

WARNING: When using electric devices, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following.

PROPOSITION 65 WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm.

Wash hands after handling.

WARNING:

- 1.** Do not incinerate the battery even if it is severely damaged or is completely worn out. The battery can explode in a fire. Check with local codes for possible special disposal instructions.
- 2.** If leakage of liquid from the battery cell occurs, discontinue use immediately and dispose of properly.
- 3.** Do not charge battery in rain or in wet location.
- 4.** Never attempt to open the battery for any reason. If the plastic housing of the battery breaks or cracks, immediately discontinue use and do not recharge. If the battery appears to be dusty or dirty, wipe it off with a soft cloth.
- 5.** Use only an approved Auto Rewind Hose Reel battery. Contact our customer service line for a replacement.
- 6.** Do not attempt to disassemble, remodel or destroy the battery, as it may cause battery leakage, fire, or bursting; and could also create sulfuric acid spills from the battery resulting in possible burns to personnel and damage to the immediate environment.
- 7.** Exercise care in handling batteries in order not to short the


battery with conducting materials such as rings, bracelets or keys. The battery or conductor may overheat and cause burns.

8. The battery contains diluted sulfuric acid, a very toxic substance. If the battery leaks and the liquid inside spills on the skin or clothing, immediately wash it off with plenty of clean water. If the liquid splashes into eyes, immediately flush the eyes with plenty of clean water and consult a doctor. Sulfuric acid in the eyes may cause loss of eyesight and acid on the skin will cause burns.
9. Charge battery using the specified charger and under the charging conditions as specified. Charging the battery under any other conditions may cause the battery to overheat, emit hydrogen gas, leak, ignite, or burst.
10. When this product is not used for 30 days or more, remove the battery from the fountain, charge it fully and store in a place where humidity is low. Do not store the battery under direct sunlight or in high temperatures. Unsatisfactory storage conditions may cause deterioration in battery performance, shorten the service life.
11. When charging battery always do so in a well ventilated area and where you can observe the charging process.
12. Do not charge on counter tops, carpets or other finished surfaces. It is recommended that the battery be placed on a concrete surface while charging.



Do not turn on the water pump before filling up your fountain with water!

Recharging your fountain's battery

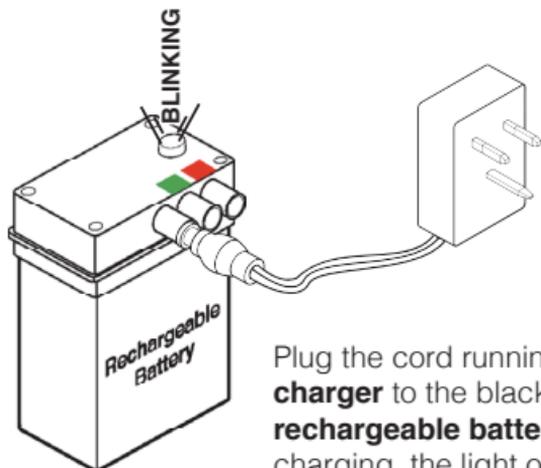


Plug the **battery charger** into an electrical wall outlet.

Plug the cord running from the **battery charger** to the black labeled receptor on the **rechargeable battery**. While the battery is charging, the light on the top of the battery will blink.



Charge battery for 12-14 hours or until the red light on the top of the battery stops blinking.

When the battery is fully charged, the light on the top of the battery will stop blinking and the light will be solid. At this point, you can remove the battery from the charger and plug the battery into your fountain.

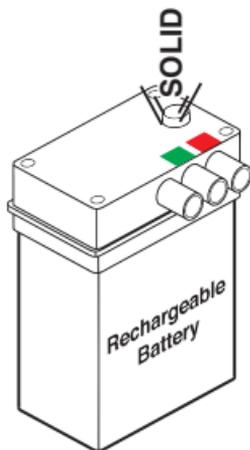

Manufactured by



Distributed by:

QVC London Building 8 Chiswick Park
566 Chiswick High Road LONDON W45XU