





## Faceplate Replacement Instructions for DAC-1



The components inside the DAC1 are static sensitive. Do not touch any portion of the circuit board when replacing the faceplate.



The volume control knob must be removed before loosening any fasteners! The volume control knob is a press-fit knob. It will take a fair amount of force to pull the knob off of the shaft. Pull straight off, do not use tools. Do not attempt to remove or replace the knob unless all faceplate fasteners are tight.

1. Pull the volume control straight off without using tools.
2. Remove the nut and washer from the shaft of the volume control.
3.  Make sure nut and washer are removed before proceeding. 
4. Remove the 4 socket-head bolts from the corners of the faceplate.
5. Remove and replace the faceplate.
6.  Install the 4 socket-head bolts before proceeding. 
7. Install the washer and nut on the shaft of the volume control.
8. Place the volume control shaft in the center of its rotation.
9. Press the knob onto the shaft while keeping the red dot in a 12 o'clock position.
10. Check to rotation of the volume control knob. Remove and replace if alignment is incorrect.